


3+ YEARS

# LASER BATTLE SET MANUAL


## BUTTON FUNCTIONS

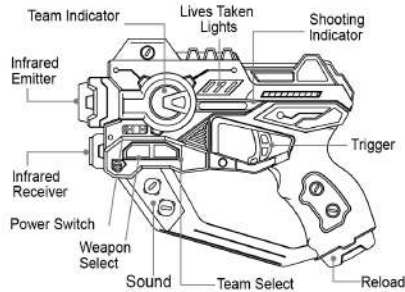

## BATTERY INSTALLATION

1. Unscrew to open battery cover, insert 3 x 1.5V AA batteries in each laser battle set.
2. Replace battery cover.

Attention: remove batteries after you have finished using your product.

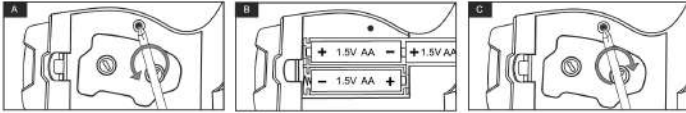

6 X AA

EACH BLASTER REQUIRES 3 X 1.5V AA BATTERIES (NOT INCLUDED).  
TOTALLY REQUIRES 6 X 1.5V AA BATTERIES (NOT INCLUDED).

## OPERATION INSTRUCTIONS

1. When you turn on the switch of the blaster, the team indicator will flash colourfully and lives taken lights will flash intermittently. The team indicator will then stop flashing and turn blue. Default setting for the blaster is blue team.
2. How to choose your blaster type: Press the weapon select button to choose your blaster type. Default setting for the blaster is single shot mode.

### Blaster type:

- \* **Single shot** - with 12 bullets, 1 point of damage if hit.
- \* **Shot gun** - with 6 bullets, 2 points of damage if hit.
- \* **Machine gun** - with 6 bullets, 2 points of damage if hit.
- \* **Rocket gun** - with 1 missile, 3 points of damage if hit.
- \* **Note:** 3 lives total, 1 life can take 3 points of damage.

3. **Formation:** Press team select button on the blaster to organise a team. Different colours of team indicators represent four different teams, namely blue, red, green, and white. Please note, the same team will not be able to hit itself.
4. **Shooting:** Take the blaster and load the bullets, target your opponents and pull the trigger. The indicator barrel will flash quickly like a ray shooting out of the barrel with vibration and sound at the same time. You will feel a shake and hear a sound if you are hit and the indicator will flash quickly, reducing the corresponding life-value. You are not allowed to shoot if your life-value is completely used up; and the formation indicator will flash quickly.
5. When you finish a game, please turn off the switch and then turn it on again to restart the new game.

**Please note:** Best shooting distance between blasters is up to 40 metres.

## POTENTIAL PROBLEMS AND SOLUTIONS

Problems	Possible reasons	Solutions
Not functioning	the battery isn't installed correctly or it was damaged	reinstall the battery correctly or change the battery
	the switch is off	make sure the switch is on
Failure to hit target	shooting with teammates	try shooting at other opponents
	bullets are not added after shifting blaster type or they have been used up	press clip button to reload
	failure to aim at opponents or it's beyond the shooting distance	aim at targets, shorten shooting distance
Unable to use normally	obstacles existing between two shooters	avoid obstacles
	low battery	replace with new batteries
	using under glare	transfer to a place with no glare
	interference from other infrared devices (like TV remote control).	do not use other infrared devices when operating

### NOTICE:

1. If there is interference when operating, this may be due to a strong current nearby. You can try resetting the product. Please replace the battery when it is low.
2. Infrared beam is used on the laser battle set. This is not a real laser.

K: 43-489-329 | T: 70-384-413

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND-) DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

≡ ADULT SUPERVISION REQUIRED.  
≡ PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.  
≡ PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.