



3+Years

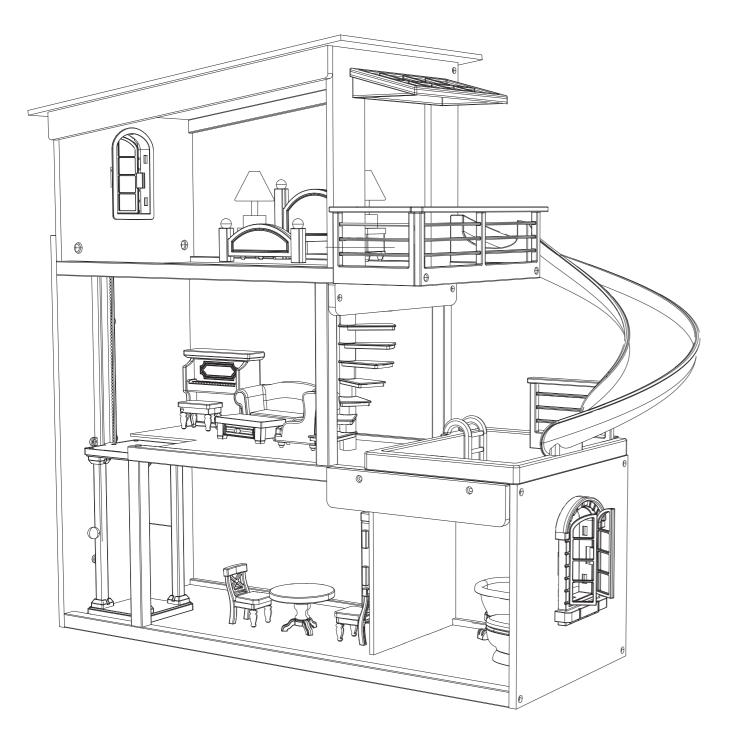

- 1. Make sure the piano is switched off.
- 2. Remove the battery compartment cover underneath the device with a cross head screw-driver. (not provided)
- 3. Insert 2 x 1.5V AAA size batteries with correct polarity.
- 4. Replace the battery compartment cover and tighten the screws.

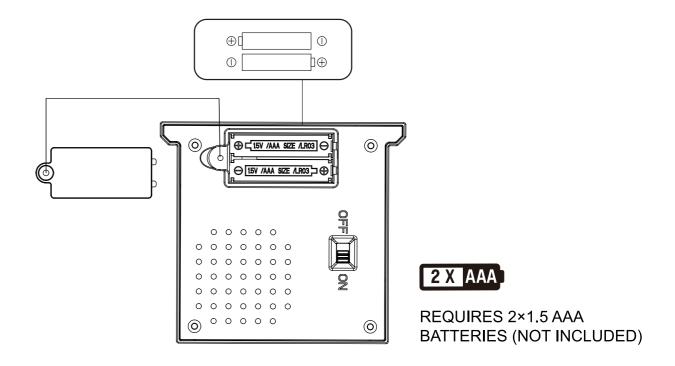

WARNING:

BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES SHOULD BE CHARGED BY AN ADULT. RECHAGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING:

DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.

CAUTION: ADULT ASSEMBLY AND SUPERVISION REQURIED.

WARNING: UNASSEMBLED PARTS CONTAIN SCREWS WITH FUNCTIONAL SHARP POINTS. PLEASE KEEP UNASSEMBLED PARTS AWAY FROM SMALL CHILDREN.

CAUTION: PLEASE CHECK CONDITION OF ITEM REGULARLY. AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY. STOP USING THIS PRODUCT IF THERE IS ANY LOOSE OR MISSING FASTENERS, JOINTS OR BROKEN PARTS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD. THIS IS A TOY, INTENDED FOR ROLE PLAY ONLY.

MADE IN CHINA

Read and follow instruction carefully and keep for future reference.


Tool required: Cross screwdriver.





(not included)


Parts list: 2X1 7X1 11X1 6X1 10X1 8X1 17X1 13X1 23X1 20X1 21X1 22X1 14X1 18X1 19X1 15X1 25X1 16X1 24X1 26X1 27X9 28X1 29X1 30X1 31X2 33X1 34X1 35X1 36X2 37X1 38X2 39X1 40X1 41X1 42X1 43X1 44X1 Ax5 **BX14** CX17 DX2 EX2 Fx2


2

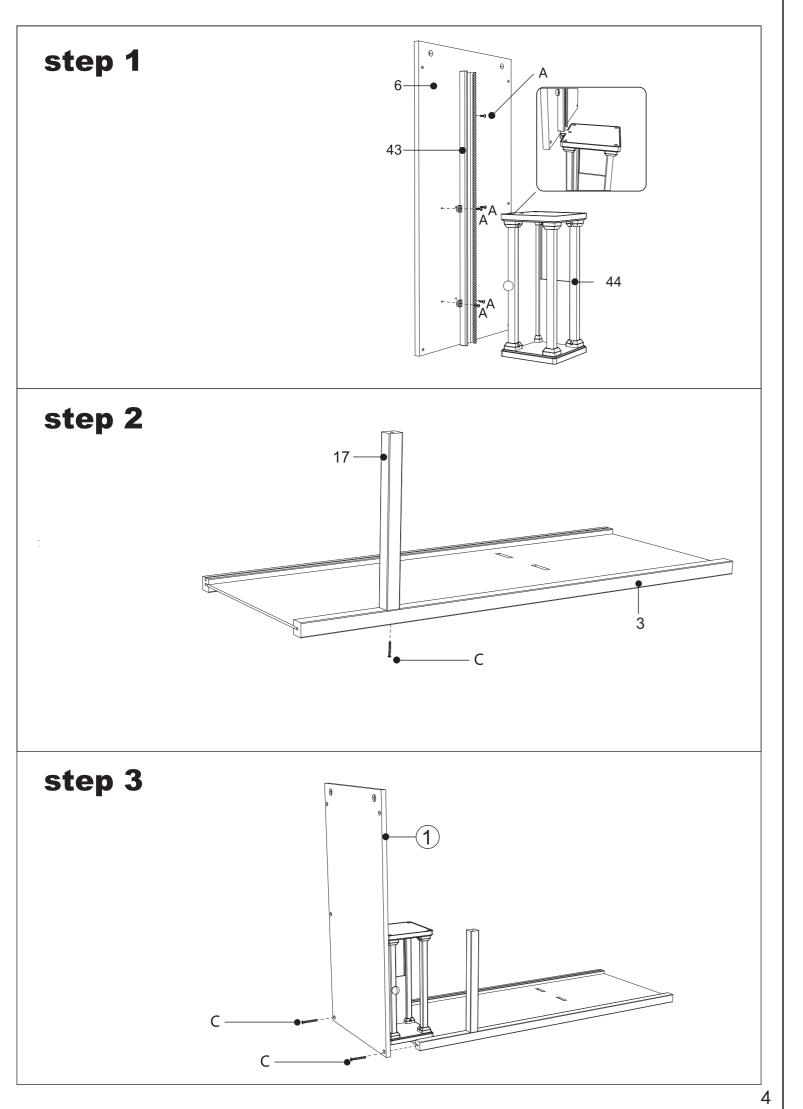


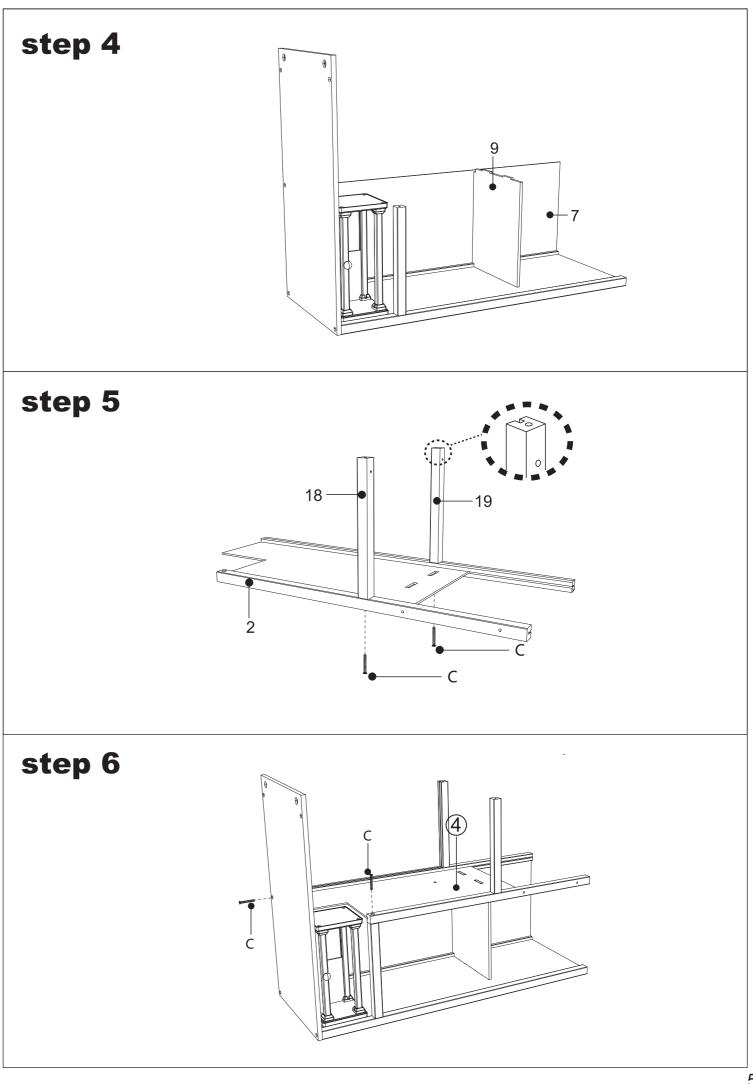

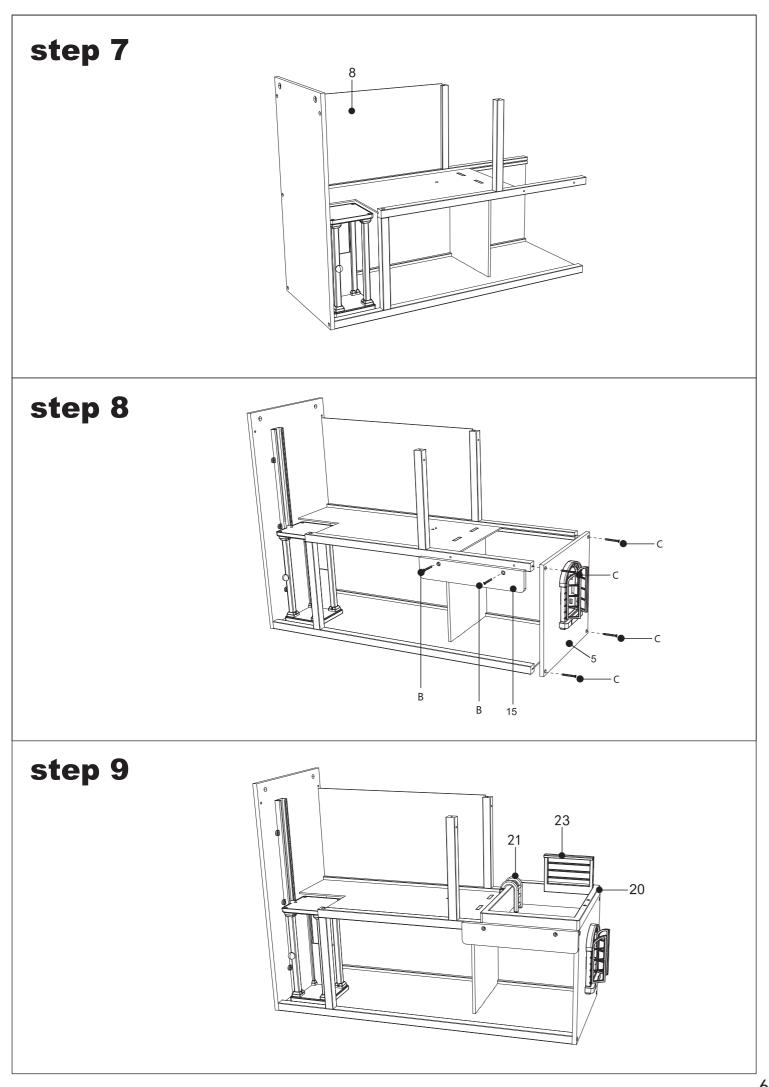


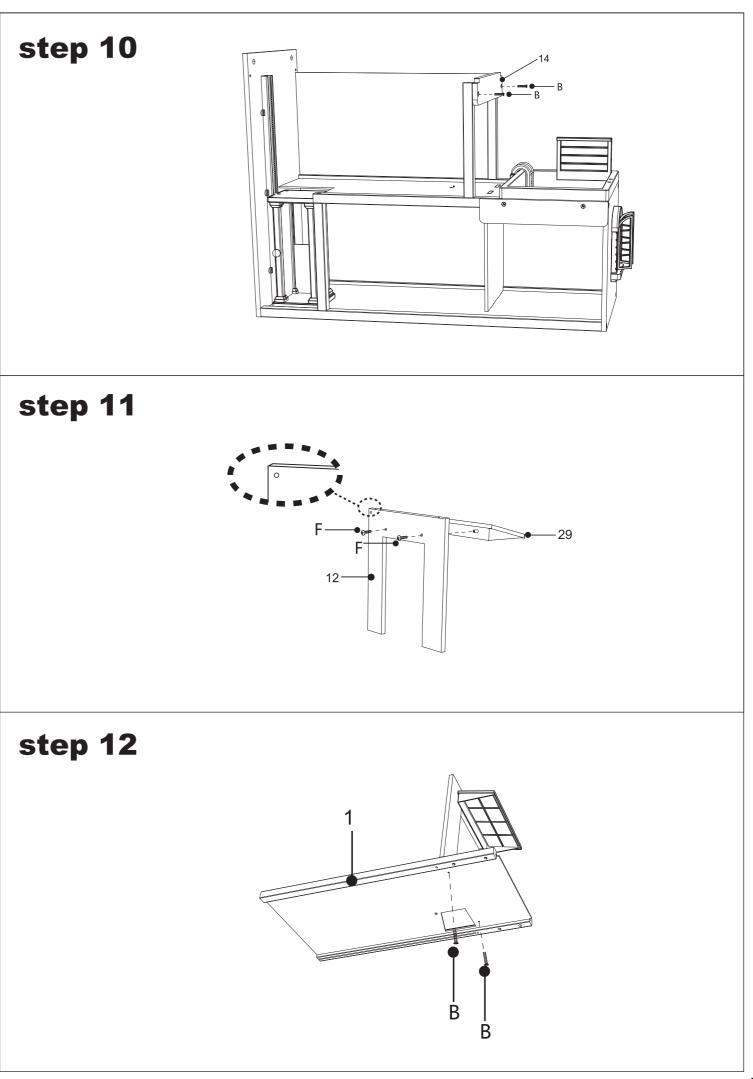

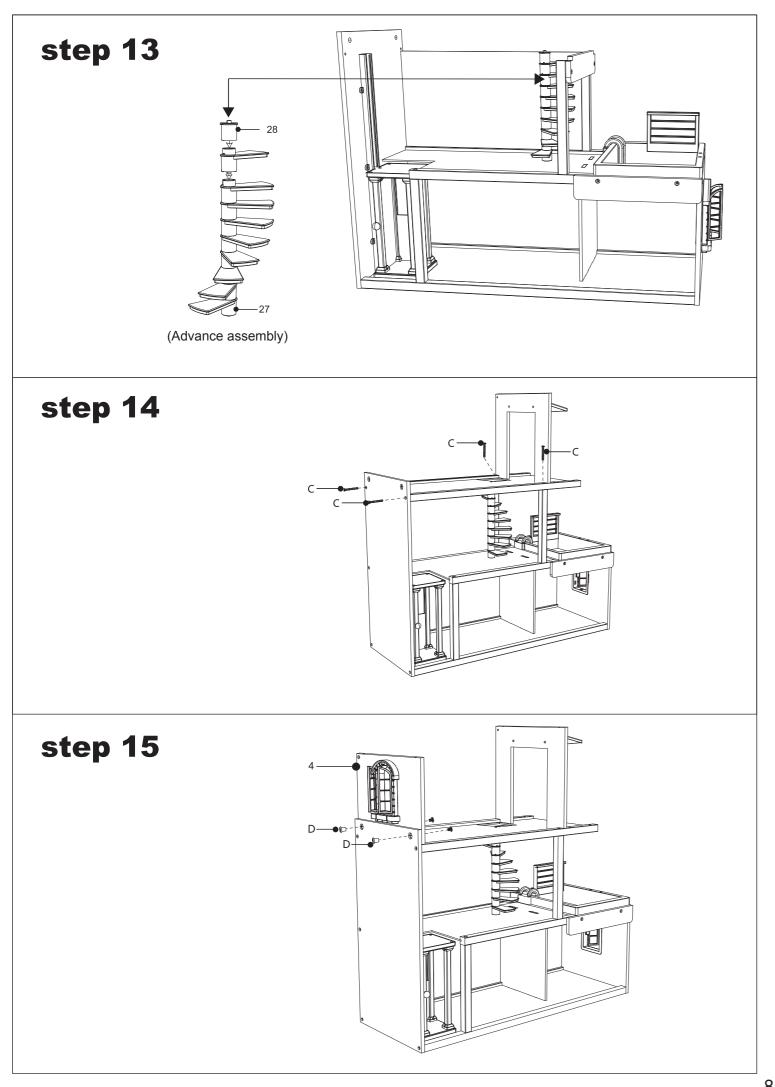

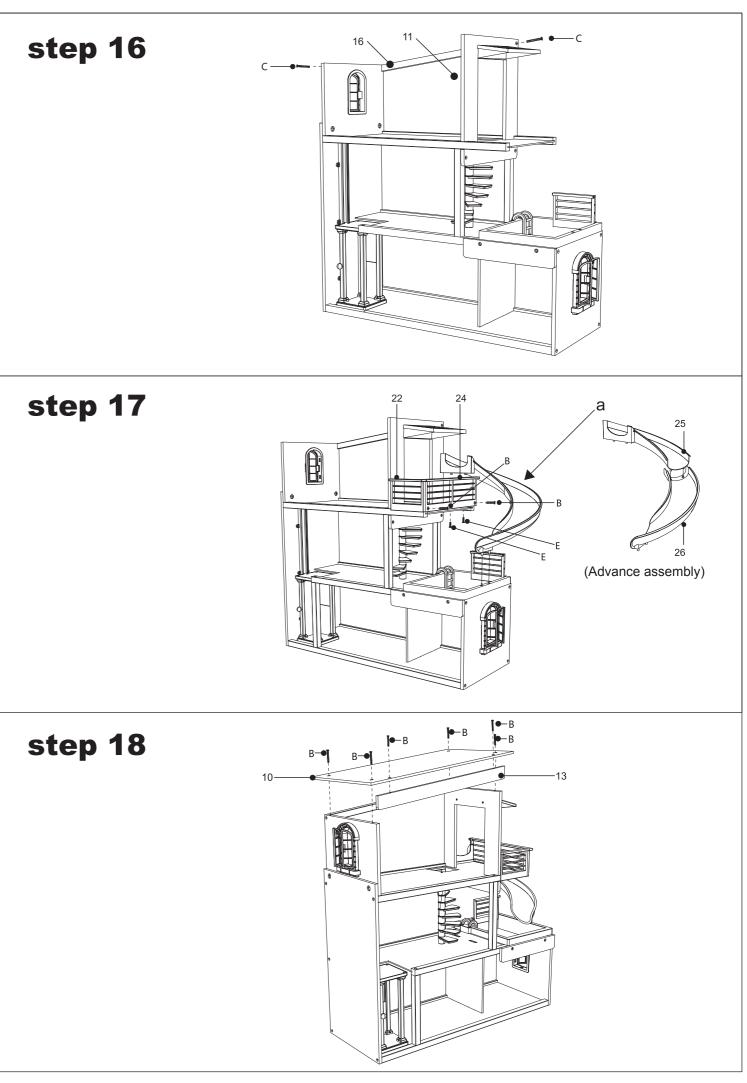

step 19

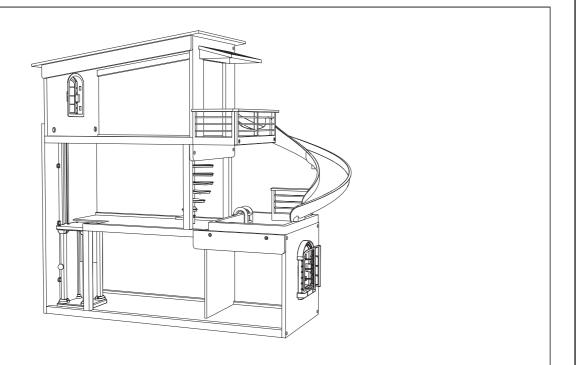

step 20

