

anko

Instruction manual

K: 43499786 | T: 70363722

Model: JLR-79951

Bluetooth Stylus Pen



Please read all the information carefully before you use the product and keep the manual for future reference.

Safety Instructions

Please read the instruction manual before using this device and follow all the safety instruction to avoid damage caused by improper use.

- Keep equipment and accessories away from rain or moisture, or may result in fire or electric shock.
- Do not place equipment and accessories in areas that are too high or too low in temperature, otherwise it may cause equipment failure, fire or explosion.
- Do not disassemble or modify the device (including replacement of the built-in battery) and accessories without authorization.
- Do not allow children or pets to swallow the battery to avoid injury or explosion of the battery.
- Do not use harsh chemicals, cleaning agents, or strong detergents to clean the equipment or accessories. Please use a clean, dry soft cloth to wipe the device or its accessories.
- Using unapproved or incompatible power supplies, chargers, or power supplies may cause fire, explosion, or other hazards.
- If the device malfunction due to electrostatic discharge or a brief power surge, disconnect it from the iPad and then reconnect it.

Package Contents:

Smart stylus*1

Type-C Cable*1

Replaceable Pen tip*2


Product manual*1

Product Specifications

Physical Size:	166*9.0*8.5mm
Nib Size:	5mm
Battery type:	Li-Polymer battery
Battery Capacity:	130mAh
Input Rating:	DC5V=0.69A(Max)
Continuous operation time:	around 9 hours
Charging time:	15 minutes
Country of origin:	Made in China
Factory code:	F004226

*The actual operating time may vary depending on the usage scenarios and other factors.

Product Information

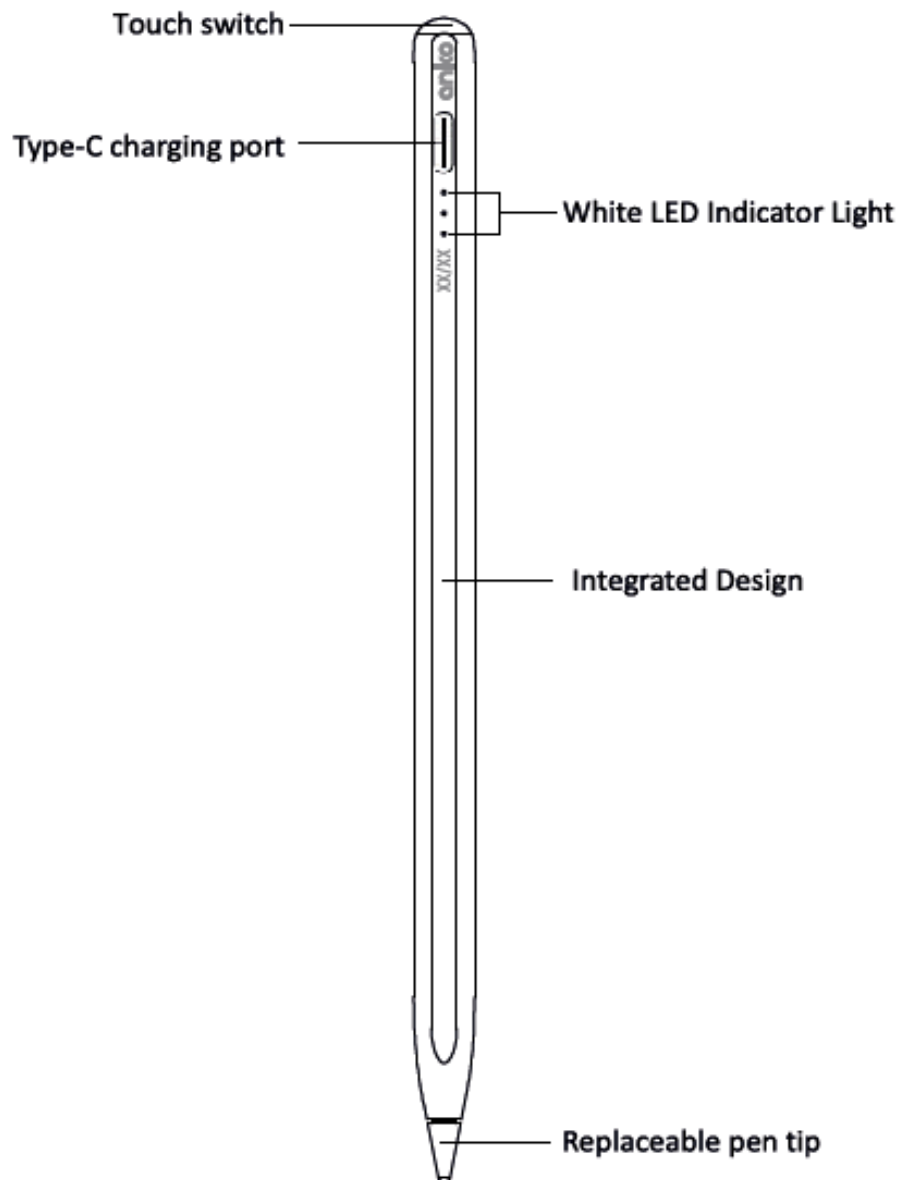


How to charge

- Inserted supplied USB charging cable into the Type-C Charging interface to start charging.
- 3 LED indicator lights will keep flashing during charging.
- 3 LED indicator lights will keep lighting after fully charged.
- If the battery is low, one light will flash.
- If the battery has totally run out, the product will not work at all.

How to use


- Tap the touch switch for around 2 seconds to turn on the stylus pen.
- Activate Bluetooth of iPad and search for device name “**Anko43499786**” then connect it in first time use.
- The stylus pen enter Bluetooth mode automatically after connecting.
- While connecting to Bluetooth, single tap to return to home page, and double tap to switch the function.
- Bluetooth connection is not essential for normal writing and drawing.
- Hold the stylus pen in comfortable position and make sure you can flexibly control the tip.
- Gently touch the screen with the stylus tip to control the application, icons and other elements on the iPad.
- If the application supports writing or drawing, you can use the stylus pen to write or draw.
- The stylus pen is tilt sensitivity which can change the thickness of lines by adjusting the angle of pen tip to create realistic shading, detailed drawings, and writing.
- The stylus pen is with palm rejection technology that can rest your hand on your screen in a naturally comfortable position as you write and draw just as you would with a real pen or pencil.
- When no need to use the pen, tap the touch switch for around 2 seconds to turn off.
- You could magnetically attach the pen to the side of the iPad for storage, or put it in another safe place.

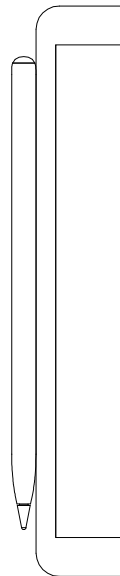

How to replace the pen tip

Please replace the pen tip when the metal parts of pen tip is exposed or writing function is affected.

1. Grab the stylus pen body in one hand.
2. Hold the tip of the stylus pen with another hand.
3. Turn the tip clockwise until the tip separates from the body of the pen.
4. Hold a supplied new tip and tighten counter-clockwise to the stylus pen.

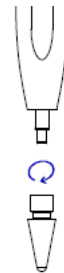

Compatible with

Supports iPad

iPad Pro 11 inch 2018 (1st generation)
iPad Pro 11 inch 2020 (2nd generation)
iPad Pro 11 inch 2021 (3rd generation)
iPad Pro 11 inch 2022 (4th generation)
iPad Pro 11 inch 2024 (M4)
iPad Pro 12.9 inch 2018 (3rd generation)
iPad Pro 12.9 inch 2020 (4th generation)
iPad Pro 12.9 inch 2021 (5th generation)
iPad Pro 12.9 inch 2022 (6th generation)
iPad Pro 13 inch 2024 (M4)

iPad Air 10.5 inch 2019 (3rd generation)
iPad Air 10.9 inch 2020 (4th generation)
iPad Air 10.9 inch 2022 (5th generation)
iPad Air 11 inch 2024 (M2)
iPad Air 13 inch 2024 (M2)

iPad mini 7.9 inch 2019 (5th generation)
iPad mini 8.3 inch 2021 (6th generation)

iPad 9.7 inch 2018 (6th generation)
iPad 10.2 inch 2019 (7th generation)
iPad 10.2 inch 2020 (8th generation)
iPad 10.2 inch 2021 (9th generation)
iPad 10.9 inch 2022 (10th generation)