


105x145MM 105g铜版纸四折页正反面四色印刷



anako
K: 43499823 | T: 70363753 (Model: JLR-79425)
Sunrise Speaker Alarm Clock
User Manual

PLEASE READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE.

Warnings:

- Do not disassemble or modify the product.
- Keep away from liquids. Do not use with wet hands.
- Keep away from flammable objects.
- Do not try to repair this product by yourself.

Product features:

- Bluetooth® speaker
- 7 colour LED light effects
- 7 alarm sounds
- touch button
- FM radio
- snooze function
- sunset simulation sleep light
- 12/24 hour format LED display
- supports TF card (32G max)

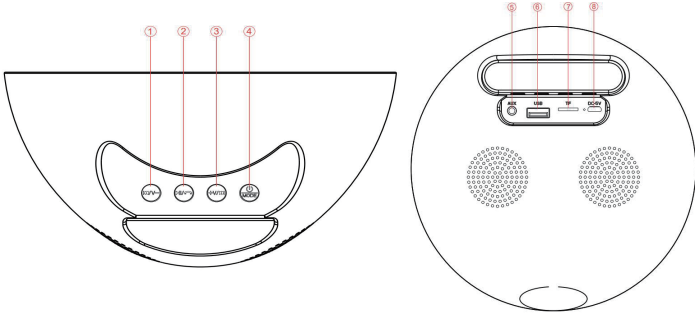 
Packing contents:

Speaker *1
Manual *1
50cm Micro USB charging cable*1
AUX cable*1

Product specifications:


Bluetooth Version: 5.3
Rechargeable Battery: 1200mAh, 3.7V
Working distance :10 M
Speaker: 2*3W



Product overview:







- Previous song / volume decrease
- play/pause
- Next song / volume increase
- Mode
- AUX
- USB
- TF
- Micro USB charging port

Functional description:




Power ON/OFF button  :

- Long press the button 3s for device power on/off;
- Short press this button  to toggle the modes in the following sequence: Natural sound music / Bluetooth / FM Radio / AUX IN / TF CARD.
- short press button  to switch different natural sound.

Bluetooth mode:


- Bluetooth connection: power on, short press this button  to choose the Bluetooth mode, open the mobile phone Bluetooth search device model is " anko43499823 ", click pair, and the speaker will have a prompt sound after successful connection.
- when you playing music, short press back button  to switch NEXT / PREVIOUS song.
- short press this button  to START/PAUSE play.
- Short press this button  to answer the phone call.

FM Radio mode:




- long press this button  to auto search and store FM radio stations.
- short press this button  to stop station auto-searching and return to the 1st radio station.
- short press this button  to next /previous channel


Note: The 3.5mm aux wire can enhance the FM effect.


AUX IN mode:

- use 3.5mm audio cable to connect your device to AUX connector on this unit control the music and volume on your device.
- short press this button  to START/PAUSE play.


Playing music through Micro SD card (TF Card) / USB:

- insert your Micro SD card to the card slot or USB disk to the USB port, the unit automatically switches to micro SD card mode and start playing music.
- short press button  to switch NEXT/PREVIOUS song.
- long press button  to increase/decrease Volume.
- short press this button  to START/PAUSE play.


When USB and TF card are inserted at the same time, short press this button  to switch them, "NS mode" → "BT mode" → "FM mode" → "TF mode(PLAY USB)" → "TF mode(PLAY TF)" .

 
Clock button  :


- long press this button to toggle 12 or 24 hour-format
- 1st short press this button to enter HOUR setting mode,
- 2nd short press this button to enter MINS setting mode.
- 3rd short press this button to complete clock setting.
- short pressing "+ / -" front button to change HOUR and MINUTE digits.

Alarm Clock buttons  :

- 1st short press to enter HOUR setting mode, then short press "+/-" button to change HOUR digits when digits flash.
- 2nd short press to enter MINUTE setting mode, then short press "+/-" button to change minute digits.

 
 
Alarm Clock 1 Button  :

 
- 3rd short press to complete HOUR and MINUTE settings, and then the display show natural sound choice, then short press "+/-" button to select natural source.
- 4th short press  to confirm the sound selection indicate that the Alarm clock 1 is active.

Alarm Clock 2 Button  :


- 3rd short press to complete HOUR and MINUTE settings, and then the display show FM Radio station choice, then short press "+/-" button to select FM radio station as alarm source.

Remark: you need store FM radio stations first.

 
- 4th Short press  to confirm the sound selection indicate that the Alarm clock 2 is active.
- Long press  button to cancel the alarm clock 1/ alarm clock 2.

Snooze button  :

- short press this button to enter snooze mode when alarm rings, the alarm rings again after 9 minutes with LED light.
- the unit enters snooze mode automatically if the alarm rings 3 mins without any operation, the cycle repeats three times at most.

Light button  :

- short press this button to enter light brightness setting mode, and short press "+/-" button to adjust the brightness.
- short press this button again to enter light color setting mode, short press "+/-" button to change color of light
- short press this button again to turn off light.
- long press this button can turn off light

Sleep mode button  :

- short press this button to enter sunset sleep light mode, with timer options of 30 mins / 60 mins /90 mins.
- the light is darkened as the set timer passed. When the set timer arrives, this light turns off and radio or music also turned off if radio or music is on.
- when powered off, clock can display 20 seconds by pressing any button on the front panel, and feature operation is not available.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us