Assembly Instructions

43500208 ADDISON HALL TABLE

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.


CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD: 15KG FOR TOP PANEL, 5KG FOR EACH DRAWER.


Hardware List A M6x35mm 28pcs CL 2pcs


@ <u>`</u>			
	Α	M6x35mm	28pcs
®	В	Ø15x9.5mm	28pcs
	С	Ø6x30mm	36pcs
	D	M4x35mm	14pcs
	Е		2pcs
•	F	M4x18mm	4pcs
	G	M7x50mm	4pcs
	Н	M4x55mm	2pcs
>	ı		1pc
•	J	M3x12mm	28pcs
0	K		2pcs
	L		2pcs
	М		4pcs


*****	CL	2pcs
	CR	2pcs
enet i me	DL	2pcs
sin , Tale	DR	2pcs

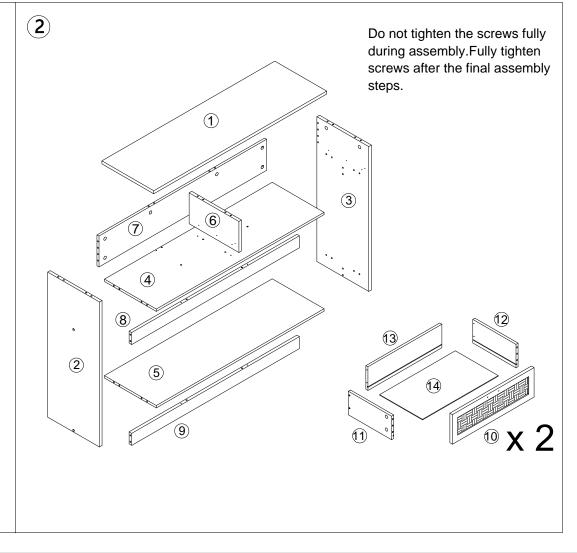



3 2 3 1PC 4 1PC 1 1PC 1PC 1PC 7 1PC 1PC <u>(5)</u> **6** 1PC 8 2PCS 1PC 10 11 2PCS 12 9 1PC 2PCS 13 2PCS 14

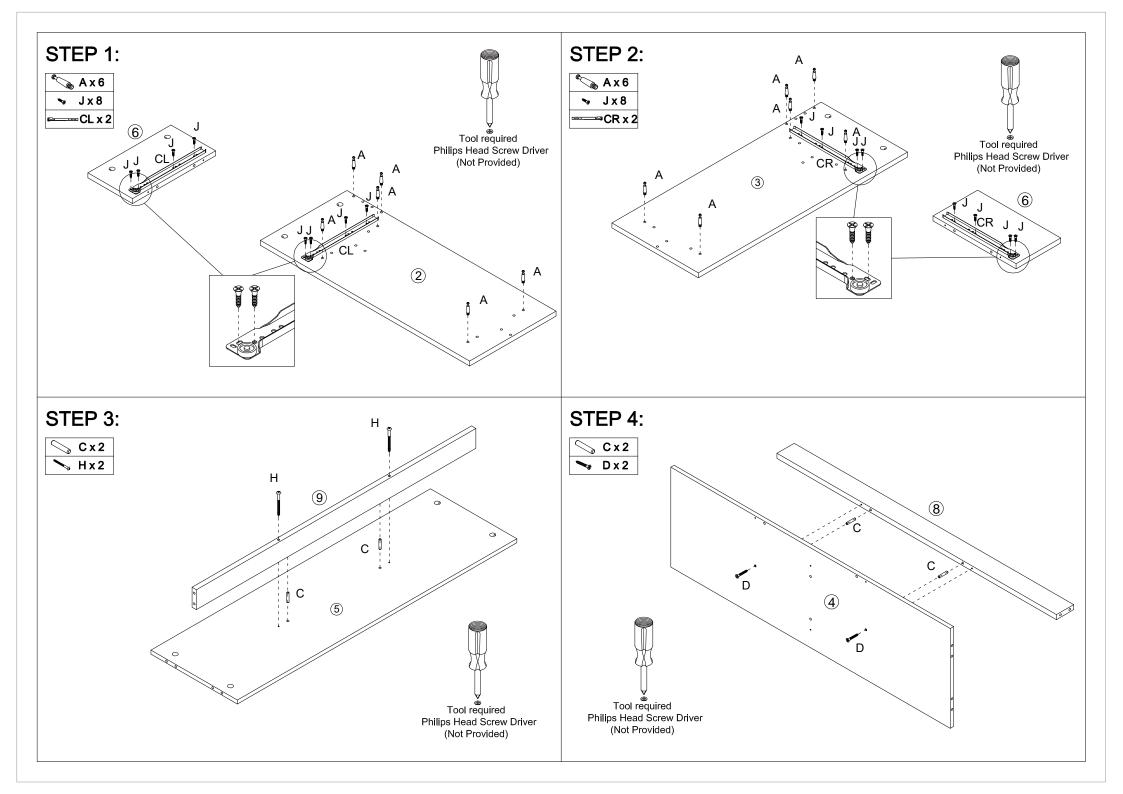

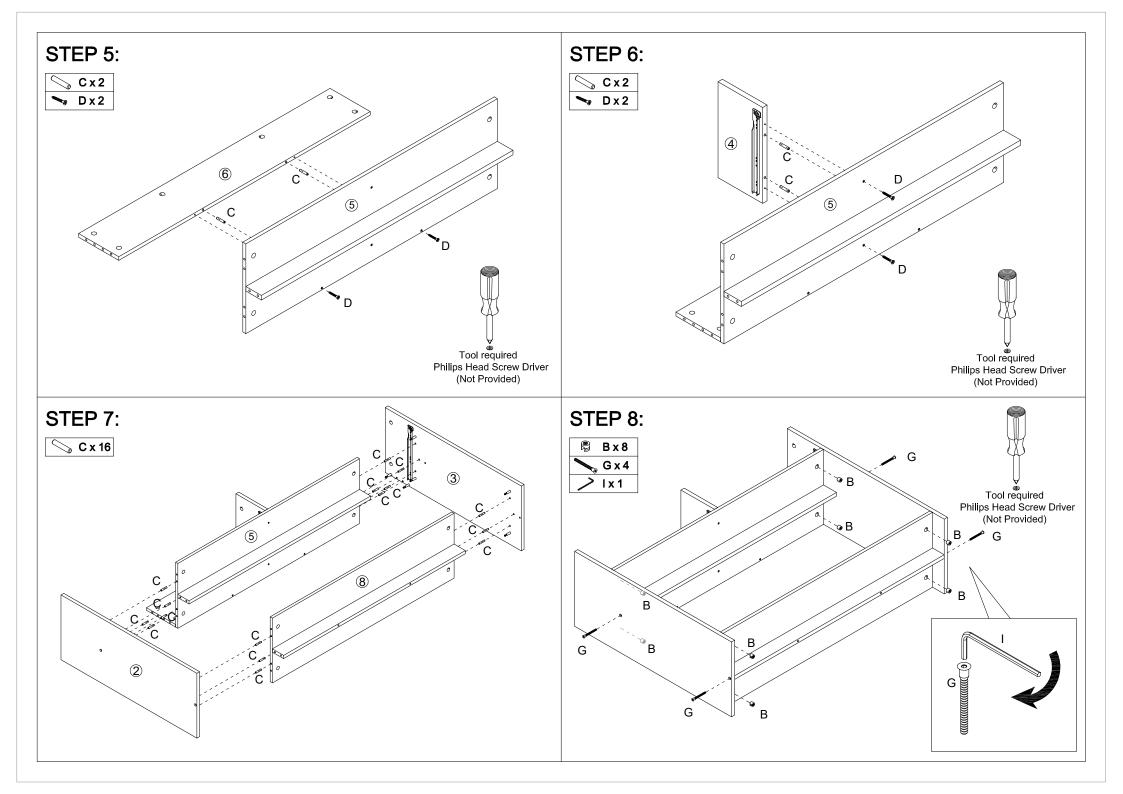

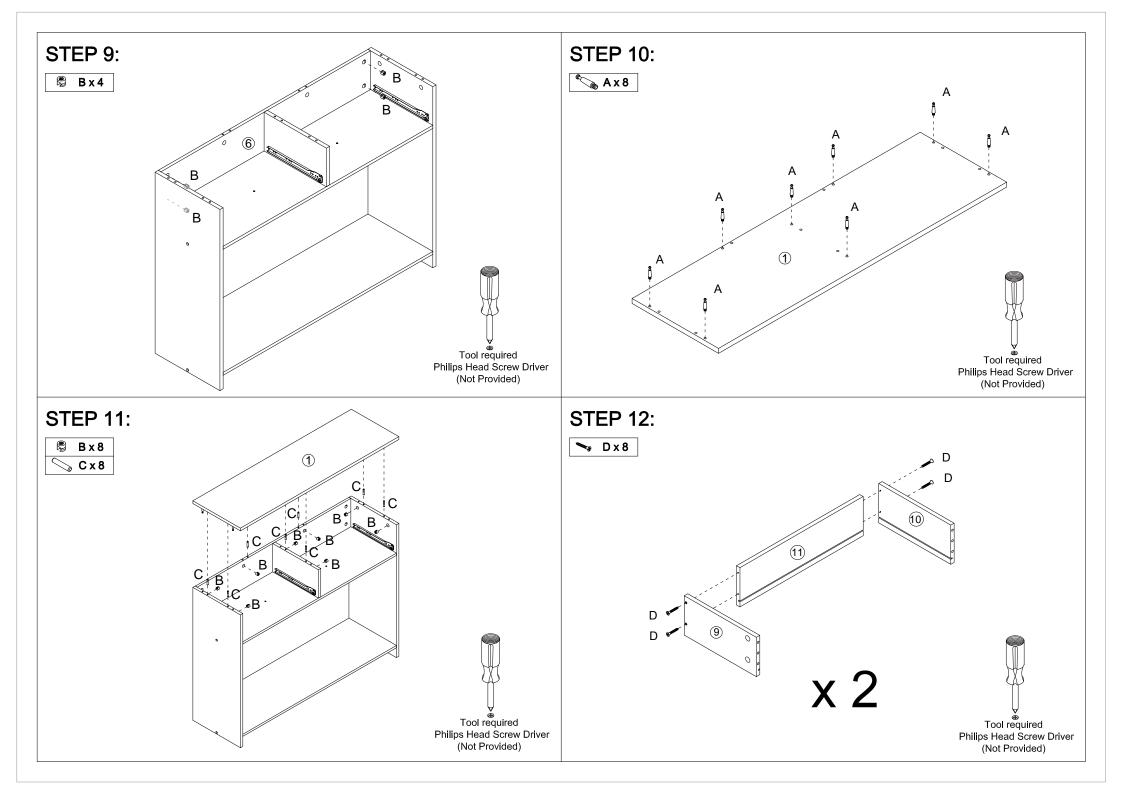


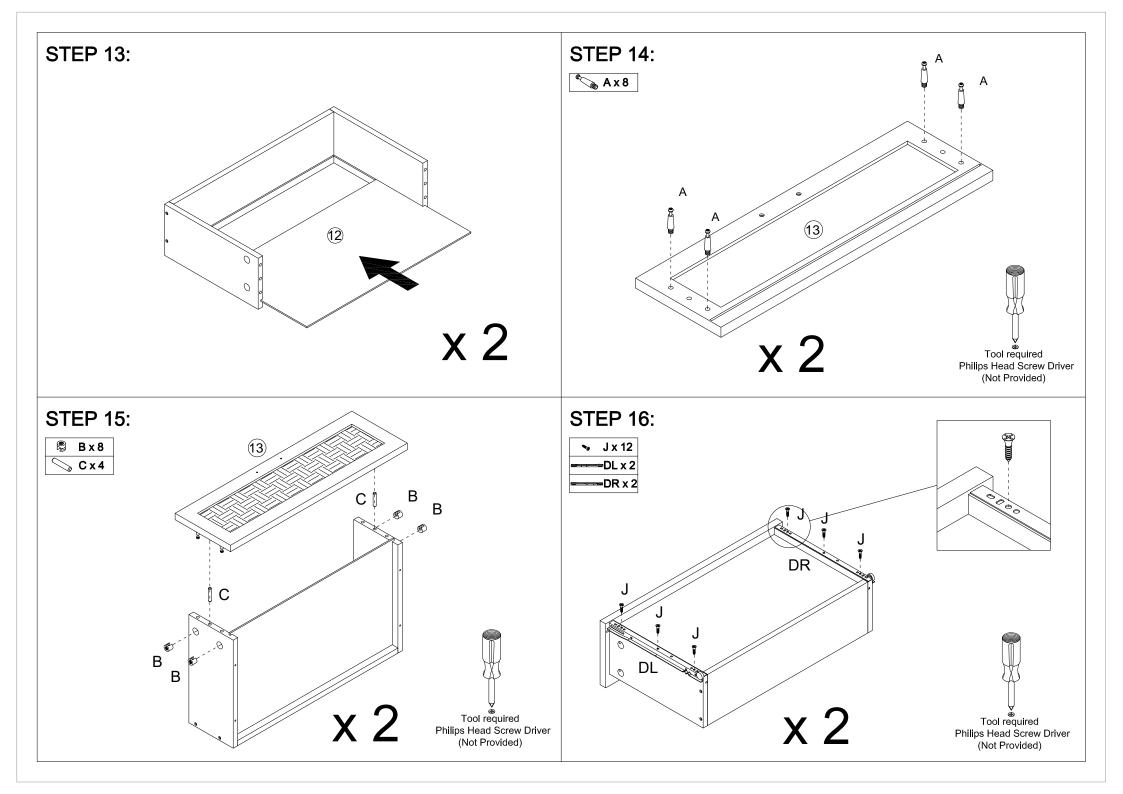


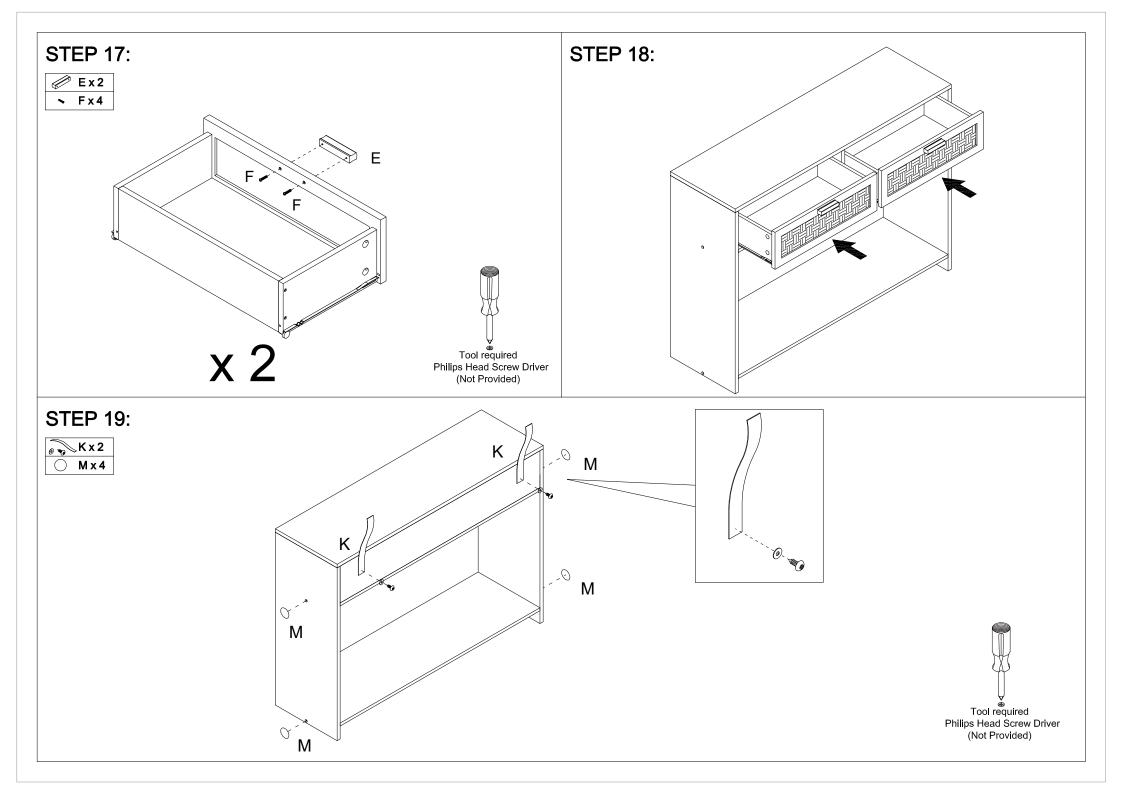

STEP 20:




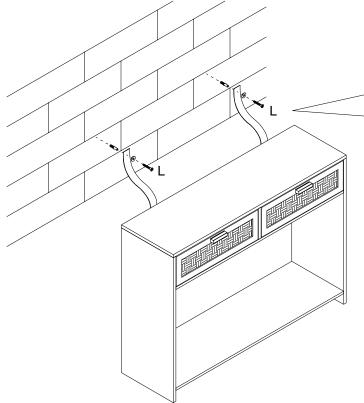

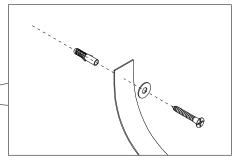

A WARNING



 

Children have died from furniture tipover.

- · ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- · Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

 Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



