

Date:

Manual ADJUSTABLE ROLLER SKATE 43271191, 43271207, 43271252 Adjustable size - PU wheels - ABEC-7 Bearings WARNING! PROTECTIVE EQUIPMENT SHOULD BE WORN. NOT TO BE USED IN TRAFFIC. Size 13-2 & 3-5 & 6-8 maximum loading weight 60kg. CAUTION CAUTION:

Read the manual carefully before using your new skates.

Pior to acch use, please check that all screws and connections are tightened. Make sure that the brake, wheels and bearings are in good condition.

Self-locking nats and other self-locking fixings may lose their effectiveness after used.

Protective equipment should be worn. We recommend you to wear a helmet, wrist, knee and elbow protectors and enfloative clicking when needed.

Use the skates with courton to avoid falls or collisions cousing injury to the user or anyone else. Do not ride your skates in slaping areas.

Not to be used in traffic. Always follow and obey all local traffic laws and regulations. Stay away from motor verticles and watch out for pedestrians. vehicles and watch out for pedestrians.

Never allow jourself to be puted along by a motorized vehicle.

Ride your skates in daylight.

Avoid skates in daylight.

Avoid skateling in sand, water or dirt.

Never leave your skates in externer high/low temperatures as it might damage the skates.


Never let children use the skates without adult supervision. Store the product indoor.
 Store the product indoor.
 DO NOT make any modifications to this product.
 Keep the instruction for future reference+skate maintenance. - Note to remove any sharp edges created through use. MAINTENANCE Pilor to each use it is important to check that all screws are tightened. Check that the wheels roll properly and that the bearings are in good condition.

Please rotate the bearings and wheels to see whether they are workable, and do some adjustments or add lubricant if its needed after the first 2 weeks of use. labricant if its needed ofter the first 2 weeks of use.

The wheels and wheel bearings may become worn out ofter regular use and can be changed easily, A special key, available in most tool shops, can be used to remove the ball bearing. Clean the ball bearings using a clean, dry cloth, Lubricate the bearings if necessary.

On a regular bases we recommend to swap the wheels around, to keep all wheels in good condition and to prevent irregular vieor. Try to onticipate broking and the higher speed, the greater broking distance. Check the brake pod regularly and replace if necessary. To use the broks, bend your knees despliy and put your kips in a staggered position with the broke skate in front. Carefully lift the tip of the foot with the broke skate and put some weight on the heef to stop.

This roller skate meets EN13899 Class B standards, Suitable for users up to 60kg.

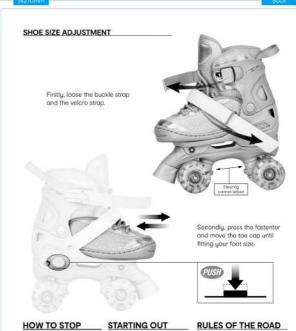

MADE IN CHINA FOR AU / NZ: IMPORTED FOR KMART STORES IN WISTRALIA AND NEW ZEALAND.

STARTING OUT

Nieuja isod jour protective goet halmst write goods, free and abos pods. Leam sloting basts such as traking and burning telefore geling out on the join and Stay among from water, oil, debts, said and unason or basism provenent, Audio aloos with Indiffs. Never harch yourself along motoried vertices. Stay glent Makeja the coultion of controling the speed of your slates. Stay to control.