Assembly Instructions

K:43479474 | T:70221145


ATTENTION:


DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED. FOR INDOOR USE ONLY.

MAXIMUM TOTAL LOADING WEIGHT: 23KG. 10KG FOR THE TOP SHELF, 3KG FOR EACH LARGE DRAWER AND 1.5KG FOR EACH SMALL DRAWER.


Hardware list

	(A)	4PCS	0 = 2000	(E)	2PCS
0,,,,,,	B	6 PCS	(Immumumm-	(F)	2PCS
0	©	6 PCS		G	2PCS
	(D)	1PC	0	\oplus	2PCS

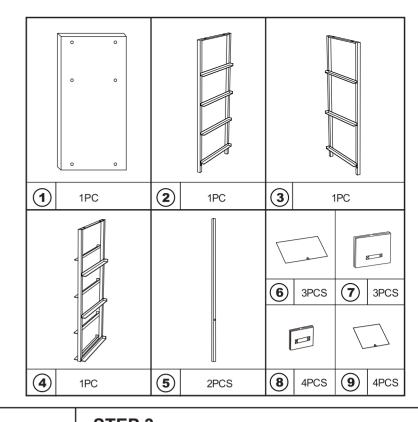


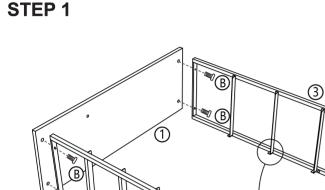

011111

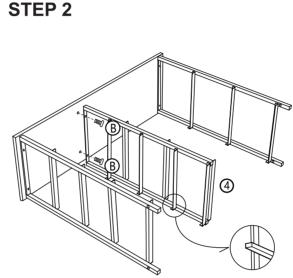

(B) 2pcs

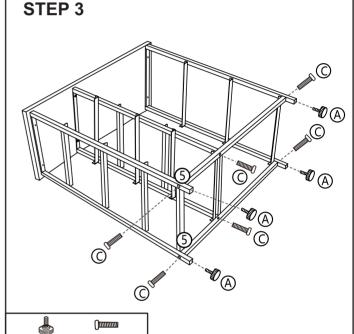




STEP 7

(B) 4pcs





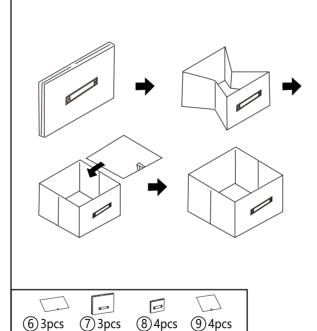

STEP 6

A 4pcs C 6pcs



WARNING





Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.



This furniture is at high risk of toppling over

Ask staff for more information or visit https://www.productsafety.gov.au

Instruction manual should also state:

- It is strongly recommended that this product is permanently
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.


Caution: for your safety when attaching the anchor fixings, please note the following:

Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING.



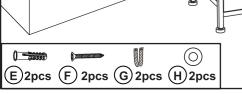

SCAN THE CODE FOR MORE INFORMATION.