

SKI SCOOTER INSTRUCTIONS

Keycode: 42642749

WARNING! Read the information supplied by the manufacturer.

WARNING! Assembly by an adult.

Always wear a helmet and protective pads. Do not use scooter at night. Do not use on wet surfaces, uneven or unpaved road. Do not use on public roads.

This scooter is not designed for off-road use.

Not suitable for children under 7 years old. User's maximum weight: 100Kg.

This product complies with EN 14619.

Remove the scooter and all the parts from the box. Set out all the parts and read the assembly instructions prior to use. Keep the packaging until assembly is complete.

General instructions

- This scooter requires adult assembly. Prior to use, make sure that the scooter has been assembled properly. Due to the skill it requires, the scooter must be used with care in order to avoid falls or collisions likely to injure the user or others.

Directions

- a) The scooter can be dangerous and can lead to a traffic accident when used on public highways. Not to be used on public roads.
- b) It is best used on a flat, clean surface, free of gravel and grease.
- c) Avoid bumps and drainage grates that may cause an accident.
- d) The scooter does not include any headlights or lights. It is therefore not suitable for use at night or during periods when visibility is limited.
- e) Do not allow more than one child to ride the scooter at the same time.


Before and after use

- Check all screws and fittings are secure before giving to a child.
- Ensure all locking devices are engaged. Ensure there are no broken components.
- Ensure the wheels can be swung smoothly and the action decks are fixed well.

Assembly Instructions:

- 1) The scooter folding and unfolding operations are to be performed by an adult.
- 2) During these operations, be careful not to pinch your fingers in the hinge and locking system.
- 3) Make sure that all the locking mechanisms are securely locked.

Unfold the scooter

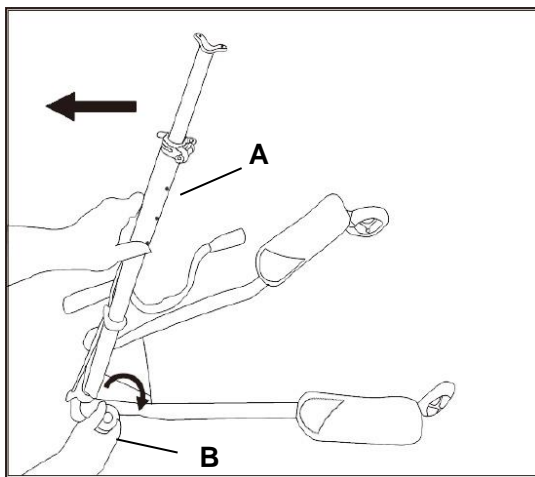


1. Grasp the steering tube (A) with one hand, and raise it up to full unfolding.

2. Then push and turn both of the folding knob (B) clockwise with the other hand to tighten. Please make sure that both of the knobs are tightened completely.

Warning: Be careful not to pinch your fingers when you do the operation.

Assembly handlebar

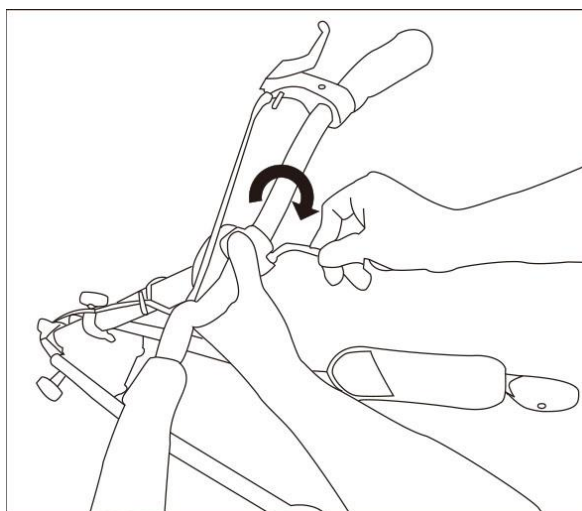

1. Loosen the two bolts which fixed in the steering tube.

2. Place the handlebar set onto the center of the steering tube.


Note: The brake lever should be in the right hand.

3. Keep stem cap of the handlebar aligned with the cap in the steering tube and use the hex key to tighten the two bolts to assembly. Make sure the handlebar can not be moved forward and backward.

WARNING! Failure to tighten the handlebar fully may result in the scooter unsafe.

Use

- Hold both handle grips firmly. Step on the action decks properly according to the below demonstration.
- Swing your low body to the right, and the swing to the left. Repeat to do these actions, and then the scooter will move forward easily and continually.
- Braking: Brake is located in the right, when necessary, press it to slow down. Press gradually in order to prevent skidding or loss of stability.
- Shoes are mandatory and we strongly advise you to wear long pants and long sleeve shirts to avoid injury if you fall.

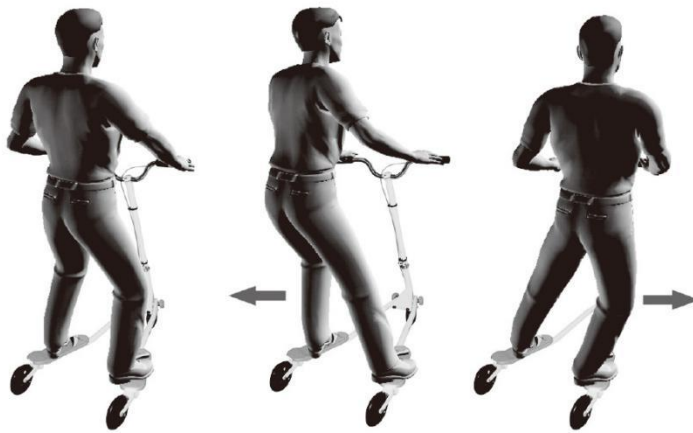

Care Instructions

A . Wheel bearings: Avoid going through water, oil or sand as this can damage wheel bearings.

To look after the wheel bearings, systematically check that the wheels turn properly by turning the scooter upside-down and using your hand to spin the wheels. If the wheels do not spin they must then be removed to check their condition. First unscrew the wheel axle, remove the axle and detach the wheel, then carefully push the two wheel bearings out of their housing. If they are chipped or dented, new ones should be bought. If there is no visible damage, they must then be oiled. To do this, remove all traces of grease, mud or dust with a kitchen towel or cloth, and re-oil them with a grease spray or by leaving them to soak overnight in oil [turn them several times in the oil first]. Remove and reassemble the wheel bearings and axles, followed by the wheel, onto the scooter. Proceed in the same manner for the other wheel.

B. Wheels: The wheels wear down with time and can be pierced if over used on rough surfaces. In the interest of safety, they should be checked regularly and changed if necessary.

C. Modifications: The original product must by no means be modified except for the maintenance-related changes mentioned in these instructions.

D. Nuts and axles: These should be checked regularly. They can become loose after a while in which case they should be tightened. They can become worn and not tightened properly, in which case they should be replaced.