

# PROGRESS SCOOTER INSTRUCTIONS

**Keycode: 43049301**

**WARNING!** Read the instructions supplied by the manufacturer.

**WARNING!** Remove all tags, labels and plastic fasteners before giving this scooter to your child.

**WARNING!** Item to be assembled by adult only. Choking hazard. Contains small assembly components with functional, sharp points and edges.

**WARNING!** This product is not a stroller and does not meet the safety requirements for a stroller. Do not use as a means for transport. Do not use on or near the road. To be used under constant adult supervision. Adult assembly required. Small children require adult supervision when riding.

**WARNING!** Always wear an approved safety helmet, knee and elbow pads while riding. Check all nuts and bolts for tightness before riding. Never leave your child unattended on this product. Not permitted for use on public roads and highways. This product is not designed for road use. Use only on smooth, flat paved and dry surfaces, free of sand, gravel or dirt.

**WARNING!** Not suitable for children with a body mass of more than 20 kg.

**WARNING!** Suitable age range: 2-5 years.

Remove the scooter and all the parts from the box. Set out all the parts and read the assembly instructions prior to use. Keep the packaging until assembly is complete.

## General Instructions

- This scooter must be assembled by a responsible adult. Prior to use, make sure that the scooter has been assembled properly. Remove all the parts which are not necessary for play before giving the scooter to your child. Due to the skill it requires, the scooter must be used with care in order to avoid falls or collisions likely to injure the user or others.
- To be used with suitable protective equipment, including a helmet, shoes, elbow, wrist and knee protection. Teach the child how to use it safely and responsibly.

## Directions

- a) The scooter can be dangerous and can lead to traffic accidents when used on public roads. Do not use on the public roads.
- b) For use on smooth, paved surfaces only.
- c) Avoid bumps and drainage grates that may cause an accident.


- d) The scooter does not include any headlights. It is therefore not suitable for use at night or during periods when visibility is limited.
- e) Always use under adult supervision.
- f) Do not allow more than one child to ride the scooter at the same time.

## Before and after use

- Check the height of the steering system, and make sure the spring button is secured.
- Check all of the connection elements: the brake, the quick release system of the steering column and the wheel axles are adjusted correctly and not damaged.
- Also check the wheels wear.

## During use

- When used as a scooter, hold both handgrips firmly. Put one foot towards the front of the deck. With the other foot, push off the ground to propel the scooter forward. Both feet can fit on the deck when desired speed has been reached. To stop, step on the brake with the rear foot.
- When used as a scooter with seat, always hold the handgrips firmly.
- When used with parent handle, do not press down on the handle, it may cause the scooter to tip over.
- Braking: a brake is located at the rear, when necessary, press down on it to slow down. Press down gradually in order to prevent skidding or loss of stability.
- Shoes are mandatory and we strongly advise you to wear pants and long sleeve shirts to avoid injury if you fall.
- Children should be reminded that the scooter should be used with caution, since it requires skill, so as to avoid falls or collisions causing injury to the user and others.

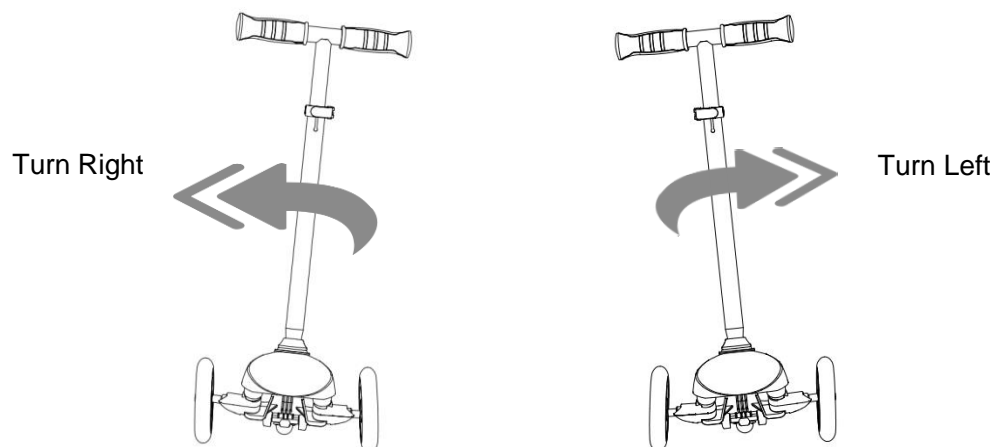

## Assembly Instructions:

### 1. ADJUST THE HANDLEBAR

Step 1: Hold the scooter and pull up the bottom of the handlebar.

Step 2: Release the quick lock, adjust the handlebar to desired height, then tighten the quick lock. If adjust to the highest position, the button must pop into the fixation hole.



### 2. ASSEMBLE AND ADJUST THE SEAT

Step 1: Take out the seat and fit the structure on handlebar, hear the 'click' and then check that it is secure.

Step 2: Pull the cover, press and hold the upper button to adjust the seat height. Loose the button when reach the desired height, and then push back the cover.





### 3. ASSEMBLE AND ADJUST THE PARENT HANDLE


Step 1: Pull the cover, take out the parent handle, and then press the upper button to insert the handle into the hole, hear the 'click' and then check that it is secure.

Step 2: Release the quick lock, adjust the handlebar to desired height, then tighten the quick lock. If adjust to the highest position, the button must pop into the fixation hole.



#### 4. DISASSEMBLE THE PARENT HANDLE

Press the upper button to pull out the parent handle, then close up the cover.

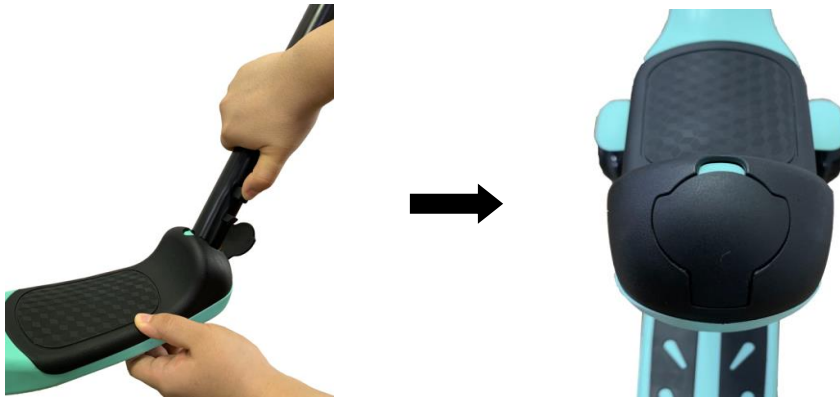


#### 5. DISASSEMBLE THE SEAT

Pull the cover, press and hold the bottom button, pull up the seat from the part near handlebar. **Please note that the seat cannot be removed at the highest position.** Please adjust to lower position if you want to remove the seat.



#### 6. FOLD THE SCOOTER

Hold the scooter and pull up the bottom of the handlebar to fold the scooter.

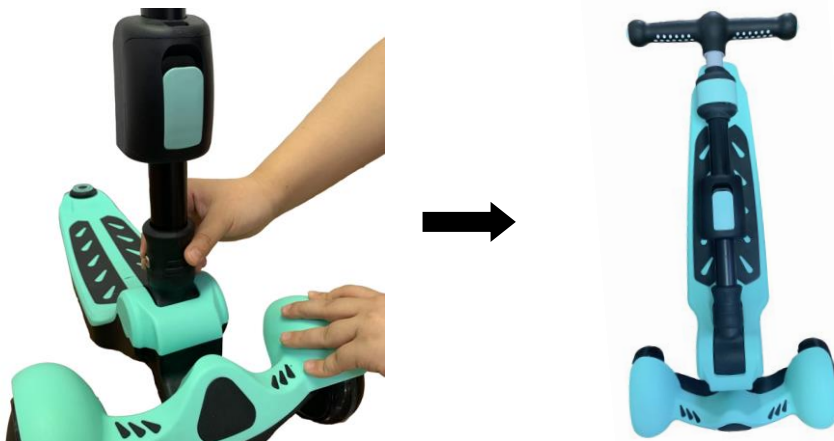

## Care Instructions

**A . Wheel bearings:** Avoid going through water, oil or sand as this can damage to the wheel bearings.

To look after the wheel bearings, systematically check that the wheels turn properly by turning the scooter upside-down and using your hand to spin the wheels. If the wheels do not spin they must then be removed to check their condition. First unscrew the wheel axle, remove the axle and detach the wheel, then carefully push the two wheel bearings out of their housing. If they are chipped or dented, they should be replaced. If there is no visible damage, they must then be oiled. To do this, remove all traces of grease, mud or dust with a kitchen towel or cloth, and re-oil them with a grease spray or by leaving them to soak overnight in oil [turn them several times in the oil first]. Reassemble the wheel bearings and axles, followed by the wheel, onto the scooter. Repeat process for the other wheel.

**B. Wheels:** The wheels wear down with time and can be pierced if overly used on rough surfaces. The back wheel on which the brake is applied is particularly affected after several hours of braking. In the interest of safety, they should be checked regularly and changed if necessary.

**C. Modifications:** The original scooter must by no means be modified except for the maintenance-related changes mentioned in these instructions.

**D. Nuts and axles:** These should be checked regularly. They can become loose after a while in which case they should be tightened. They can become worn and not tighten properly, in which case they should be replaced.

**MADE IN CHINA**

FOR AU / NZ: IMPORTED FOR KMART  
STORES IN AUSTRALIA AND NEW ZEALAND.