



Z FOLD

CHANGE LOG CREST INTERNAL USE ONLY

1. Replaced SKU from 42963523 with customer provided keycode 43218028

126mm

4. Do not disassemble the clock or any of its components.
5. Do not place any magnetic stripe or chip card (ID card, bank cards, etc.) close to the clock to avoid magnetic failure.
6. This item is not to be used on any mobile device with metal plates, as it will cause extreme heat that may burn and/or damage the device.
7. The recommended thickness of the phone case should be within 2mm.
8. The standard temperature of the wireless charger is 55° C, but the temperature of this product should be maintained within 45° C. The charger will cut off current when abnormal heating occurs.

Specifications

Model No.: 43218028
Wireless Charger: 5W
LED Display: 4.1 Inches
Output Power: Max 5W
USB Charging Input: Max d.c. 5V/2A
 Use the provided charging cable
 USB-C PD Charger not supported



WARNING: BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24-HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 131126 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT.

12 month warranty

Thank you for your purchase from Kmart.
 Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrove Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING: Do not dispose of unit in fire or water. Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. Avoid exposing your device to very cold or very hot temperatures (below 0° C or above 45° C). Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands.

Alarm Clock with Wireless Charging Operating Instructions


- Includes:
- alarm clock with wireless charging
 - charging cable (USB-C cable)
 - user manual



43-218-028

89.1 mm


Function overview:

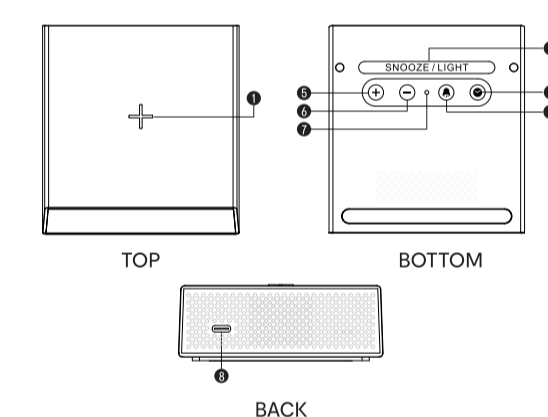

1. Wireless charger centre
2. Snooze / Light button
3. Time setting
4. Alarm setting
5. Up
6. Down
7. Reset
8. USB-C Charging port


How to use this product:

In time mode, press ● to change between 12H and 24H.



Note: If you choose the 12H mode, the screen will display PM in the afternoon.

Press and hold the ● button to enter the time setting after you have selected the hours format, the hour begin to flash.



Press the ● or ● buttons to set the hour, press and hold ● or ● buttons to skip through the values quickly. Press the ● button to confirm the hour setting, then the minutes begin to flash. Press and hold the ● or ● to change to the desired minutes. Press the ● button to confirm setting. Then it comes to time display mode 12HR or 24HR. Press ● or ● to choose and then press the ● to confirm the setting.

Alarm Setting

In the time display mode, press and hold the ▲ button to enter alarm 1 setting. "▲1" remains lit and the hour begin to flash. Repeat the time setting process to set alarm 1.

Press the ▲ button to save setting, the clock will enter into alarm 2 automatically. "▲2" remains lit, and the hour will flash. Repeat the above process to set alarm 2.

The clock will return to clock mode, and both Alarm 1 and 2 icons will be ON on the clock interface.

Press ▲ button, "▲1" stays lit, and "▲2" turns off, indicating that only alarm 1 is on.

Press the button again, "▲1" turns off and "▲2" turns on, indicating that only alarm 2 is on.

Press the button a 3rd time to turn both alarm settings back on.

Press the ▲ button again, both alarm 1 and 2 turn off, indicating that no alarm is on.

Snooze function

When alarm goes off, respective alarm symbol flashes and a beep sound will be heard. Press the top of this product to snooze it for 9 minutes; a Zz symbol will be shown below the alarm symbols.

Stop the Alarm

When alarm goes off, press and hold the top of the clock for 2 seconds to turn the alarm off.

Turn off Snooze function

In the snooze mode, Zz icon stays on, press any button except the SNOOZE / LIGHT button to turn off the snooze.

Dimmer function

In the time display mode, press the top of the alarm to trigger SNOOZE / LIGHT button to adjust the brightness of the LED display, 4 levels brightness control. Off -10% -50% -100%. You can also press the SNOOZE / LIGHT button at the bottom of the alarm to adjust the brightness of the LED display.

Default brightness: 50%, the default brightness will be automatically changed to 10% from 22:00 to 6:00 am.

Wireless Charger Function

When using wireless charger to charge your phone, place the phone at the center of the charging dock. Don't put foreign metal body on the charger.

Working Status	White * Icon	Blue * Icon
Standby	OFF	OFF
Charging	OFF	ON
Fully Charged	OFF	OFF
Improper Charging	ON	OFF

Factory Reset

Insert a pin into the hole between underside buttons to press the reset button inside. Full screen will light up for 2 seconds then show 00:00, indicating it has been set back to default settings.

Important Notes

1. Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.
2. A cloth or other protective material should be placed between the clock and the furniture.
3. Cut off the power before cleaning the clock with a soft cloth moistened only with mild soap and water.

267.301 mm

