

ASSEMBLY INSTRUCTIONS

Item: LIGHT UP TRI SCOOTER

Keycode: 43-419-463 | T: 69-508-219

WARNING!

Read the information supplied by the manufacturer.

Assembly by an adult.

Wear personal protective equipment. Always wear helmet and protective pads. Do not ride in the darkness. Do not use on wet surfaces, uneven or unpaved road. Not for off-road use.

Check the limitation of use according to regulations of road safety.

WARNING: This toy produces flashes that may trigger epilepsy in sensitised individuals

Age: 3+ User's Maximum Weight: 40 kg.

The product complies with AS/NZS 8124

Remove the scooter and all the parts from the box. Set out all the parts and read the assembly instructions prior to use. Keep the packaging until assembly is complete.

General Instructions

- This scooter is **pre-assembled** by manufacturer. Prior to use, make sure that the bolts and nut as well as screws have been tightened properly. Remove all the parts which are not necessary for play before giving the scooter to your child. Due to the skill it requires, the scooter must be used with care in order to avoid falls or collisions likely to injure the user or others.
- To be used with suitable protective equipment, including a helmet, shoes, elbow, wrist and knee protectors. Teach the child how to use it safely and responsibly.
- The scooter is not a toy for children under the age of 3 years.

Riding Instructions

- a) The scooter can be dangerous and can lead to a traffic accident when used on public highways. Don't use on the public roads.
- b) It is best used on a flat, clean surface, free of gravel and grease.
- c) Avoid bumps and drainage grates that may cause an accident.
- d) The scooter only has decorative lights and no lights for driving lighting. You need to be very careful when using it at night.
- e) Always use under adult supervision.
- f) Do not allow more than one child to ride the scooter at the same time.

Before and after use

To prevent pinched fingers, keep your hands on the outside of the handlebar and the footrest when folding or unfolding the scooter. Make sure that all locking mechanisms are securely locked:

- Check the height of the steering system, and make sure the nuts are tightened and that the handlebars and the front wheel are perpendicular.
- Check all of the connection elements: the brake, the quick release system of the steering column and the wheel axles must be adjusted correctly and not damaged.
- Also check the wheel wear.

During use

- Standing on the scooter, one hand on each handle, push with one of your feet to move forward. Proceed with caution at the start.
- Braking: a brake is located at the rear, when necessary, press down on it to slow down. Press down gradually in order to prevent skidding or loss of stability. The metal or aluminum brake may heat up after multiple uses. Avoid touching it during and after use.
- Shoes are mandatory and we strongly advise you wearing pants and long sleeve shirts to avoid injury.
- Always wear an approved safety helmet, knee and elbow pads while riding.
- Explain to the child clearly how to open/close and especially how to lock the scooter before any use.


Assembly Instructions:

- 1) The scooter folding and unfolding operations are to be performed by an adult.
- 2) During these operations, be careful not to pinch your fingers in the hinge and locking system.
- 3) Make sure that all the locking mechanisms are securely locked.
- 4) This scooter is fully pre-assembled by manufacturer. You only need 3 steps to adjust to suitable situation.

Step 1:

Pull the spring lock towards the handlebar to unfold.

Release the spring lock when you hear "KA" sound and find the front pole is vertical from the deck.

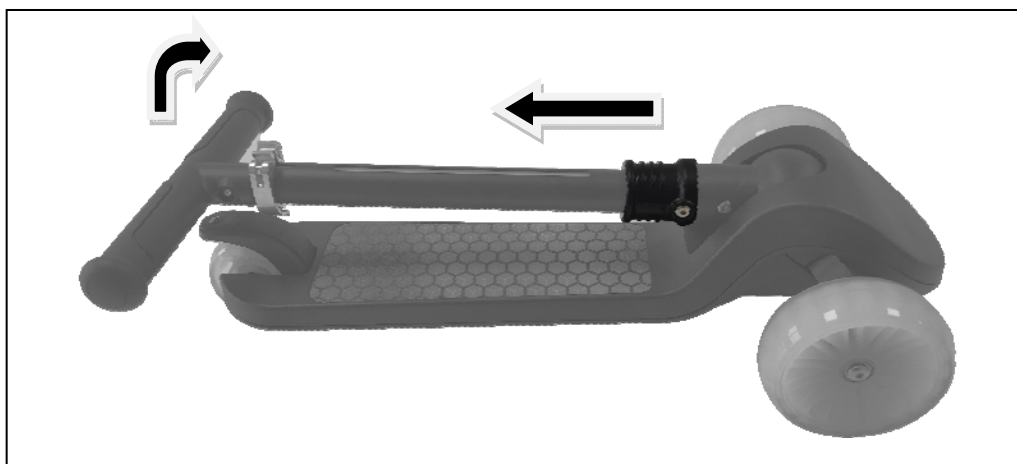

Step 2:

Open quick release and pull the Steering Pole until the stem pin land in the notch.



Step 3:

Press the stem pin and choose a suitable position and then close the quick release.



Adjust the height of Handlebar

Loosen the quick release (Open position), press the stem pin and pull the handlebar up or push down till the stem pin landed in the notch for a suitable height, then tighten the quick release (Close position).

How to light up your scooter

The lights in the rear wheel:

The lights are motion activated, no batteries are required.

When the scooter is not in use the rear wheel remains clear and does not light up.

When the scooter is in use, the rear wheel lights up with white light and will continue to remain on while the scooter is in motion.

The lights in the deck and front wheels:

Step 1: Turn over foot plate of the scooter. The battery box is underneath the scooter. Place batteries inside battery compartment.

Step 2: Press the switch button on the handlebar once to turn on lights in pole and front wheels.

Step 3: Short press the switch button to change the flashing colors and change between different light modes. The lights contain 20 modes flashing effects.

3-Second long press the switch button to turn lights off.

INSERTING / CHANGING BATTERIES

Step 1: Use a small screwdriver to loosen screw on battery compartment cover on underside of deck and then release the cover.

Step 2: Insert/replace 3 X AA (1.5V) batteries as per the polarity diagram signified in the battery compartment.

Step 3: After batteries are inserted/changed, place the cover back onto the battery compartment and screw again to firmly secure the cover.

Batteries not included. You need to prepare 3 X AA (1.5V) batteries.

WARNINGS:

- ◆ **Insert batteries with the correct polarity and always follow the manufacturer's instructions.**
- ◆ **Do not mix new and used batteries or alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.**
- ◆ **Remove batteries if product will be stored for an extended period.**
- ◆ **Dispose of used batteries responsibly.**
- ◆ **Non-rechargeable batteries are not to be recharged.**
- ◆ **The supply terminals are not to be short-circuit.**
- ◆ **Rechargeable batteries are to be removed from the toy before being charged.**
- ◆ **Rechargeable batteries are only to be charged under adult supervision.**
- ◆ **Keep the instruction since it contains important information.**

CARE INSTRUCTIONS

A. Wheel bearings: Avoid going through water, oil or sand as this can damage wheel bearings.

To look after the wheel bearings, systematically check that the wheels turn properly by turning the scooter upside-down and using your hand to spin the wheels. If the wheels do not spin they must be removed to check their condition. First unscrew the wheel axle, remove the axle and detach the wheel, then carefully push two wheel bearings out of their housing. If they are chipped or dented, new ones should be bought. If there is no visible damage, they must then be oiled. To do this, remove all traces of grease, mud or dust with a kitchen towel or cloth, and re-oil them with a grease spray or by leaving them to soak overnight in oil [turn them several times in the oil first]. Remove reassemble the wheel bearings and axles, followed by the wheel, onto the scooter. proceed in the same manner for the other wheel.

B. Wheels: The wheels wear down with time and can be pierced if overly used on rough surfaces. The back wheel on which the brake is applied is particularly affected after several hours of braking. In the interests of safety, they should be checked regularly and changed if necessary.

C. Modifications: The original product must by no means be modified except for the maintenance-related changes mentioned in these instructions.

D. Nuts and bolts: These should also be checked regularly. They can become loose after a while in which case they should be tightened. They can become worn and not tightened properly, in which case they should be replaced.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567