KMT说明书 折页 128g双铜 尺寸：89*127mm

12 month warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurredin returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage
- Please note the product working temperature is : 0-40 ℃.
- Keep the product away from children as it contains small components.

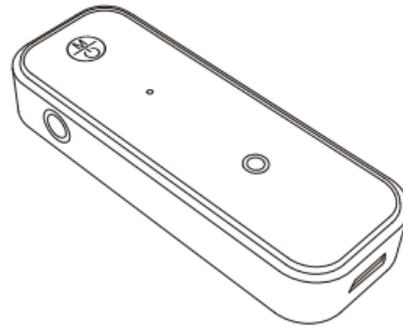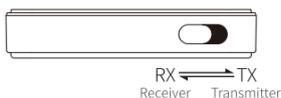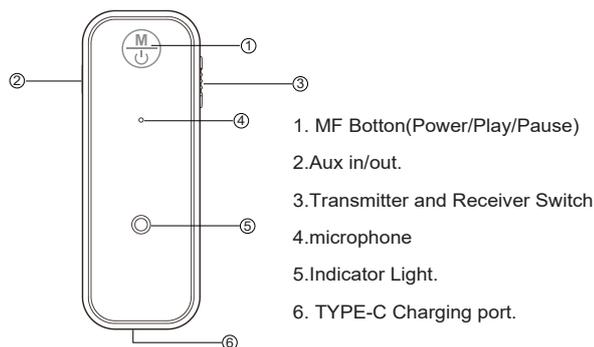
anko

K: 43-363-803 | T: 68-950-576
Model: BT-531

Bluetooth Transmitter & Receiver

User Manual

Accessories inside:
- Type-C charging cable x 1
- 3.5mm audio cable x1
- User manual x 1

Quick Start Guide

1. MF Botton(Power/Play/Pause)

2.Aux in/out.

3.Transmitter and Receiver Switch

4.microphone

5.Indicator Light.

6. TYPE-C Charging port.

One button control

Easily switch between receiver (TX) & transmitter (RX) mode .

RX ⇌ TX
Receiver   Transmitter

Specification

Working range :10M
Bluetooth version：5.3
Battery capacity: 120mAh
Working time ： 6Hrs
Size ： 22*12*59.5mm
Type-C charging port

Use Instruction

Receiver Mode

1. Please use a charging cable to charge before use;

2. To allow your non-Bluetooth speaker、 headphones be used with Bluetooth audio source device (mobile phone ,tablet ,PC etc.) , connect the non-Bluetooth speaker、 headphone to this product with the provided AUX cable (or your own 3.5mm aux cable) ;

3. Change the switch button to position RX ; Note: You should switch to RX mode before proceeding to next step.

4. Turn on the product (Long press MF button) then the blue light will flash quickly, indicating that is ready for pairing ;

5. Find **anko43363803** in the wireless search list of your Bluetooth souce devices (mobile phone ,tablet ,PC etc.) and hen pair .

6. You can press MF button to Play / Pause the music; when there is incoming phone call , press MF button once to accept the call, or long press MF button to reject the call.

Transmitter Mode

1. Please use a charging cable to charge before use;

2. To allow your non-Bluetooth audio device (eg. Laptop computer、 in-flight entertainment systems) be used with Bluetooth speaker / headphones , Connect the non-Bluetooth audio source devices (e.g. Laptop computer、 in-flight entertainment systems) to this product with the provided 3.5mm aux cable .

3. Change the switch button to position TX ; Note: You should switch to TX mode before proceeding to next step.

4. Turn on the device (Long press in MF button) then the red light will flash quickly , indicating that is ready for pairing;

5. Switch on the Bluetooth earphone / headphone ; it will connect to this product automatically . During the connection , the LED indicator keep flashing in RED, it stops flashing when connection success.

Note:

1.MF button cannot be used in this operating mode. The connection would be disturbed when pressing MF button.
2.When there are other Bluetooth earphone / headphones in used nearby, the connection maybe disturbed.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license.