

# Assembly Instructions






## 43148363 SLATTED BAMBOO SLIM LINE TROLLEY




**CARE INSTRUCTION:** WIPE CLEAN WITH A SOFT DRY OR DAMP CLOTH. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. FOR INDOOR AND DOMESTIC USE. CHECK AND TIGHTEN ALL PARTS REGULARLY.


**WARNING:** DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES.

ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. MAXIMUM TOTAL LOADING WEIGHT: 3KGS PER LAYER, 9KGS IN TOTAL.

### Hardware list


	a	5X40mm	12PCS		d		2PCS
	b		1PC		e		2PCS
	c		1PC				

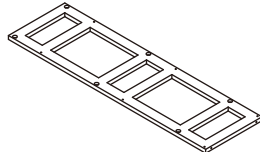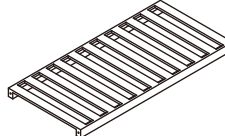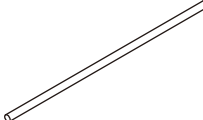					
A	2 PCS	B	3 PCS	C	6 PCS

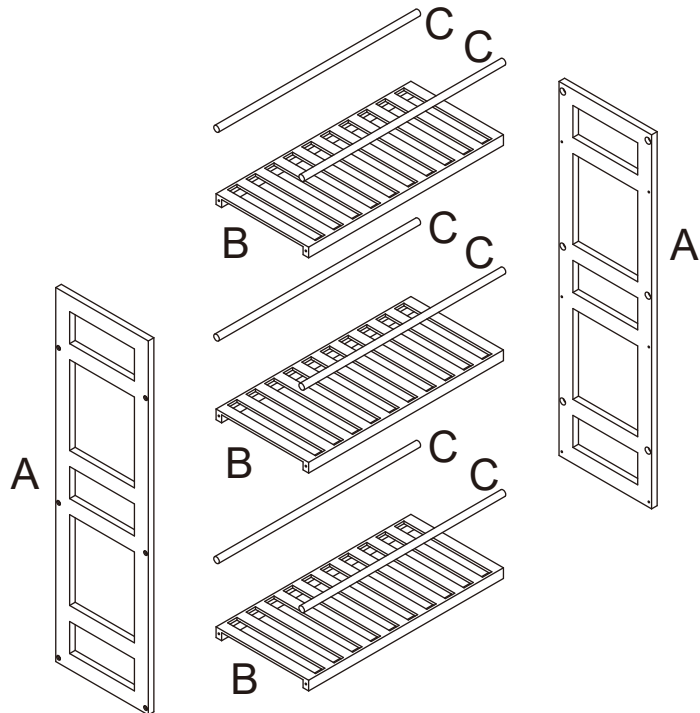


DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.


### STEP 1

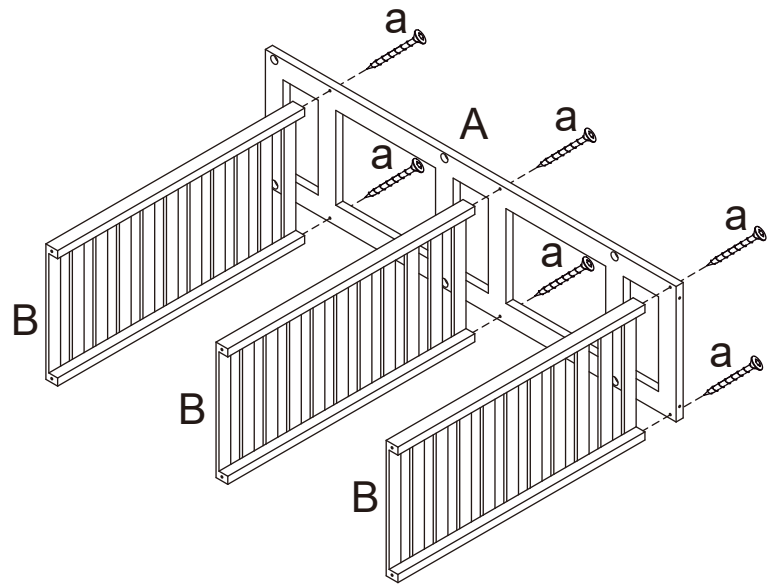

### STEP 2

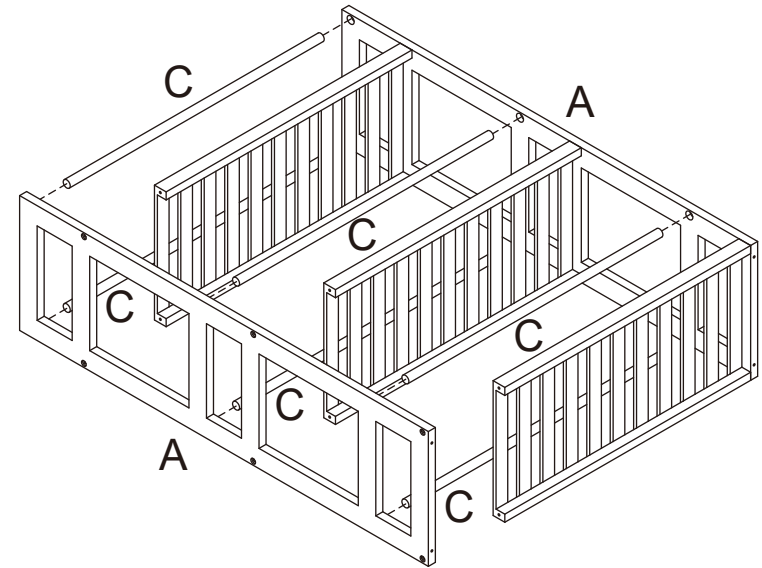

### STEP 3

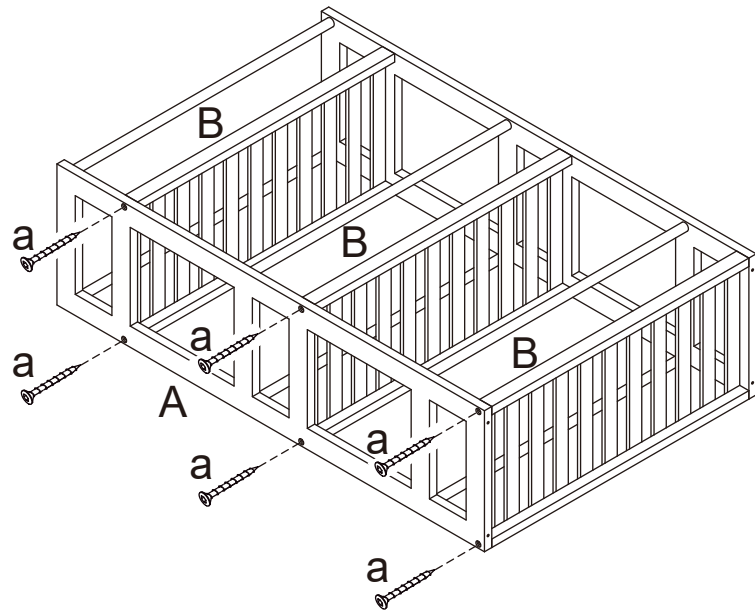

### STEP 4

