



Easy as 1-2-3 Assembly Instruction

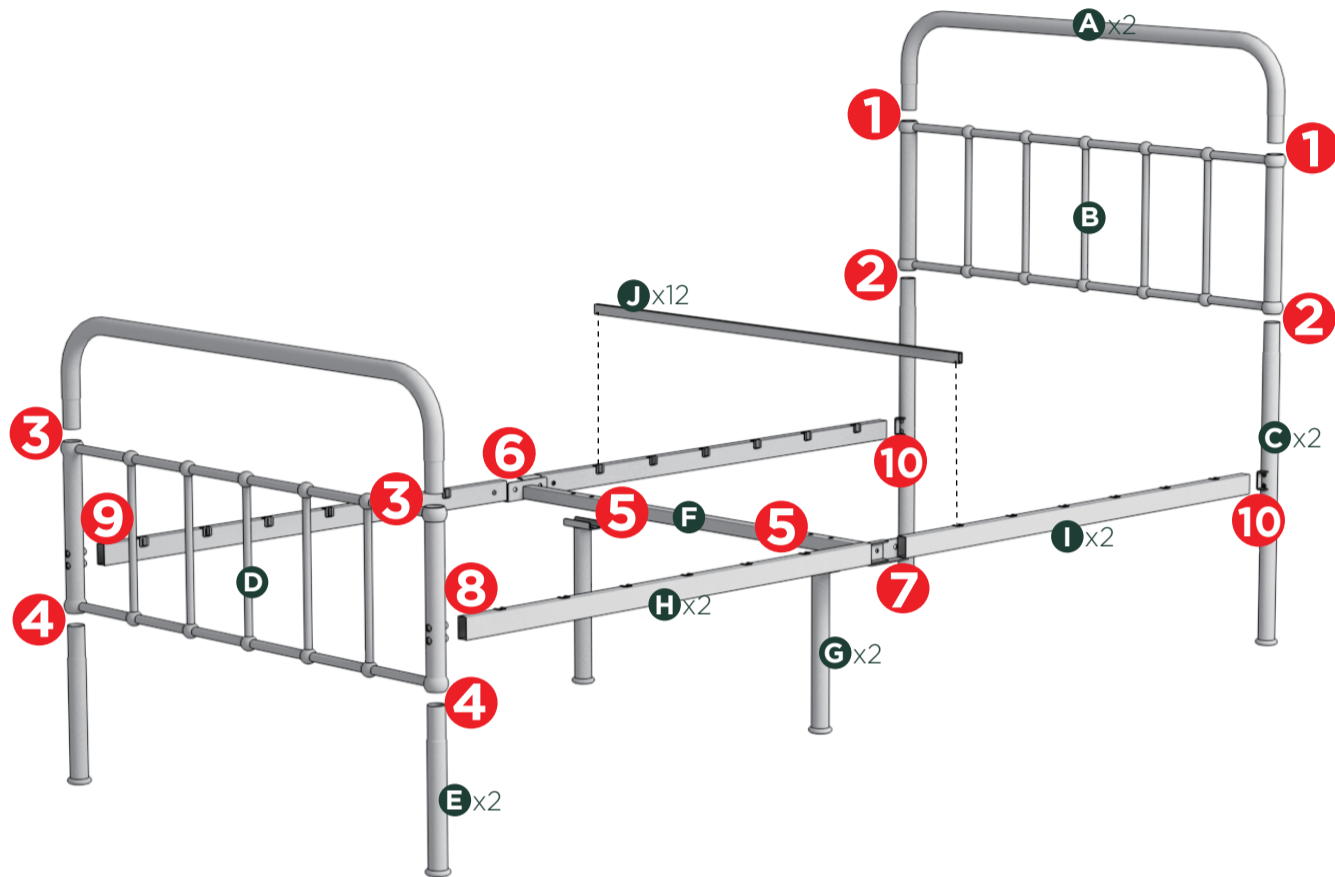

BROOKE BEDFRAME OO

Components

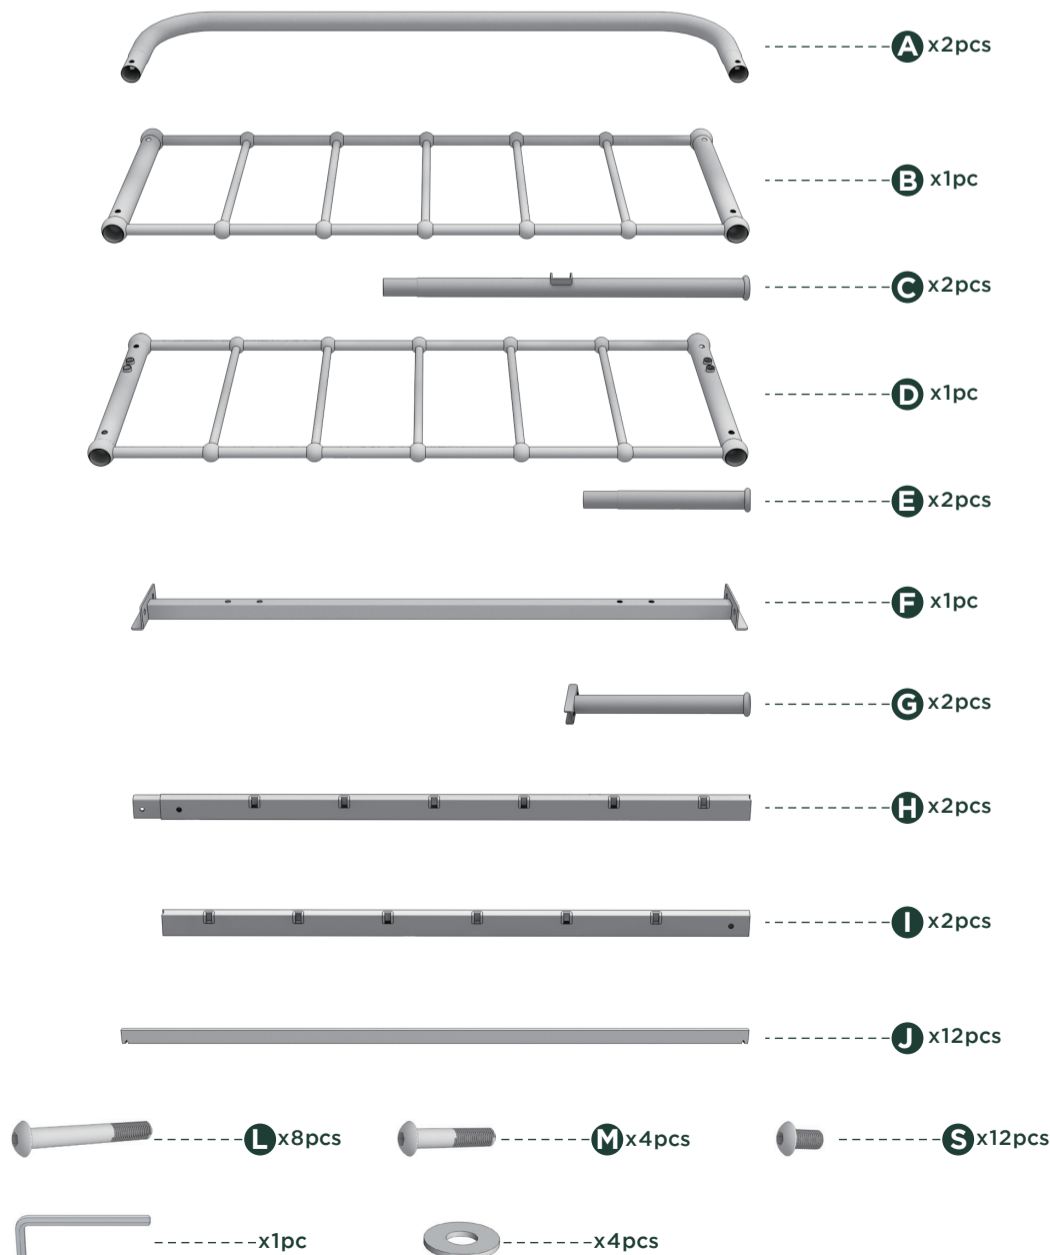

Need more help?

Get in touch so we can help you out.
 AU: 7am - 5pm AEST Monday - Sunday (including public holidays)
 NZ: 9am - 7pm AEST Monday - Sunday (including public holidays)
 1800 051 800


We also have a dedicated phone service for our senior customers and customers with a disability:
 1800 442 100

General enquiries:
 Store queries and store experience feedback
 Product queries


7am - 6pm AEST Monday - Friday (except public holidays)

Love it! Share it! kmart.com.au


1

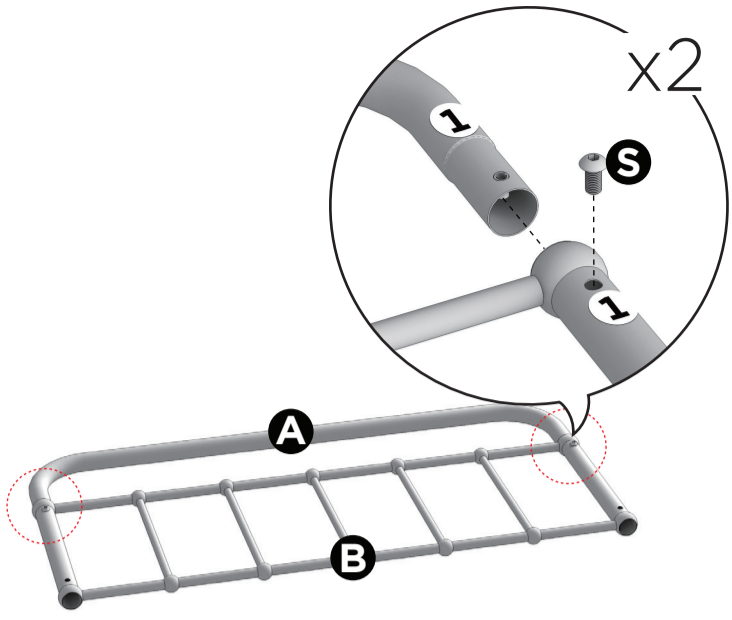


2

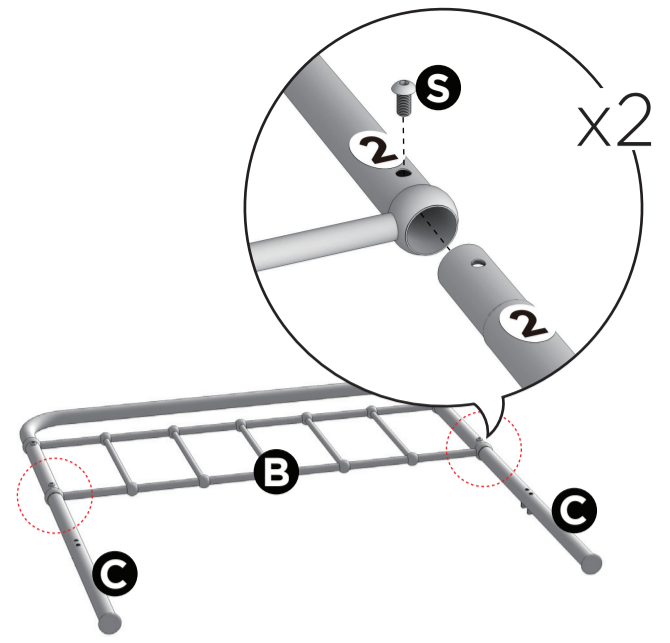


3

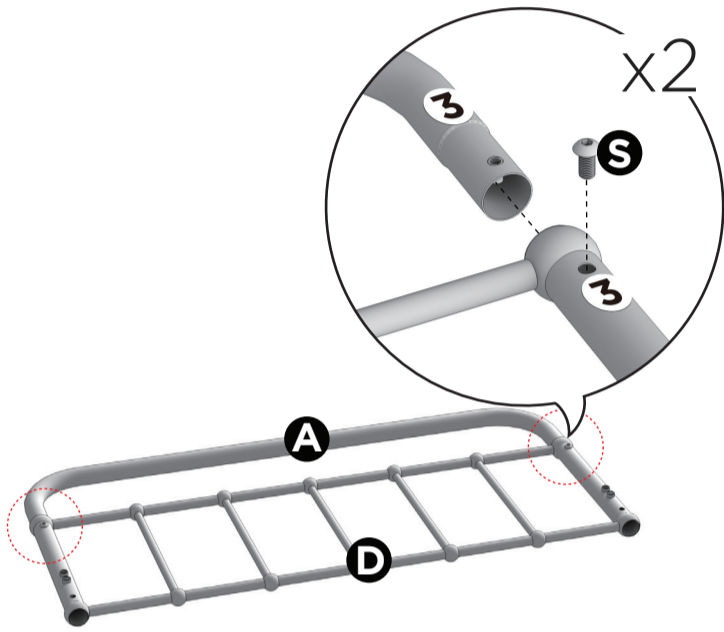


4

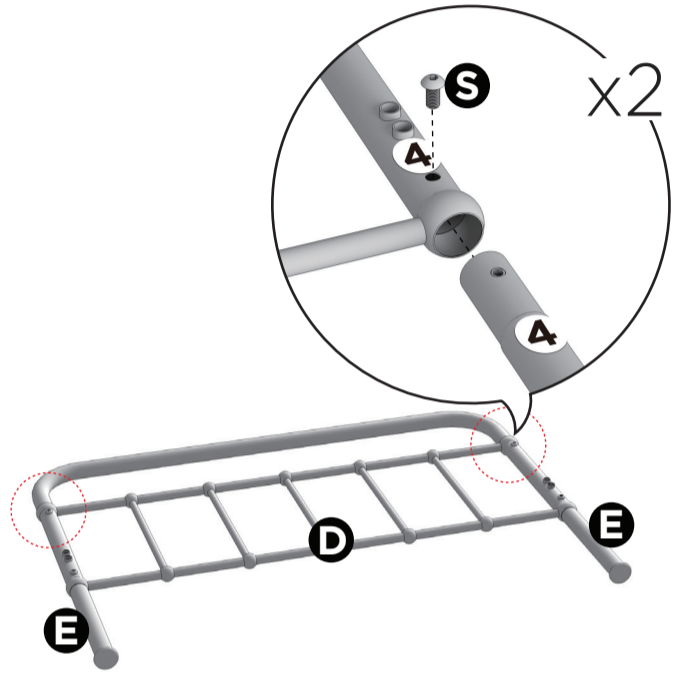


5

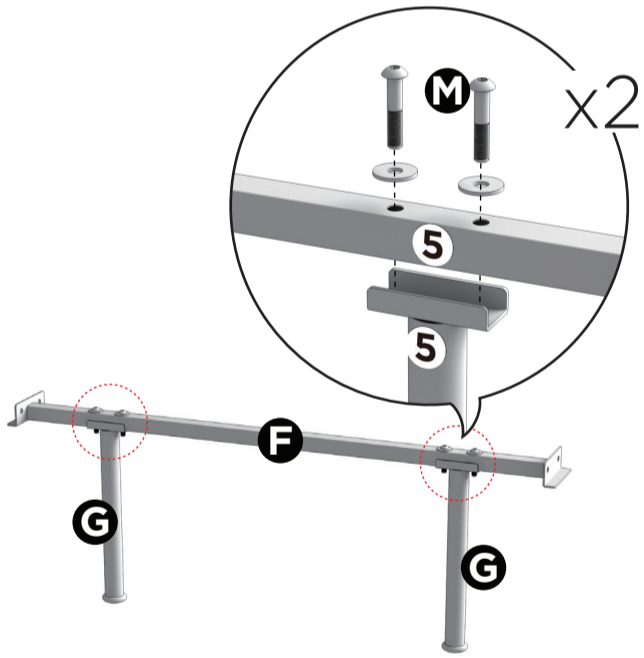


6

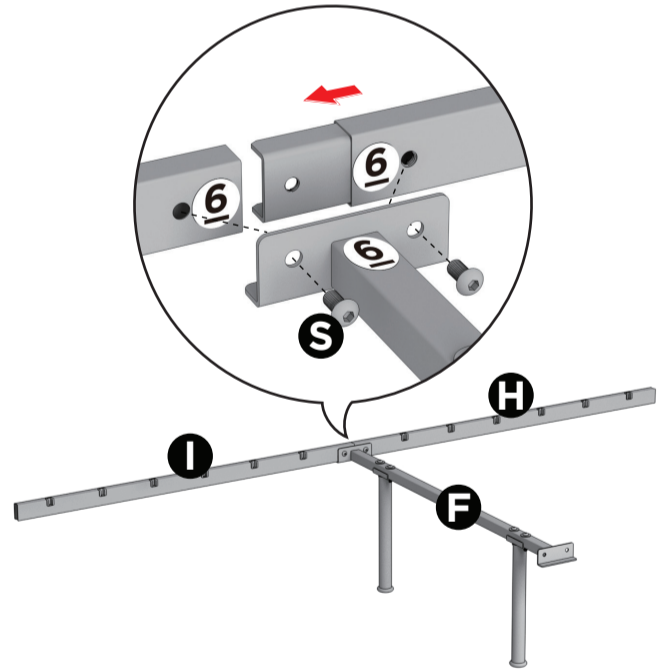


7

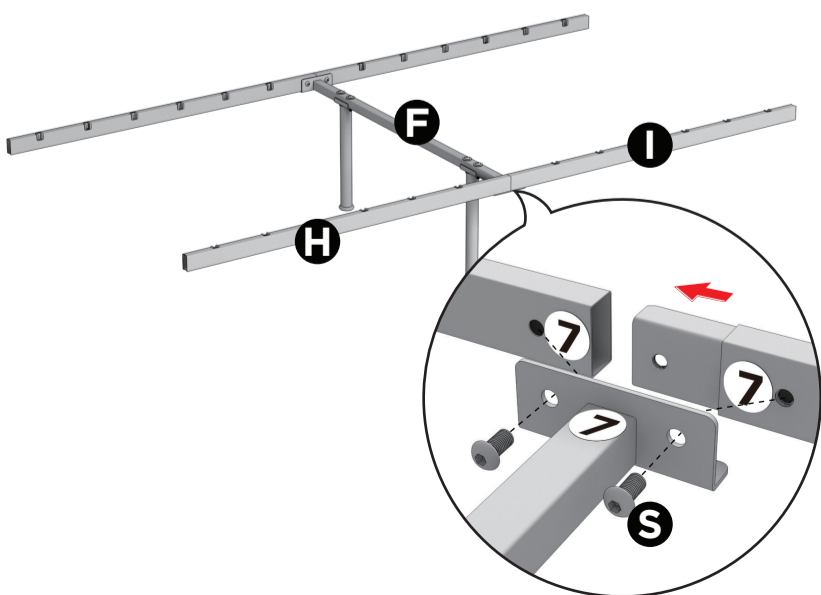


8

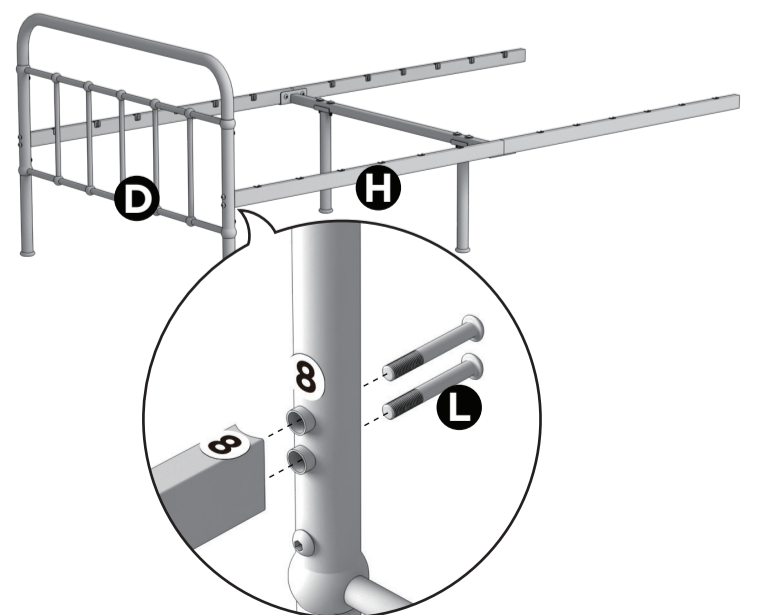


9

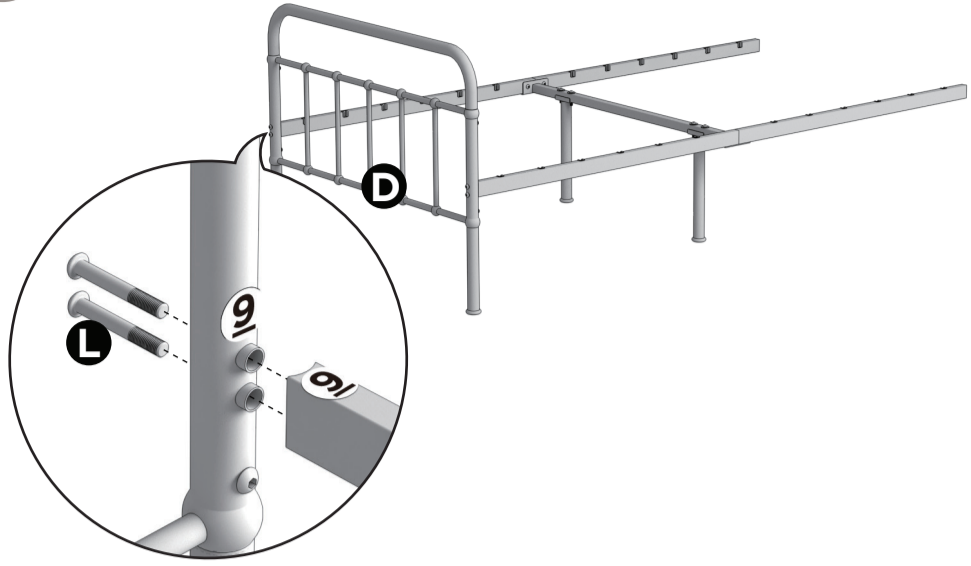


10

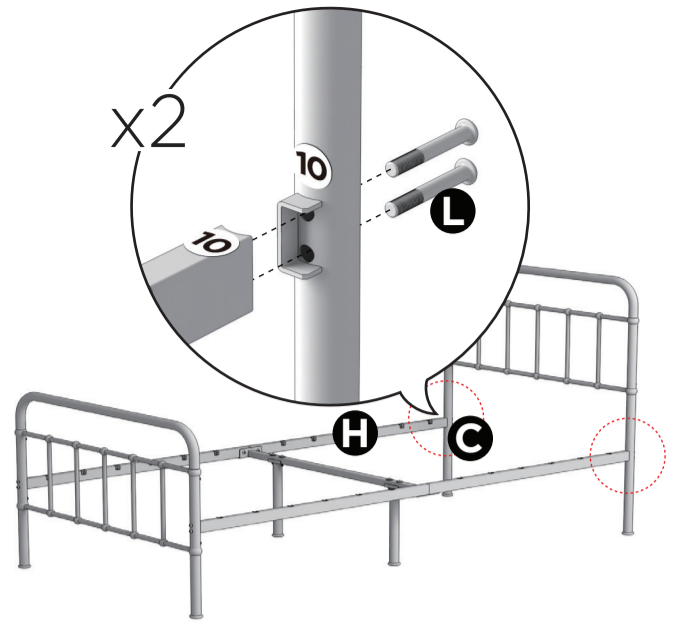

11

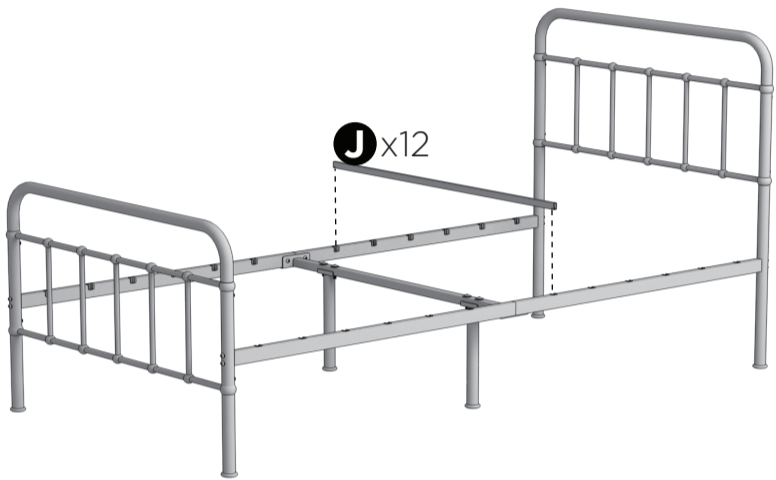

12

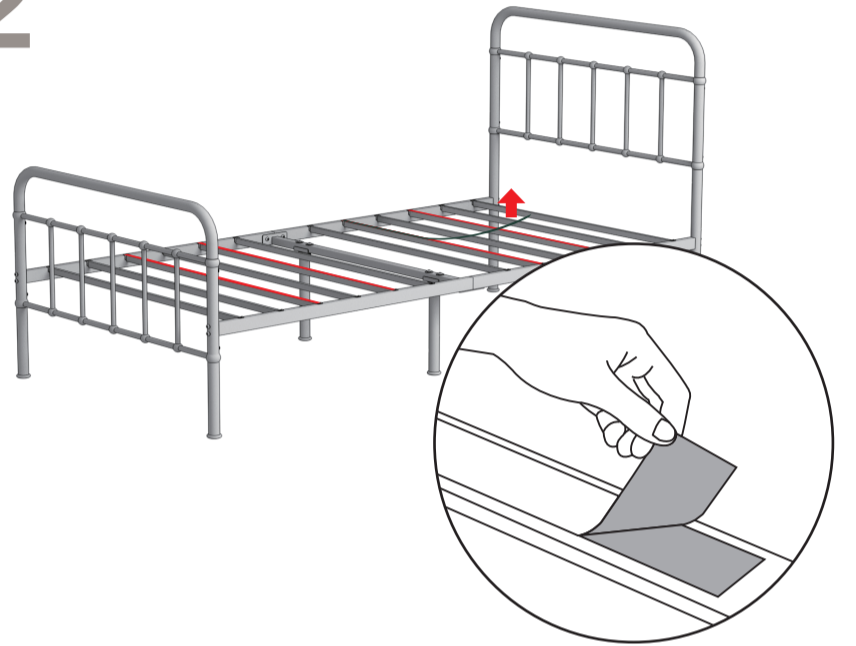

13

