

# Cubby House Instruction Manual

2-6  
years

## Warning

This product is designed for family domestic use only.  
 Adult supervision required.  
 Adult assembly required, making sure all connections are tight. No tools required.  
 Please keep house away from curtains or any objects.  
 Children are not to stand on sidewalls.  
 Install and use on soft surface only.  
 Only one child to use at a time.  
 Check connections regularly.  
 For indoor and outdoor use.  
 Maximum user's weight: 30Kg.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.


## Parts List



A. Base Panel  
x 2pcs



B. Front door panel  
x 1pc

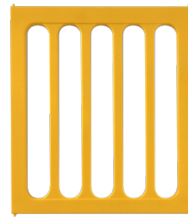

C. Rear door panel  
x 1pc



D. Side panel with window  
x 2pcs



E. Roof panel  
x 2pcs



F. Top gable  
x 2pcs



G. Left corner panel  
x 2pcs




H. Right corner panel  
x 2pcs



I. Plastic nut  
x 16pcs

## Assembly Instruction


Step 1: Find 1pc left corner panel(G) and 1pc right corner panel(H), push them into 1pc base panel(A) and screw the 4pcs plastic nuts(I) in, but don't tighten them. Then get the front door panel(B) and push the top male pin into the hole of the left corner panel(G), then slip the bottom male pin on the door into the base panel(A), at last tighten the 4pcs plastic nuts(I).

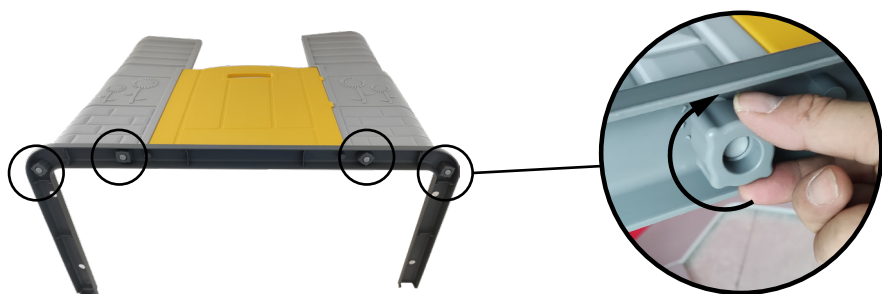

Step 2: Find 1pc left corner panel(G) and 1pc right corner panel(H), push them into 1pc base panel(A) and screw the 4pcs plastic nuts(I) in, but don't tighten them. Then get the rear door panel(C) and push 2pcs top male pins into the hole of the left corner panel(G) and the right corner panel(H), then slip 2pcs bottom male pins on the door into the base panel(A), at last tighten the 4pcs plastic nuts(I).



Step 3: Push the top gables(F) into the corner panels(G/H): the top male pins of the corner panels(G/H) into the holes of the top gables(F). Then push the 2pcs base panels(A) together.

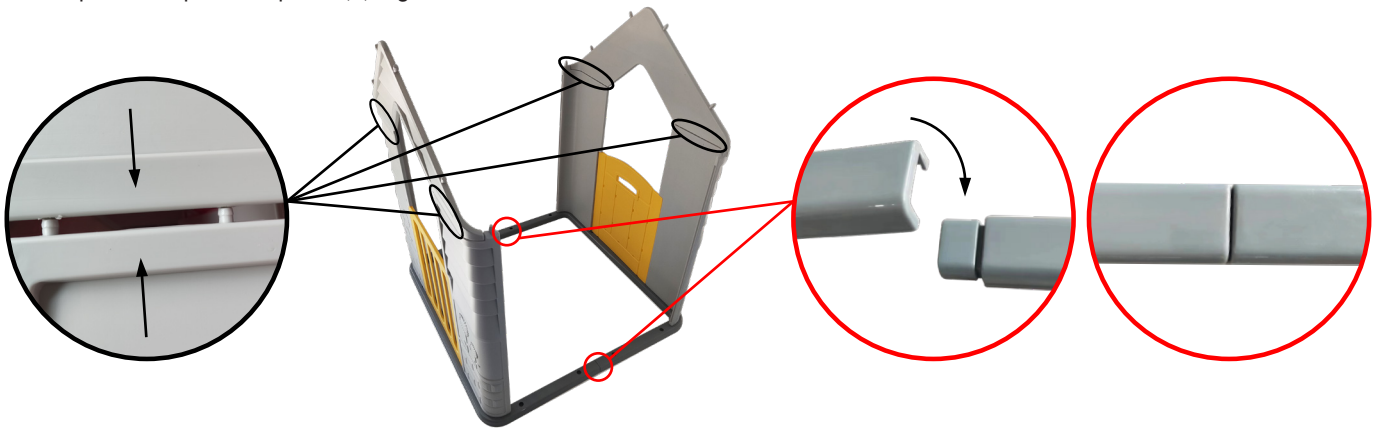


Step 4: This is what the front should look like.




Step 5: This is what the back should look like.




Step 6: Push the side panels(D) into the base panels(A): the top male pins of the side panels(D) into the holes of the base panels(A).

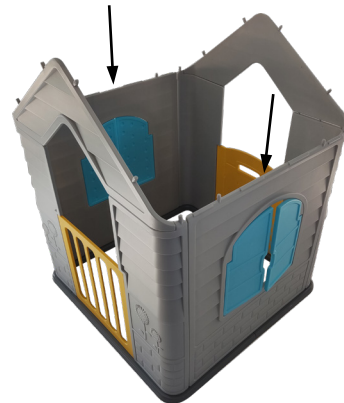

Step 7: Now screw 8pcs plastic nuts(I) under the base panels.

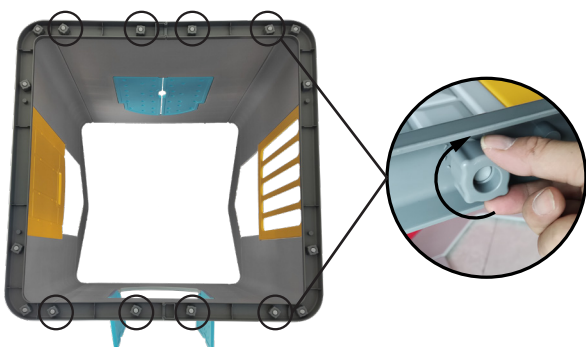

Step 8: Now line up the 2pcs roof panels(E) sliding them together first and then locating them to the side panels(D) and the top gables(F), and then tap them down to lock.

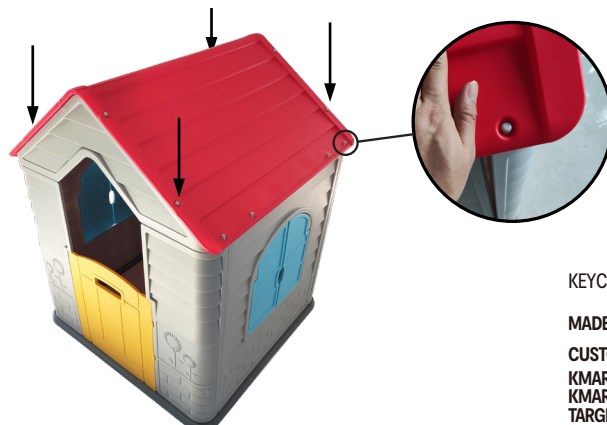

KEYCODE: 43-444-847

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567