




Assembly Instruction

42871637 SB BED FRAME










CARE INSTRUCTIONS: WIPE CLEAN WITH A DAMP CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY. FOR DOMESTIC USE ONLY.

WARNING: TIGHTEN ALL THE SCREWS BEFORE USE. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. **MAXIMUM SAFE LOAD: 150KG.**

Hardware List

					
8 x A Bolt (M8x20 mm)	8 x B Bolt (M8x30 mm)	4 x C Bolt (M6x20 mm)	4 x D Bolt (M6x30 mm)	12 x E Bolt (M6x40 mm)	36 x F Washer
					
2 x G Bracket (L)	2 x H Bracket (R)	1 x I Tool	4 x J Non-slip Washer	16 x K Spring Washer Large	16 x L Spring Washer Small

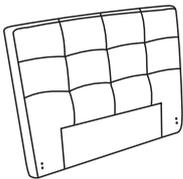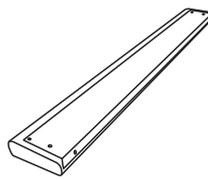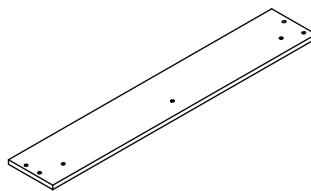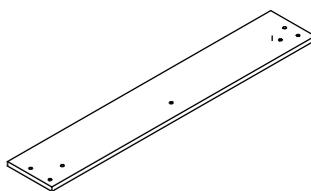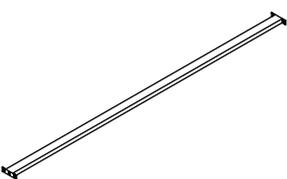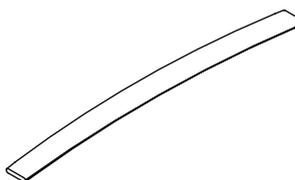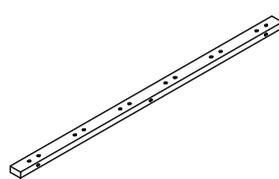Parts


			
① - 1pc	② - 4pcs	③ - 1pc	
			
④ - 2pcs	⑤ - 2pcs	⑥ - 2pcs	
			
⑦ - 1pc	⑧ - 12pcs	⑨ - 4pcs	⑩ - 24pcs

Step 1

Fix feet ② to parts ① and ③ using non-slip washers J, as shown.



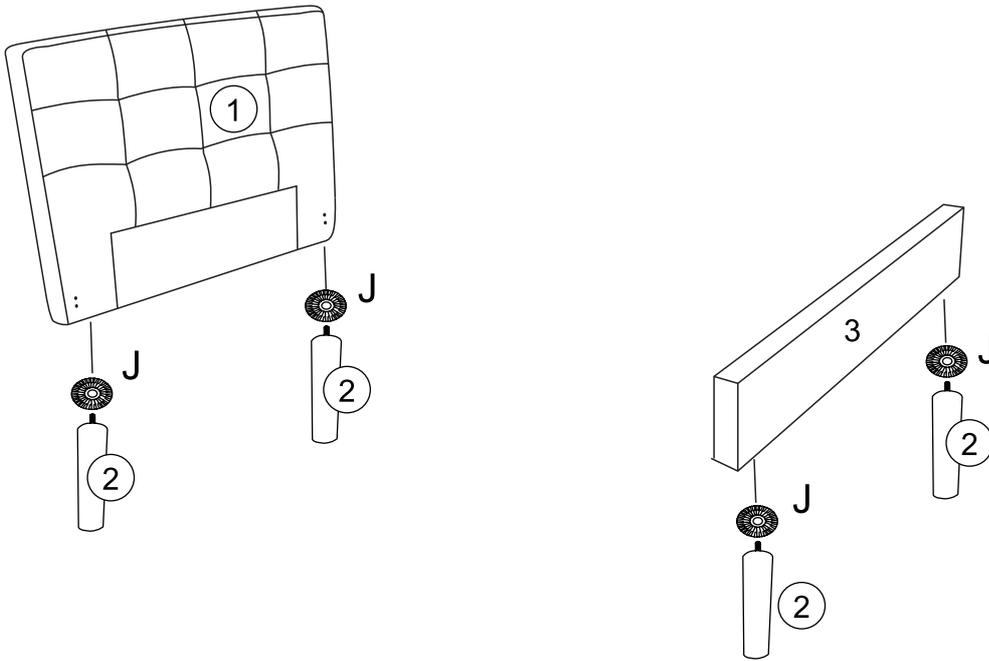4 x J



Step 2

Please note: Do not fully tighten bolts until all parts have been assembled.
Fix foot ⑥ to parts ④ and ⑤ using washers F, bolts D, and tool I, as shown.



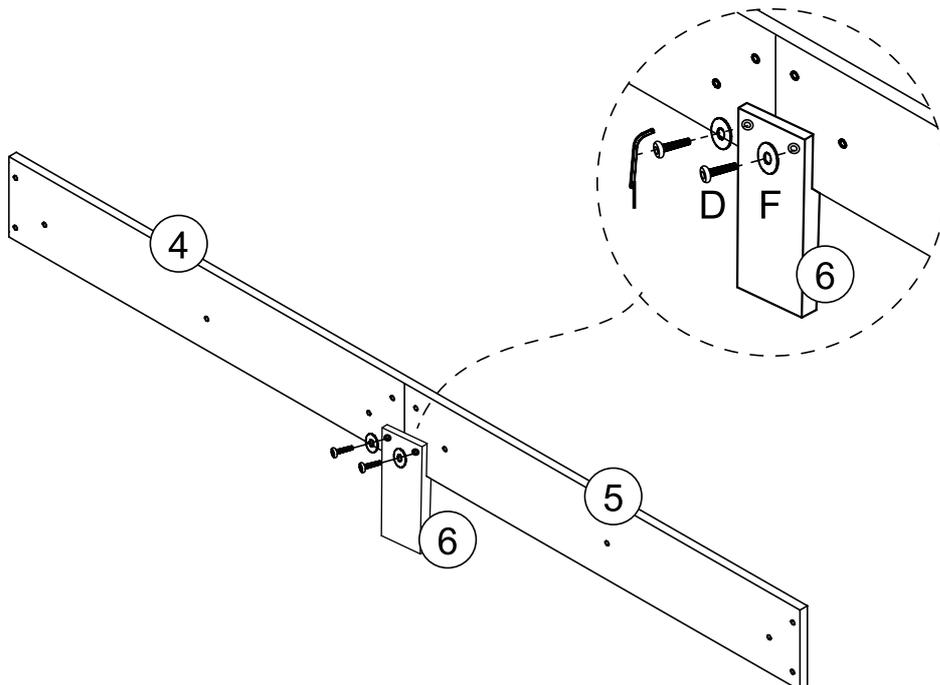
4 x F



1 x I



4 x D




x2

Repeat for both side parts.

Step 3

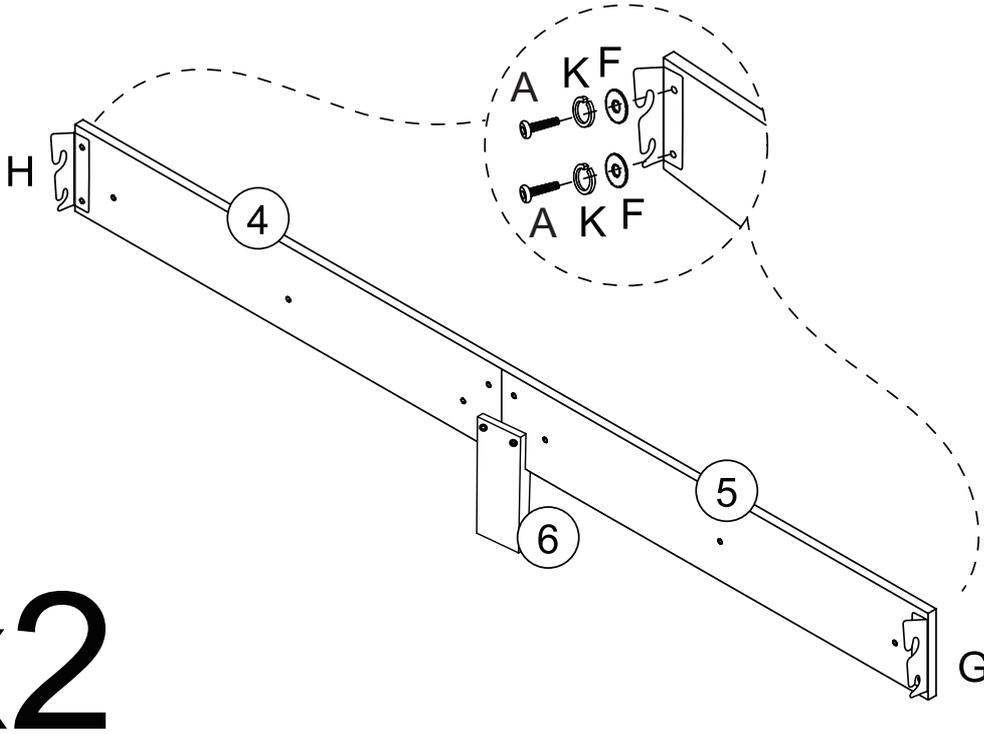Fix brackets **G** and **H** to parts ④ and ⑤ using washers **F**, spring washers **K**, bolts **A**, and tool **I**, as shown.



8 x A



8 x F



2 x G



2 x H



1 x I

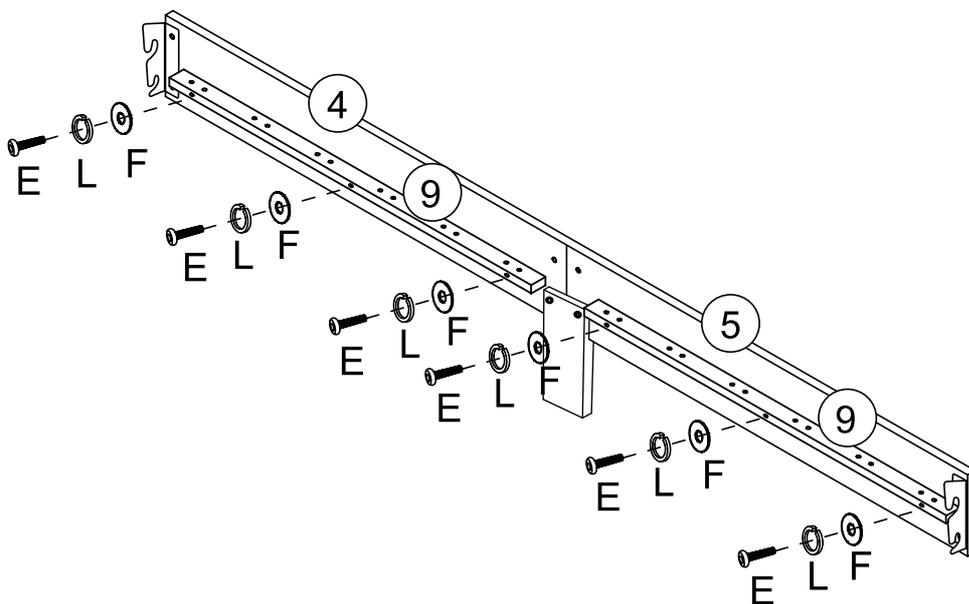


8 x K

x2

Step 4

Fix parts ⑨ to parts ④ and ⑤ using washers **F**, spring washers **L**, bolts **E**, and tool **I**, as shown.



12 x E



12 x F



1 x I



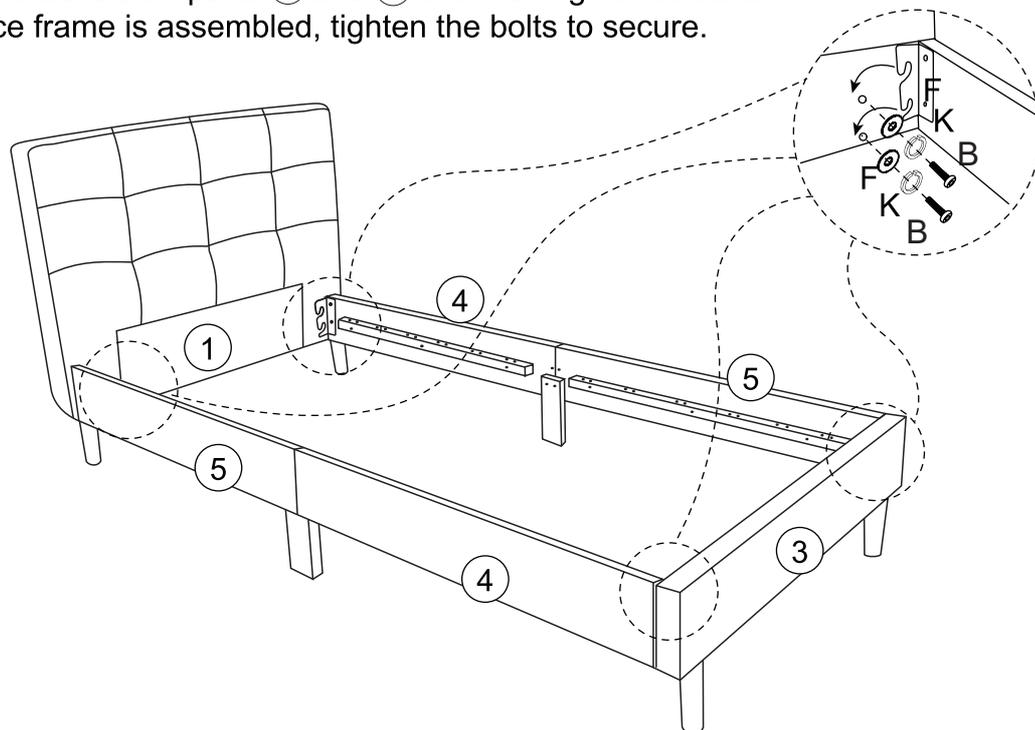
12 x L

x2

Repeat for both side parts.

Step 5

Screw bolts **B** through washers **F** and spring washers **K** to secure to parts ① and ③, using tool **I**, as shown. Only screw in half the bolt length. Slot brackets on parts ④ and ⑤ over half tightened bolts. Once frame is assembled, tighten the bolts to secure.



8 x B



8 x F



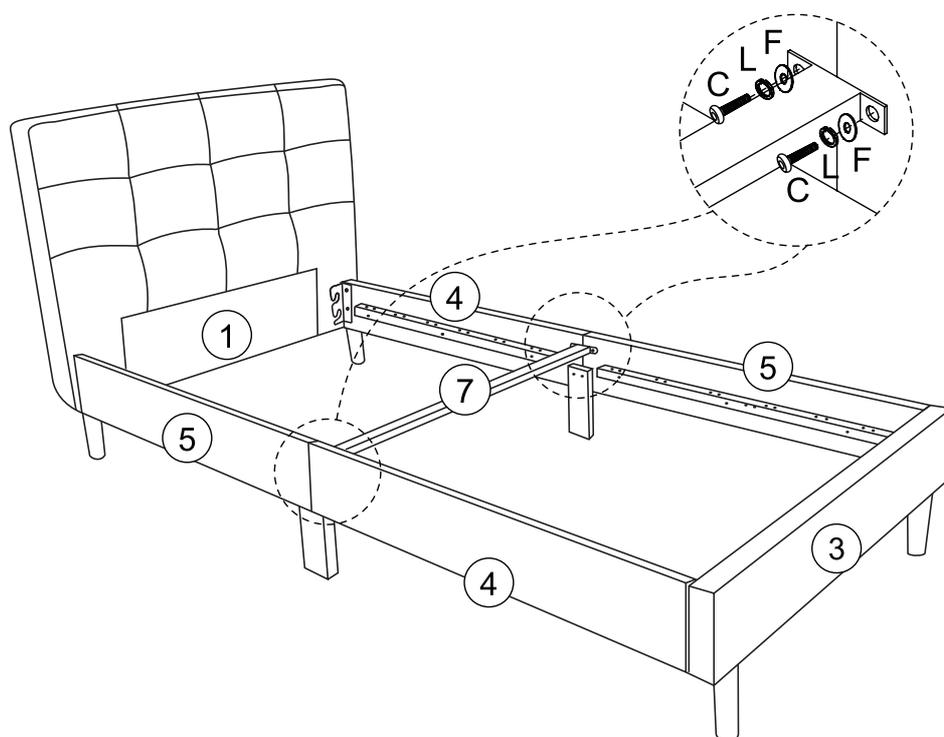
1 x I



8 x K

Step 6

Fix support rail ⑦ to assembled bed frame using washers **F**, spring washers **L**, bolts **C**, and tool **I**, as shown.



4 x C



4 x F



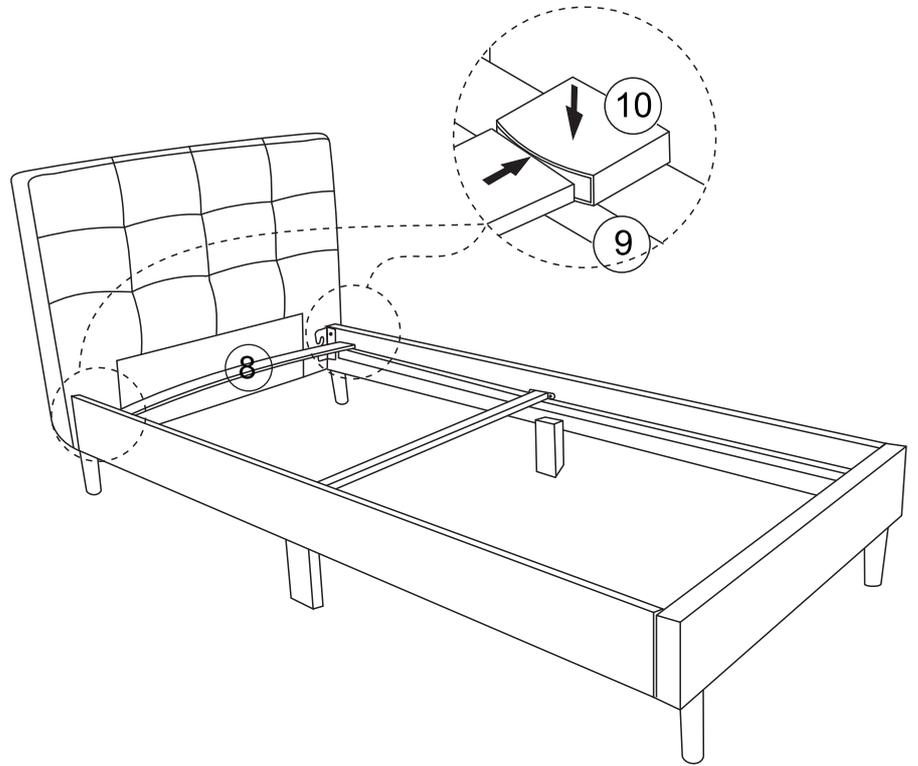
1 x I



4 x L

Step 7

Fit loose end part ⑩ to the ends of the slats ⑧
Press part ⑩ down on holes in side support rails to lock in place.




x12

Repeat for all 12 slats.

Step 8

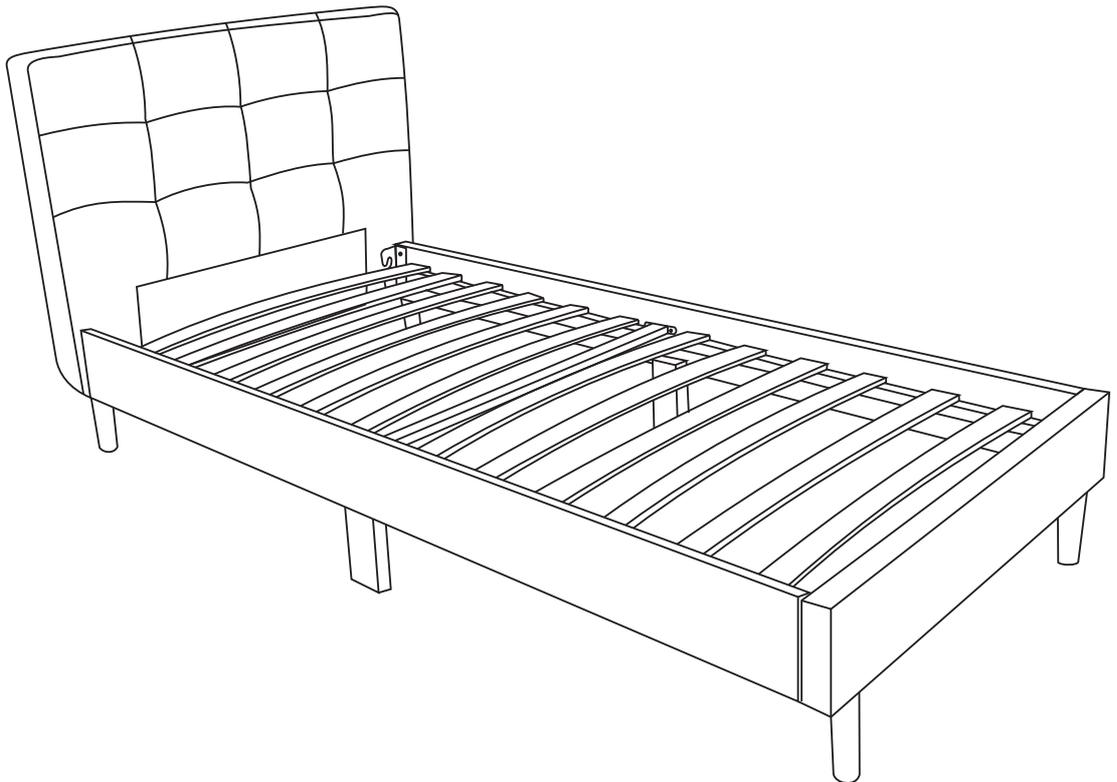Your single bed is ready for use.



Please note: Before use, ensure bolts are fully tightened. Do not over tighten bolts.