




21x28.5cm




FOLDING DOWN TROLLEY:

		
Remove the canopy. Press down the support poles.	Pull straight up on toggle inside trolley to fold up.	It is now ready to be stored.



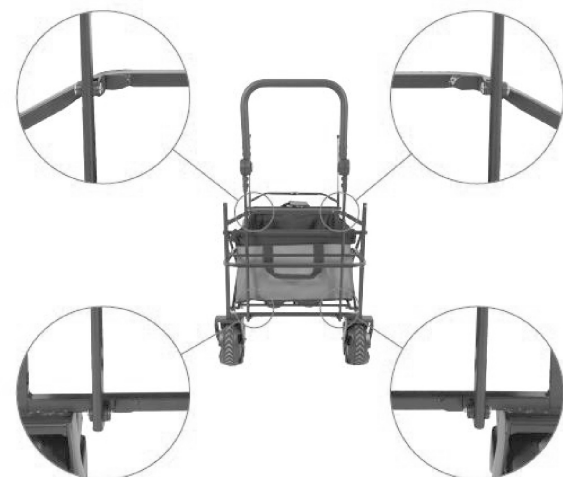

FULLY ASSEMBLED TROLLEY:



ASSEMBLY OF TROLLEY:

		
Spread the trolley frame open and allow it to come to a fully extended position. Use caution near moving parts to prevent pinching.	Pull up the support poles on each corner.	Position the top of each canopy rod into the cut-out notch of each inside corner of canopy to keep canopy securely installed on the trolley.

HOW TO INSTALL PUSH HANDLE

	
Accessories and tools	Push Handle
	
Use 1pc screw, 1pc nut and 2pcs washer to connect the push handle with the frame. The handle should be assembled on the outside of the anchor point of the trolley body. The washers need to be set in the middle of anchor point and handle bar.	Press large round buttons in with thumbs while lifting handle to desired height with fingers.