



Easy as 1-2-3 Assembly Instruction

TIMBER BED FRAME

Instructions

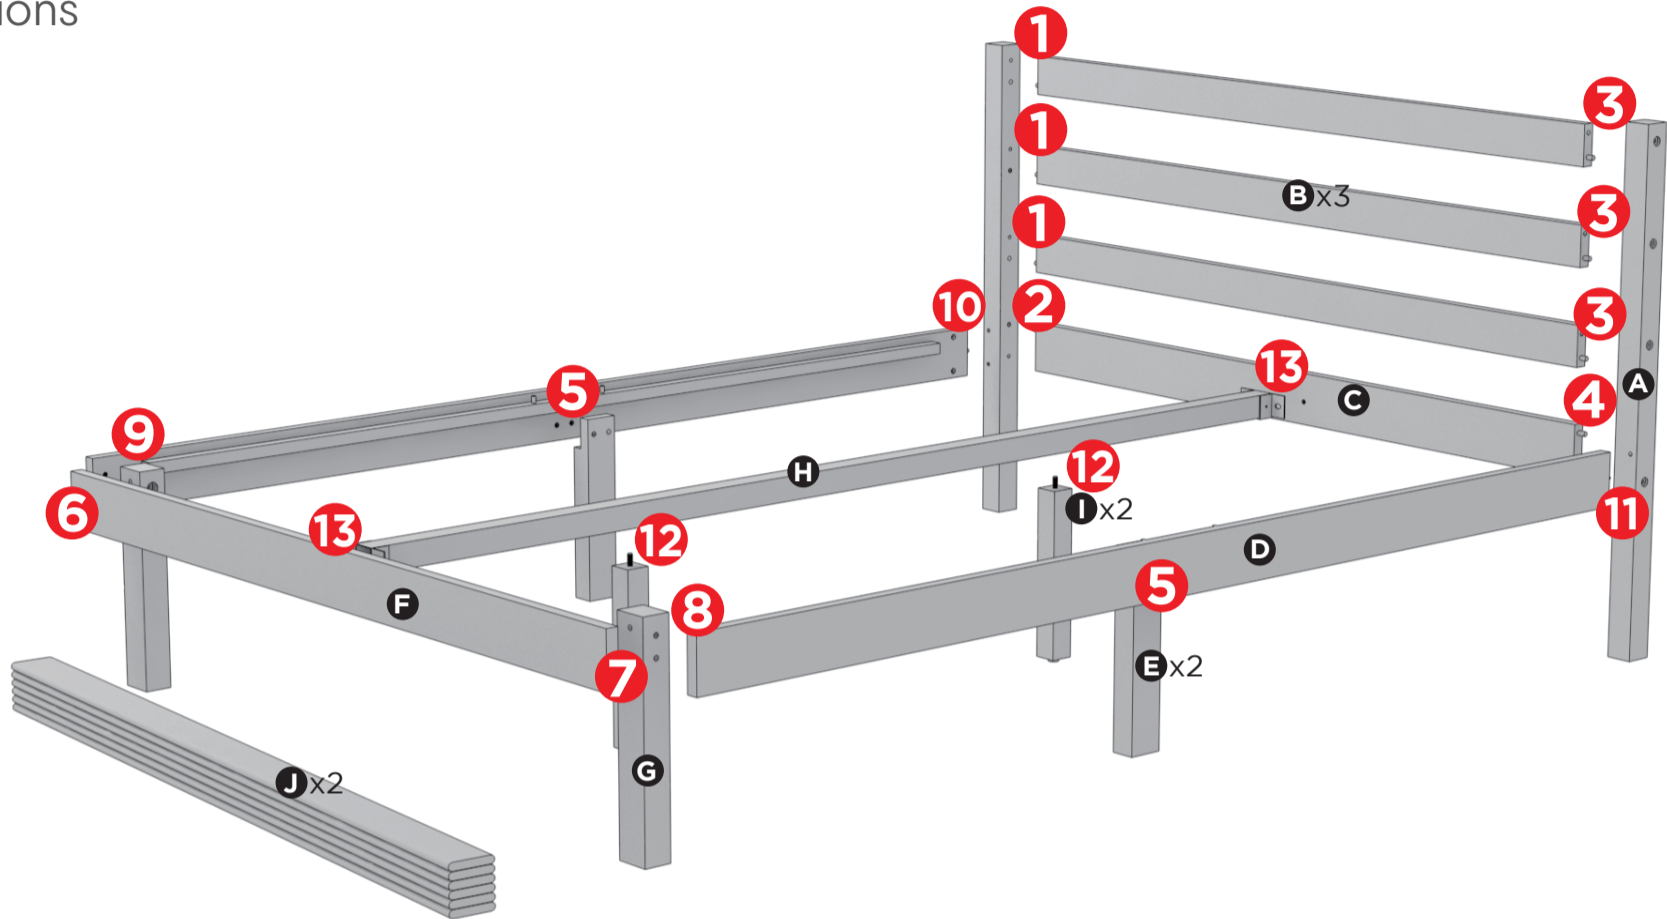

Components

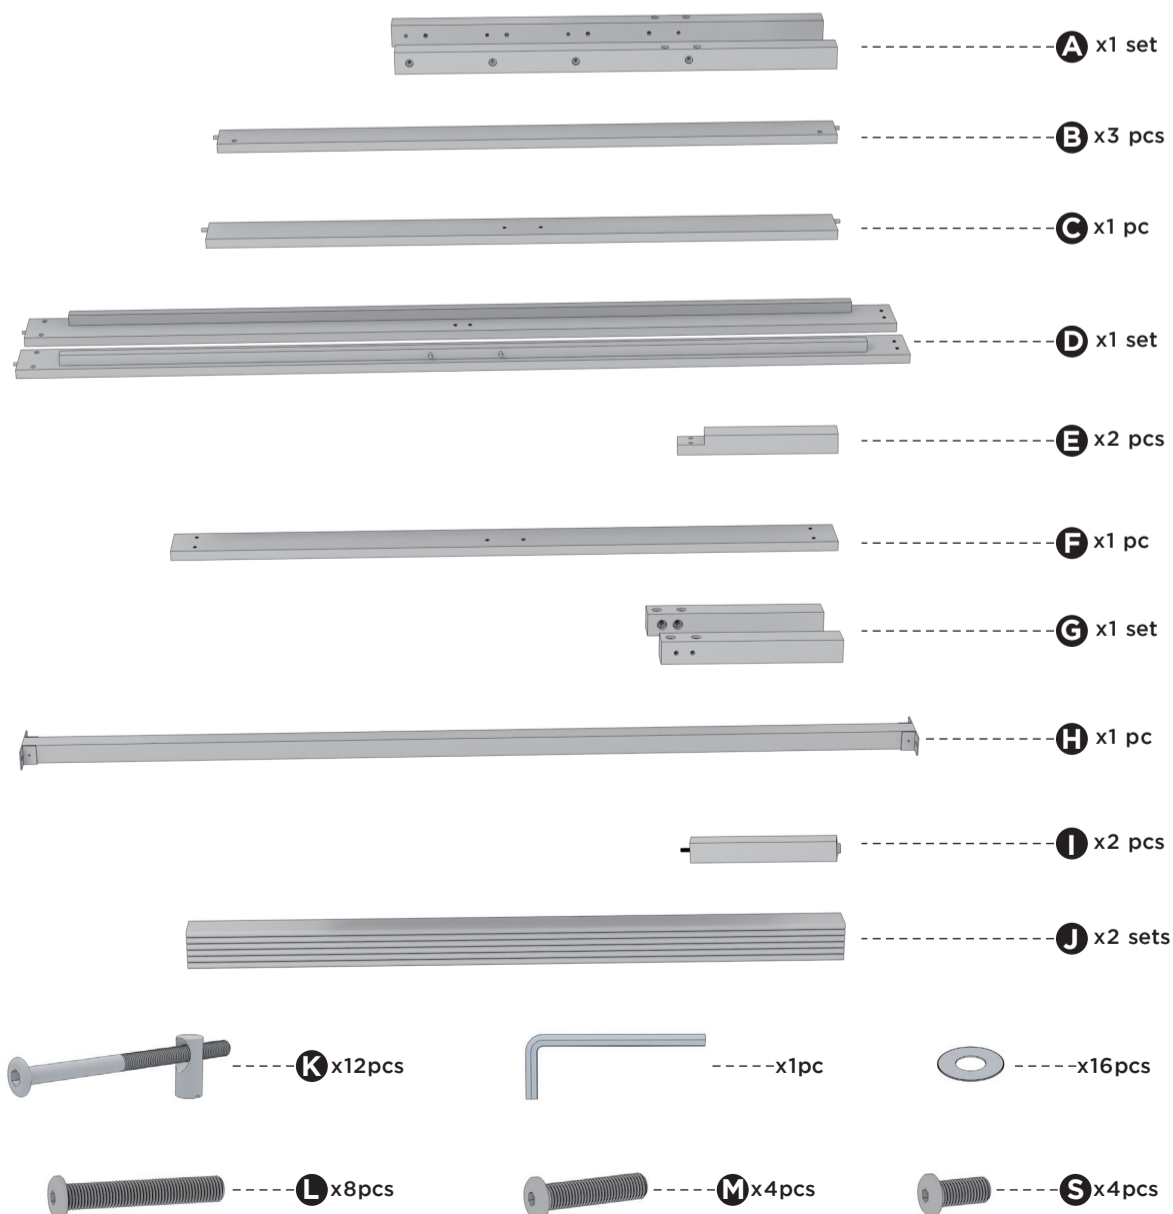

Need more help?









Get in touch so we can help you out.
AU: 7am - 5pm AEST Monday - Sunday
(including public holidays)
NZ: 9am - 7pm AEST Monday - Sunday
(including public holidays)
1800 051 800

We also have a dedicated phone service for our senior customers and customers with a disability:
1800 442 100


General enquiries:
Store queries and store experience feedback
Product queries

7am - 6pm AEST Monday - Friday (except public holidays)


Love it! Share it! kmart.com.au

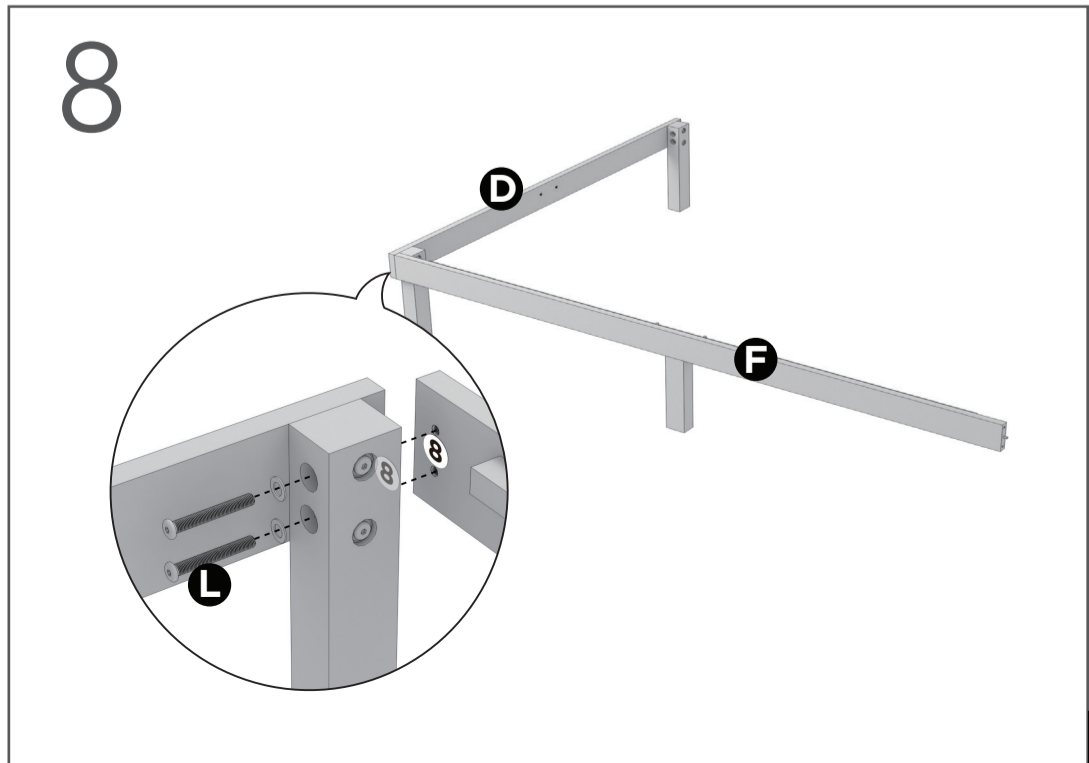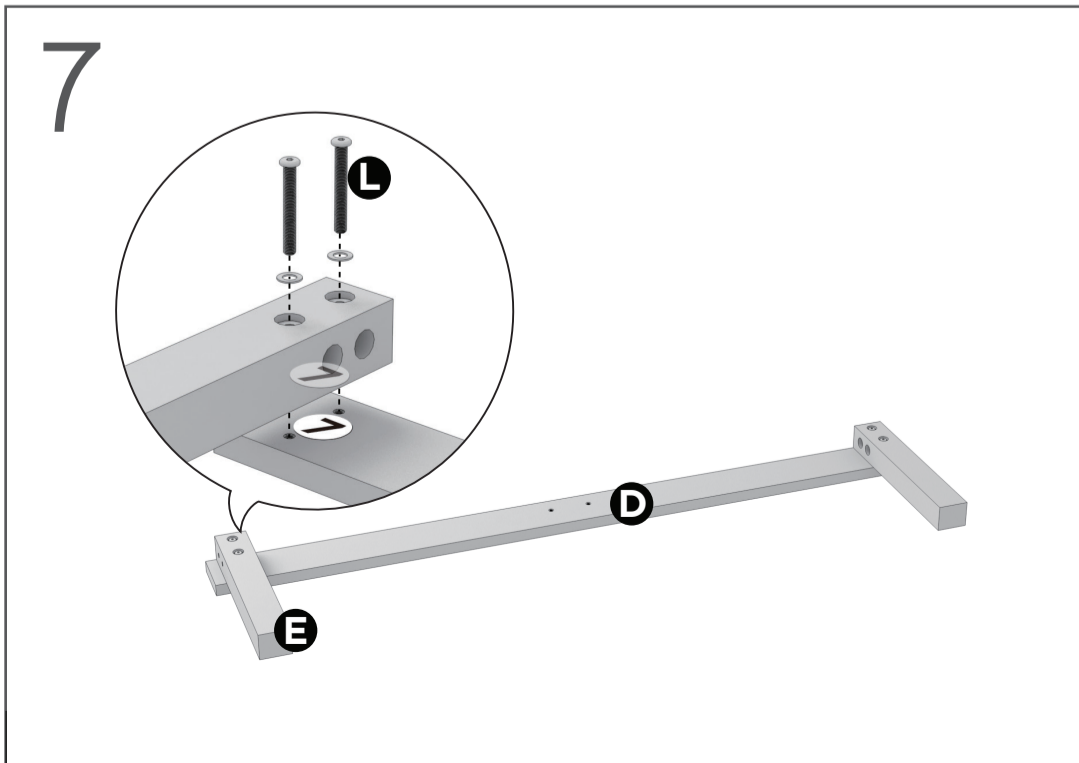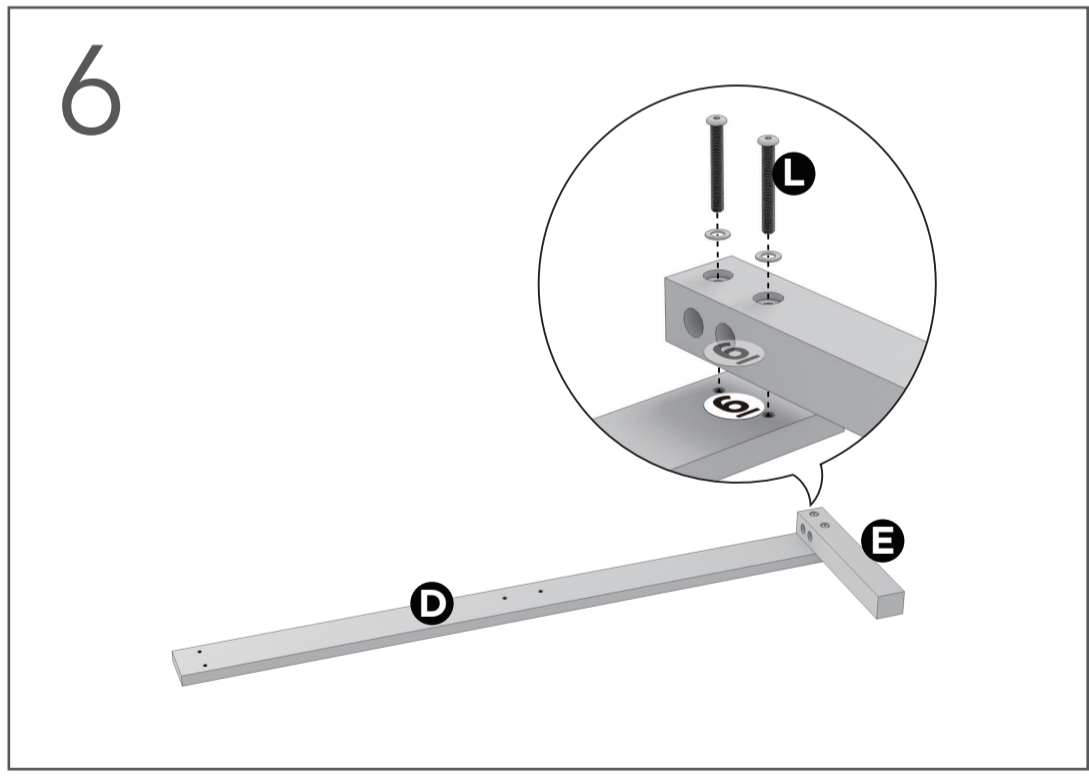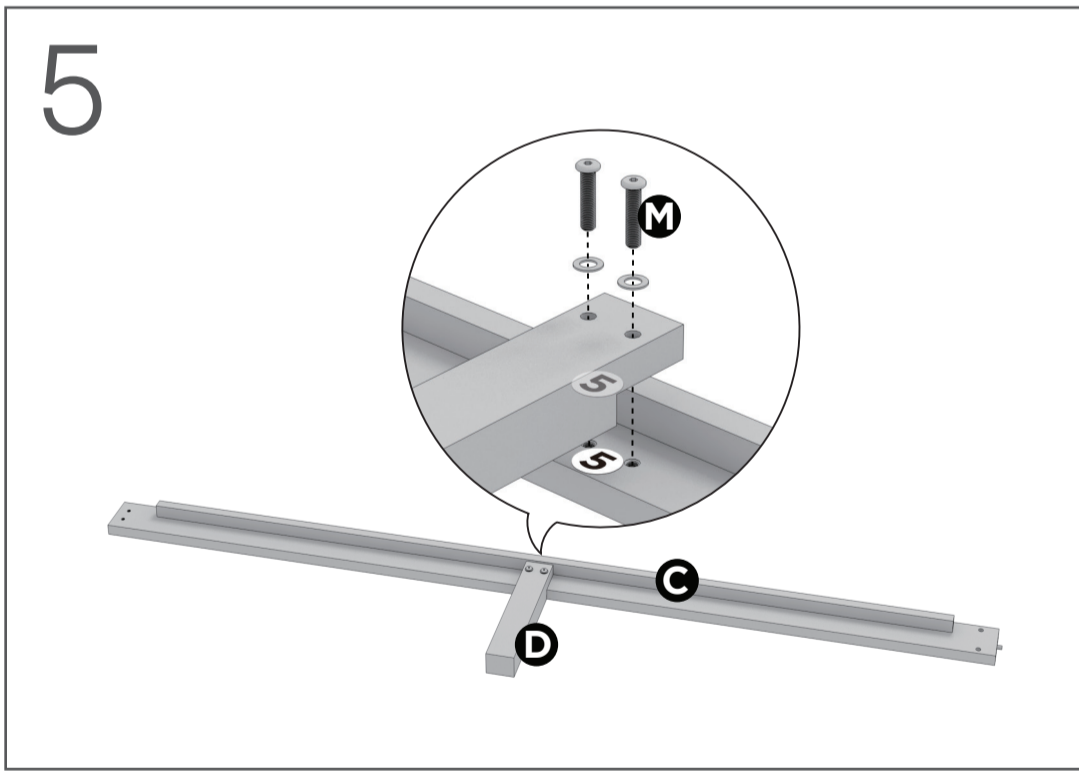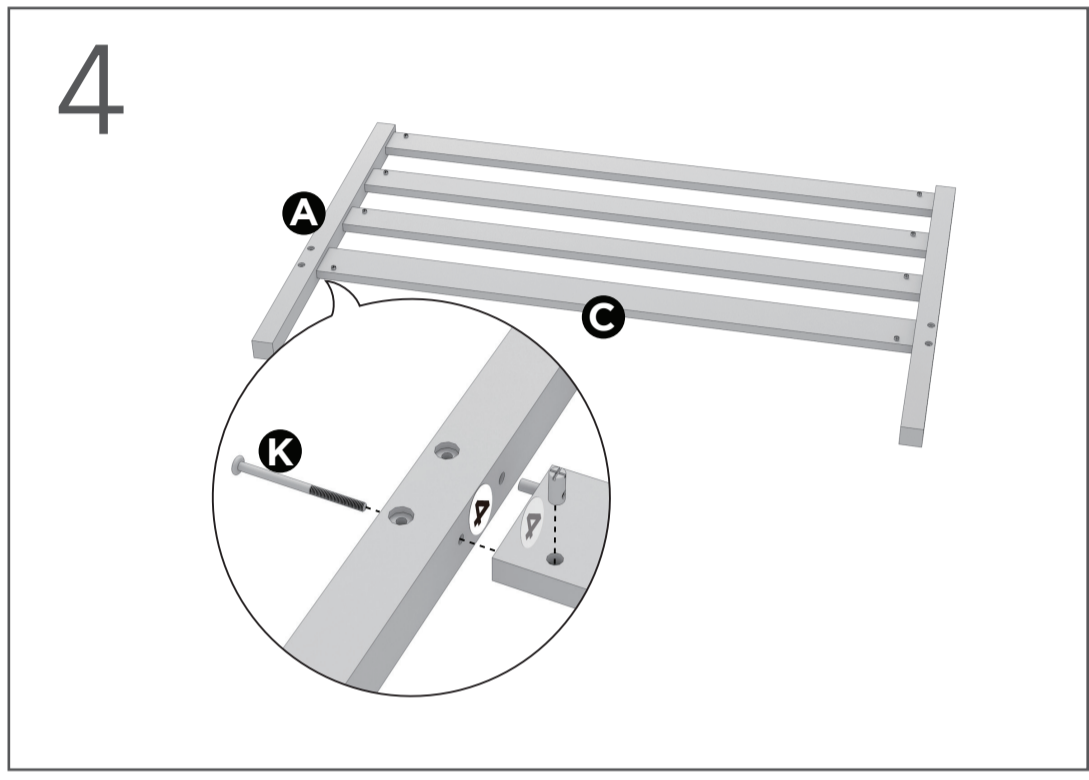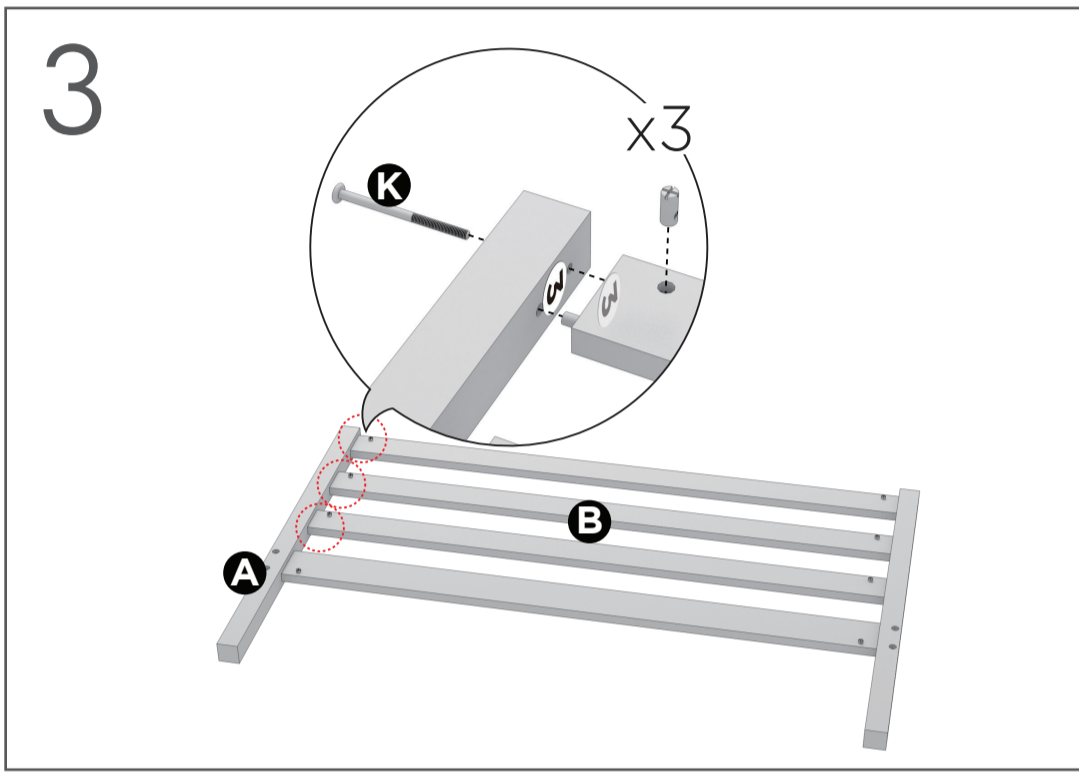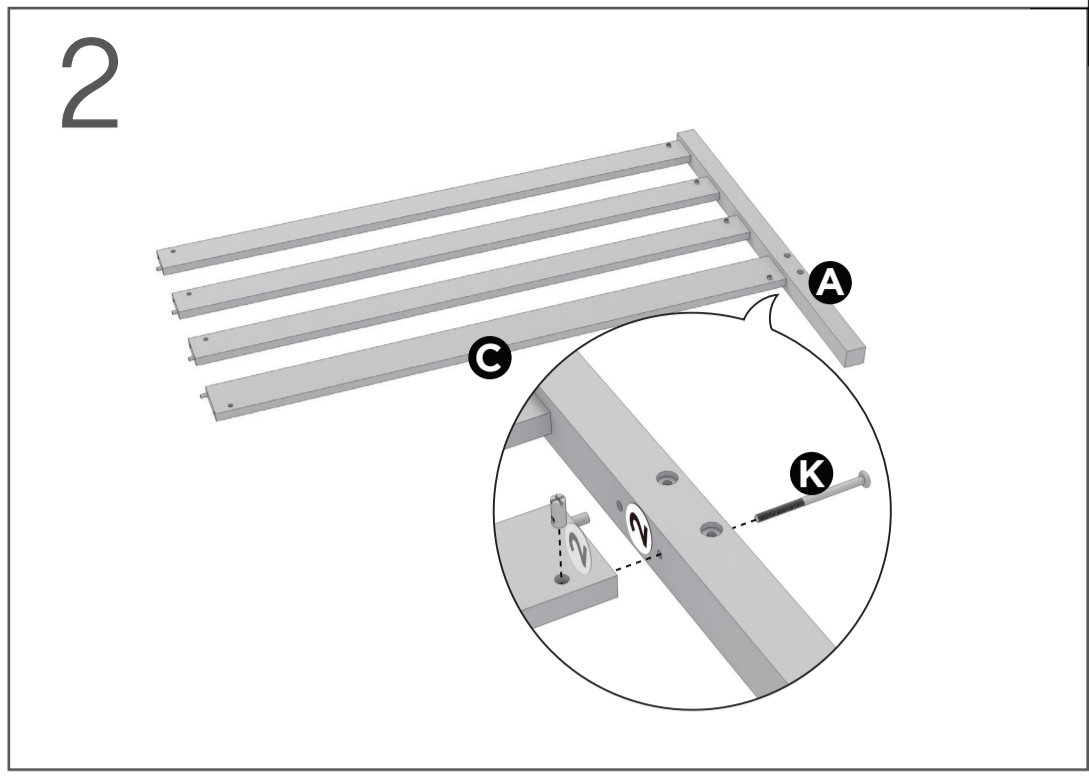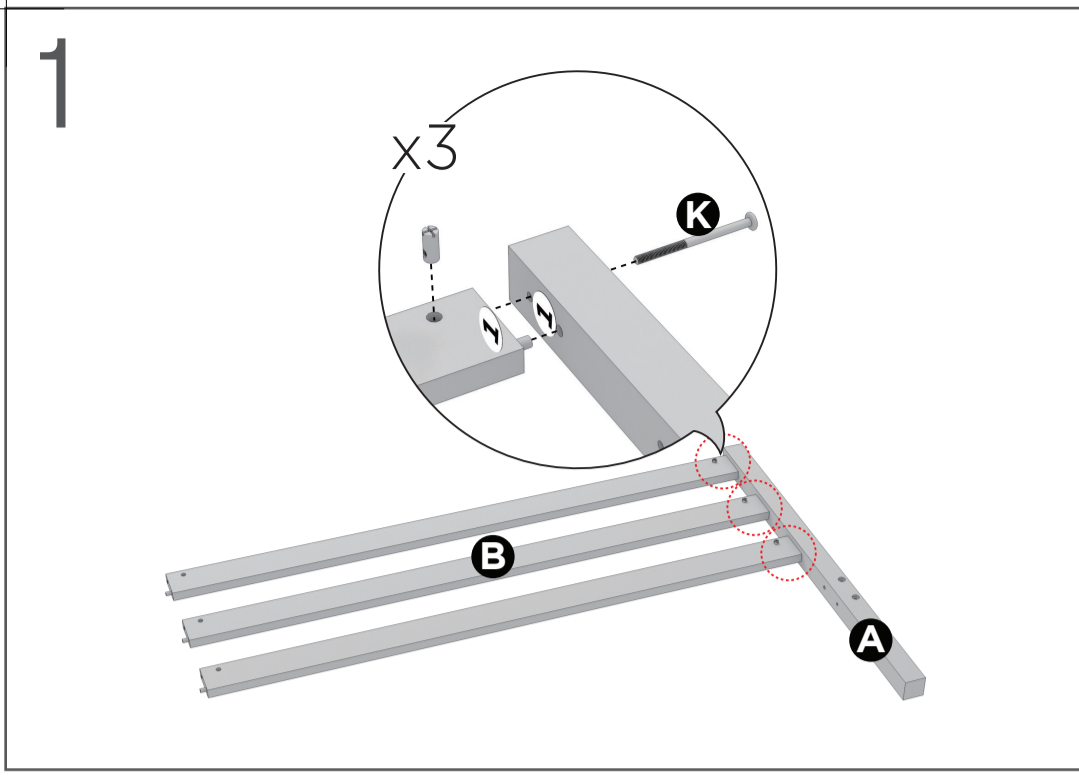


9

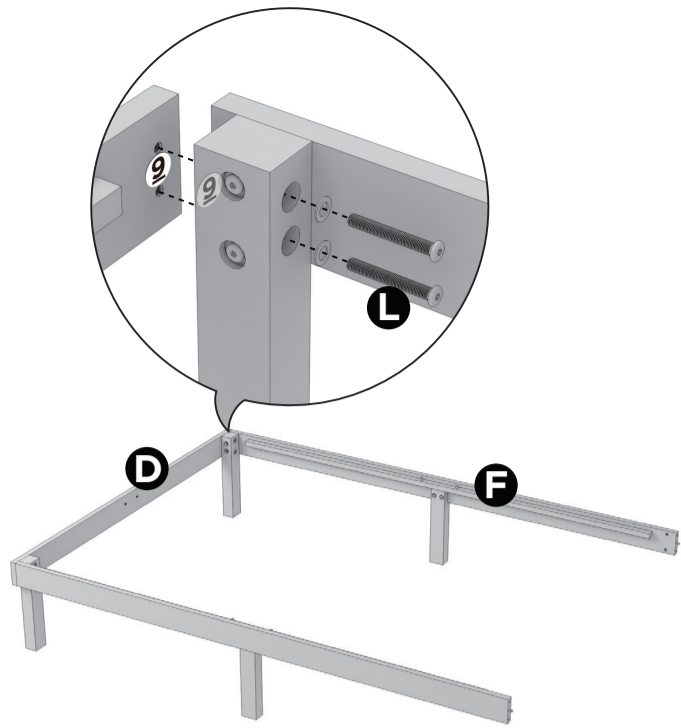


10

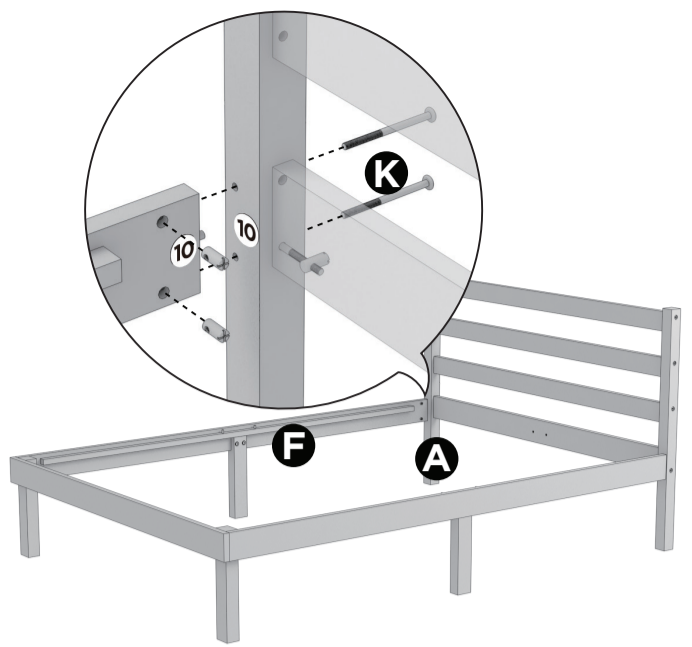


11

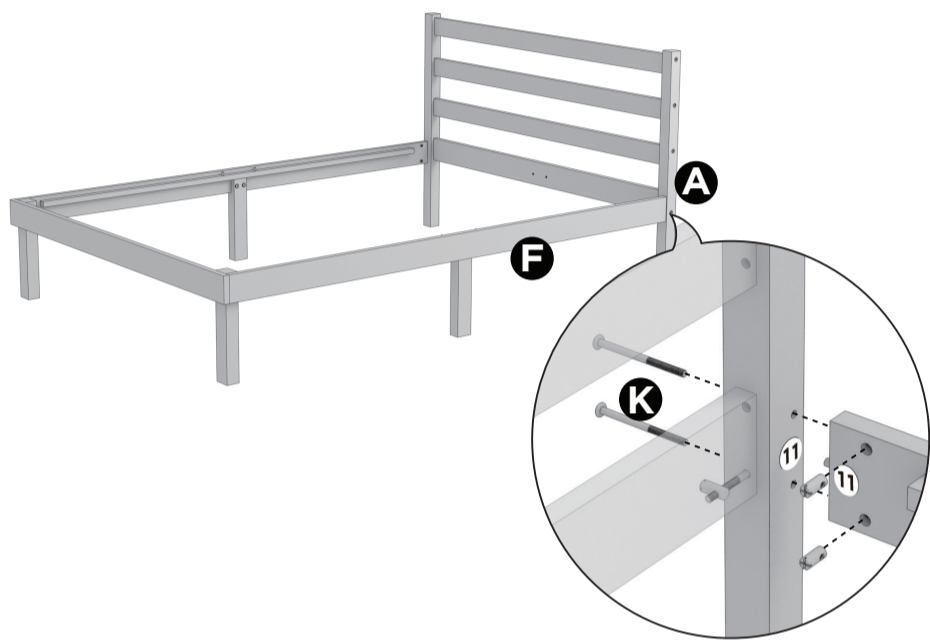


12

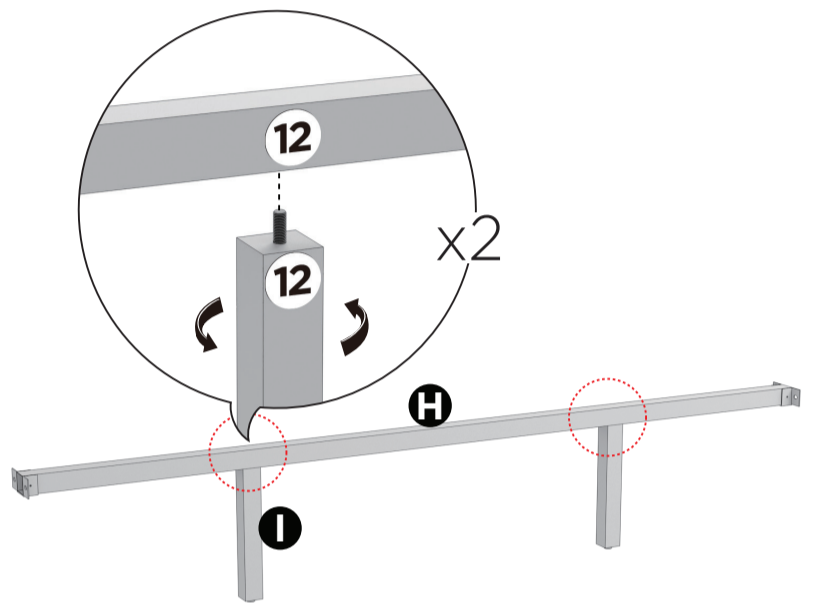


13

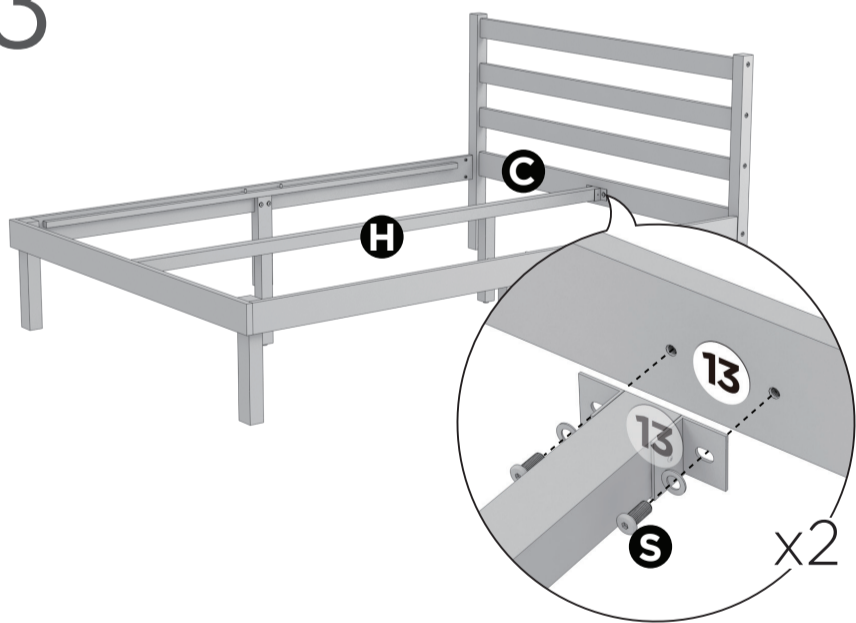

14

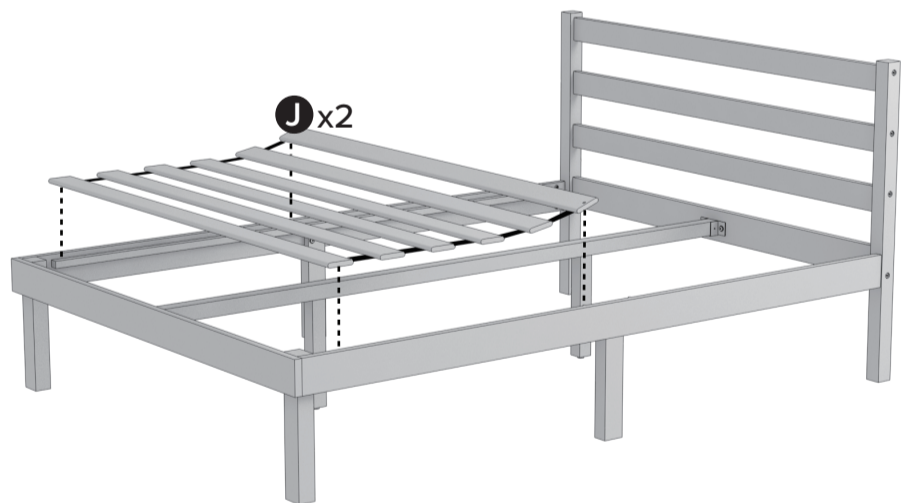

15

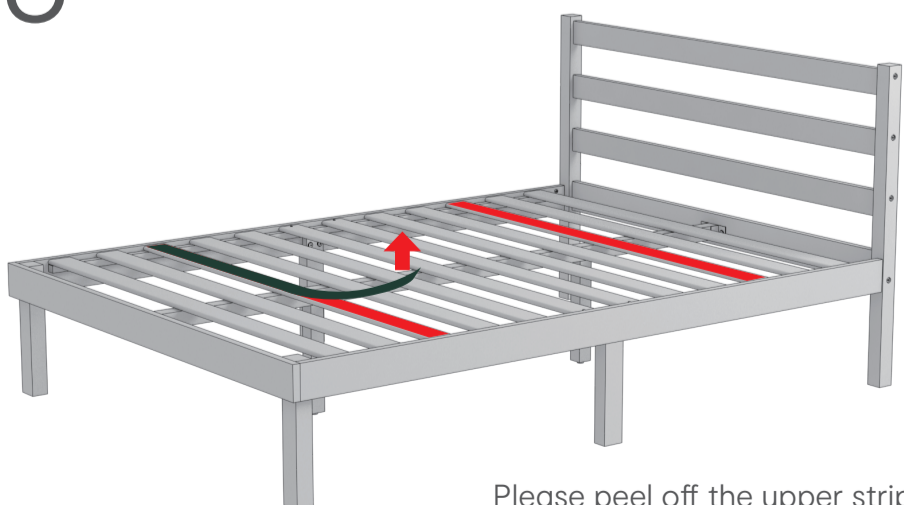

Please peel off the upper strips.
Non-Slip tapes keep your mattress in place.

16

