


anko

Elevated Dog Bed M



Contents

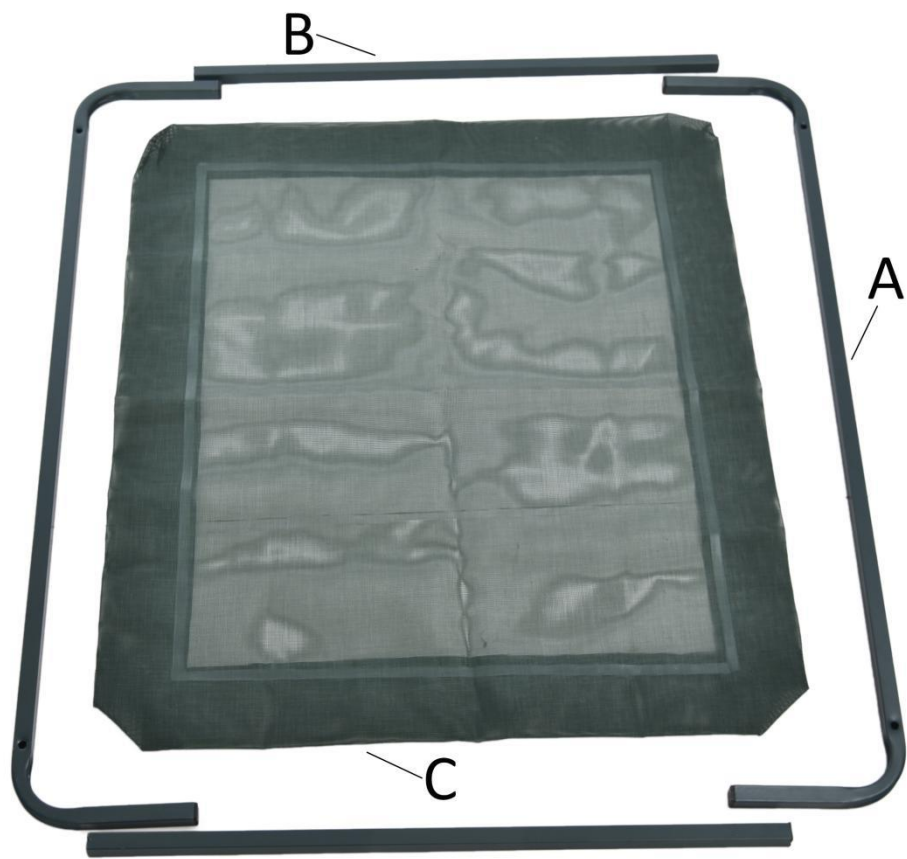

A. Long rail x 2 pcs	B. Short rail x 2 pcs	C. mat x 1 pc	D. Screw x 4 pcs	E. Hex key x 1 pc
----------------------	-----------------------	---------------	------------------	-------------------

Assembly Instructions

Step 1.

Insert the longer side rails (A x 2 pcs) through the pockets on the long side of mat C.

Insert the short side rails (B x 2 pcs) through the pockets on the short side of mat C.



Step 2.

Align the curved end of the shorter side rails with the screw hole on the longer rail.

And hand fasten with provided screws (D x 1 pc) and Hex key E . Don not tighten at this stage.



Step 3.

Repeat step 2 for the remaining screws holes until all four sides are together.

Use the provided hex key E to tighten all screws. Do not over-tighten.



WARNING:

Do not place fabric near a fire or open flame.

For your pet's safety, inspect regularly and remove if damaged.

Ensure the product is to be tighten prior to give it to your pet use.

Maximum loading: 30kg