Brief Introduction

Tips of glue (The picture is only for reference.)

- 1. Liquid glue is used to glue large wood parts and other materials.
- 2. Do not use too much glue in case of longer time to dry. It may also affect the appearance of completed products.



Liquid glue


Tips of assembling

Part number explanation


1. Small parts are included. Children must assemble under the guidance of adults in case of swallowing by mistake.

3-61: Parts in bag No.3, the number of the part is 61. (Only note the part number in the steps.)

- 2. Put the remains back to original bags after taking enough dosage in each step till completed. (In case of missing materials)
- 3. All the dimension in the instruction is shown in millimeter (mm).
- 4. Find the part you need according to material list and the 1:1 part illustration paper (for wood parts). Check its number and size carefully before assembling. See Part Number Explanation at the end of this page.

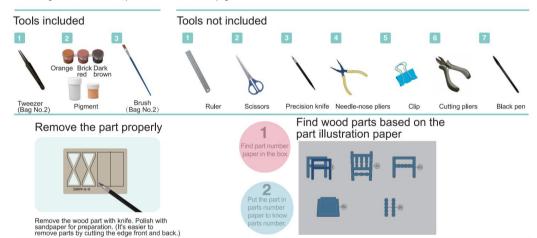



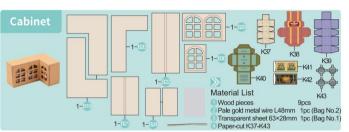






Glue as shown. Glue as shown.




Glue as shown.


Glue as shown.



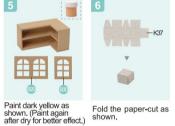

Fold the paper-cut as shown.








Glue as shown.


















Cut the pale gold metal wire and bend as shown.



Glue as shown. Completed.

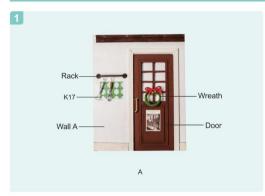

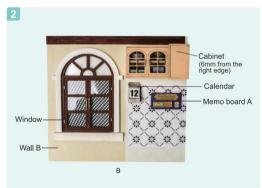


























Completed.



60







Glue the plate as shown.



Rub pink clay into 5 balls in specific size. thickness out of the




Cut 5 slices of 2mm in strawberry strand.



Paint the front and side of C5 white and dry for preparation. (Paint again after dry for better effect.)

Paint them dark brown and glue as shown. (Paint again after dry for better effect.)



again after dry for better effect,)

Paint the front and side of B10,B36 white and dry for preparation. (Paint again after dry for better effect.)




Paint the side of C3 white and dry for preparation. (Paint again after dry for better effect.)



Glue as shown. Completed.







Glue K9 onto M17.




Cut 250mm out of the yellow wire and twine as shown,



Glue as shown.



Glue as shown.




Glue onto the unpainted side of C5. Completed.







Completed.



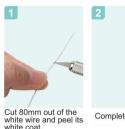




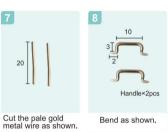
























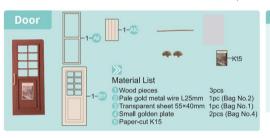



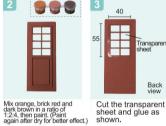









Cut the silver steel wire Insert and glue as of L12mm and bend shown. as shown.





Fold K10 in half and glue as shown.







25

Cut the metal wire

and bend as shown.











66

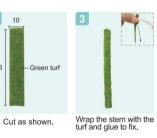


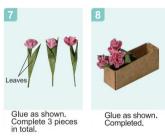









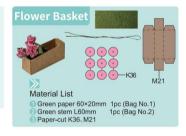











Glue as shown.

Cut the aluminum tape and glue as shown.

Cut 10 pieces of stem. Fill some brown clay.

Glue stem and place as shown.







Fold the paper in half three times and cut six leaves as shown.



Fold and glue.




Cut the stem as




Put three petals onto the stem.




Squeeze petals as



Completed.

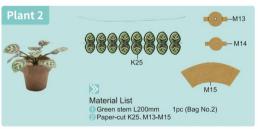





Green paper 75×60mm 1pc (Bag No.1)

Bend "a" as shown.

Clamp one end of "c" Put the flat end in the

center of "a" and trim.

Glue as shown.


Glue as shown.

Glue as shown.

Twine and glue. Complete 4 pieces in


Cut the green paper as shown.

Final effect.

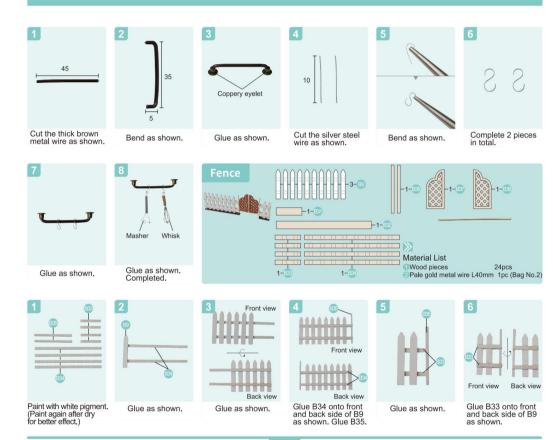








Mix brick red and dark brown in a ratio of 1:1, then paint.(Paint again after dry for better effect.)

sheet according to B40, shown,




Cut the netted sheet Cut the transparent sheet as shown. as shown.




Insert the transparent sheet into the netted sheet and wood board. Glue as shown.






Cut the metal wire and bend as shown.

57



Glue as shown. Completed.

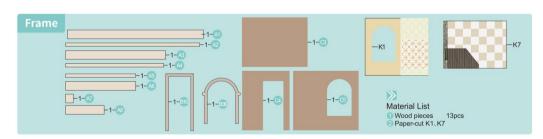




Glue as shown and sprinkle the green powder out of the green paper on it.

Scratch the marks as

Glue as shown.

shown.



Cut 15mm out of the yellow wire, 10 pcs in total.

Paint the marks in

Glue as shown.

white.



Glue as shown. Completed.

Fold M6 and M8 as

Glue as shown.

Completed.






Shape clay as shown in specific size, 2pcs in total. (Clip the clay bag in case of dry.)



Unwind the paper yarn into two strands. Flat Take one strand. Twine around the box as shown. Put M6 upside down into M8.




shown and glue.




Take the other strand. Twine around M7 as shown and glue. Cut the excessive.








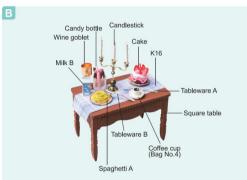





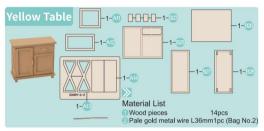










Glue as shown.


Glue as shown.













Cut the pale gold metal wire and bend as shown.













Do the same as in Step 1.

Do the same as in Step 2.


Assembly Sequence










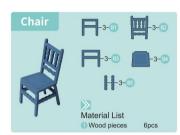












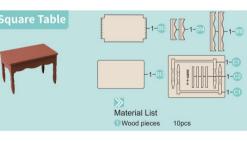



Trim grains slightly by knife for stereoscopic





Glue as shown. The

back side is shown.









Mix orange, brick red and dark brown in a ratio of 1:2:4, then paint. (Paint again after dry for better effect.)

MANUFACTURER:

Robotime C&C (Jiangsu) Co., Ltd.

ADDRESS:

No. 18 Changxing Road, Shuyang, Suqian City, Jiangsu Province, China

Designed by ROBOTIME www.robotime.com

MADE IN CHINA

49.1DGM09.100.C

Rolife

Wonderful Life

Mrs Charlie's Dining Room

- DGM09 -



Pictures for reference only, subject to our existing products.

Please read this manual before assembling.