

# WOOD LOOK BOARD

Key code: 43075904

## FIN INSTALLATION GUIDE


### STEPS

1. Insert 3pcs fins into holes from the bottom of the board.



2. Screw the plastic screws into the fins from the face side, then use the key to fix the fins together with the board firmly.

Note: the four long screws should be used at the upper side of the board, and the two short screws should be used at the bottom side of the board.

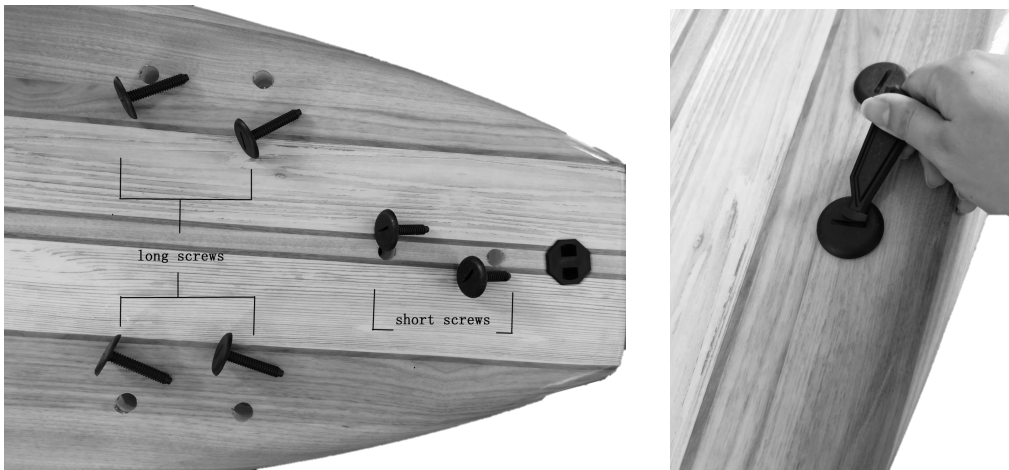

3. Tie the string of handle to the board. Reference below images.



FOR AU/NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

Made in China