



Easy as 1-2-3 Assembly Instruction

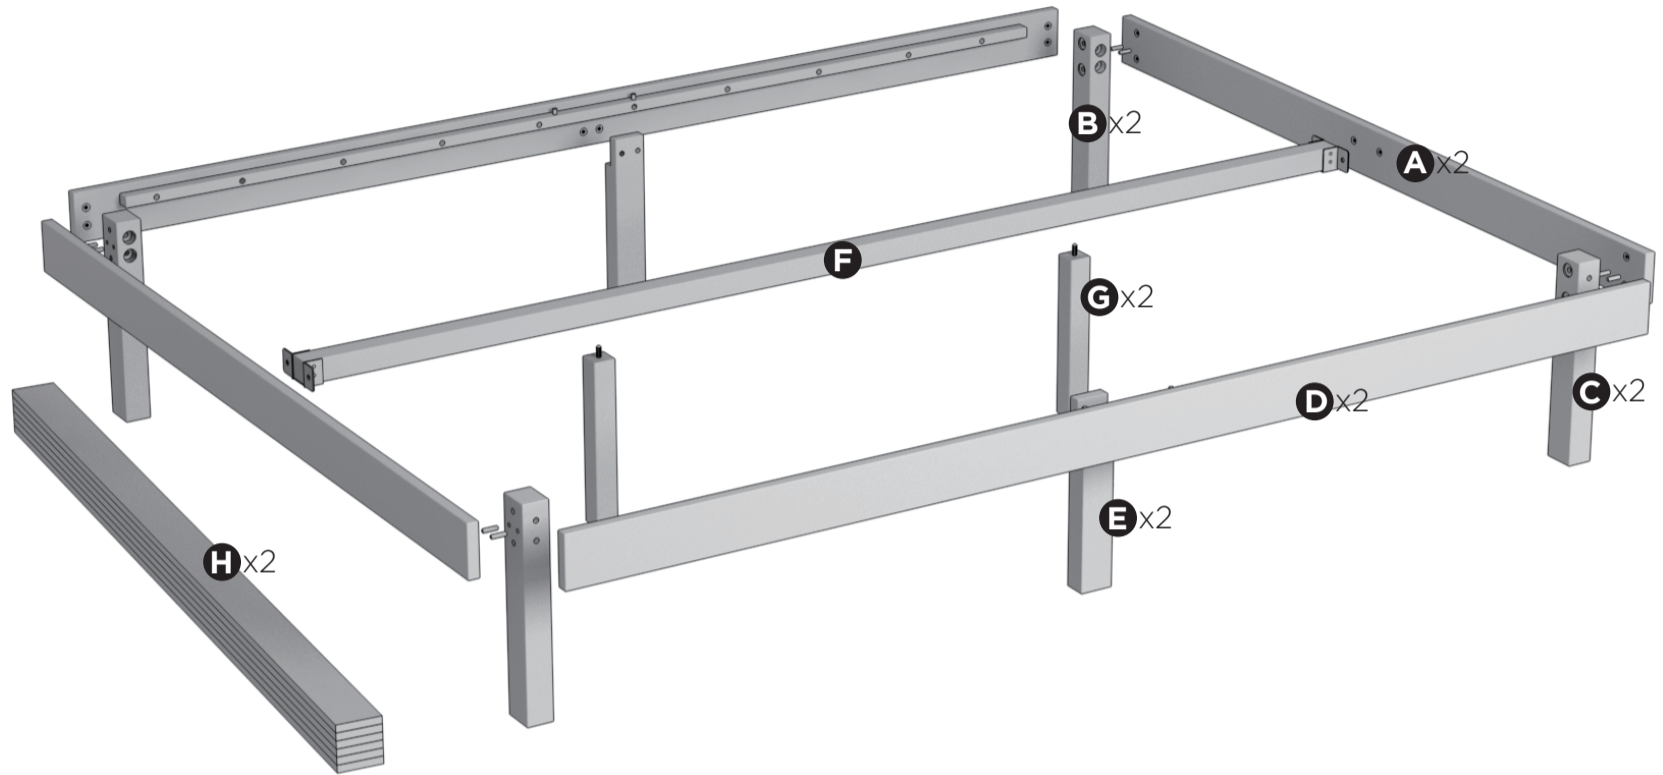

TIMBER BEDFRAME

Components

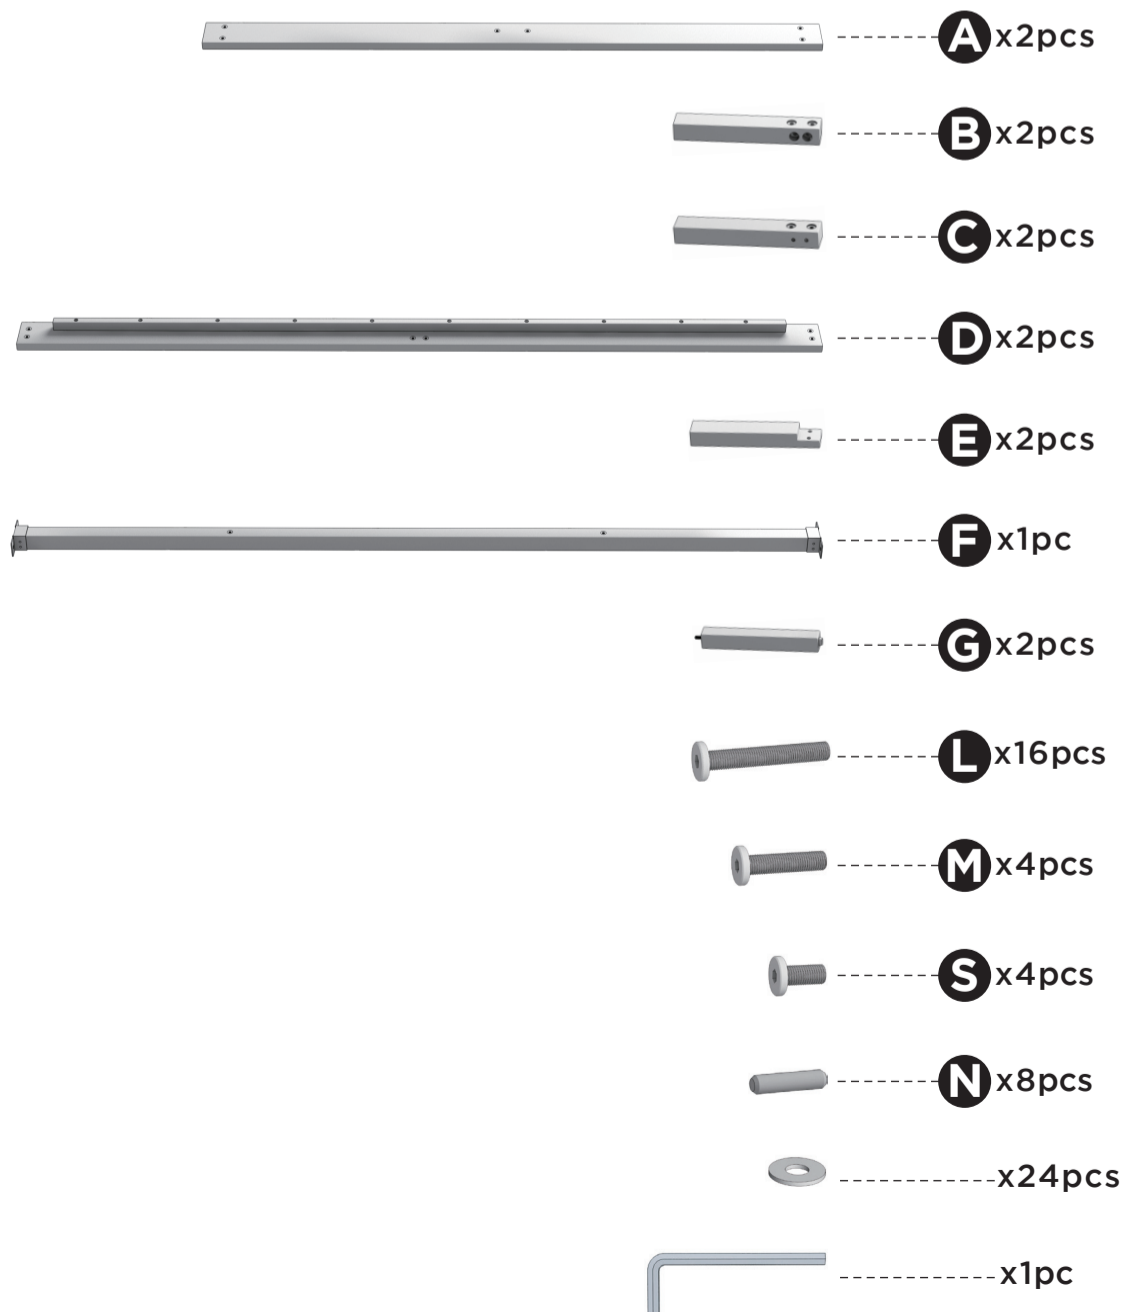

Need more help?

Get in touch so we can help you out.

AU: 7am - 5pm AEST Monday - Sunday (including public holidays)
NZ: 9am - 7pm AEST Monday - Sunday (including public holidays)
1800 051 800

We also have a dedicated phone service for our senior customers and customers with a disability:
1800 442 100

General enquiries:
Store queries and store experience feedback
Product queries

7am - 6pm AEST Monday - Friday (except public holidays)

Love it! Share it! kmart.com.au

