


PARTY DIRECTION SIGNS INSTRUCTION MANUAL



1. All components as per image.

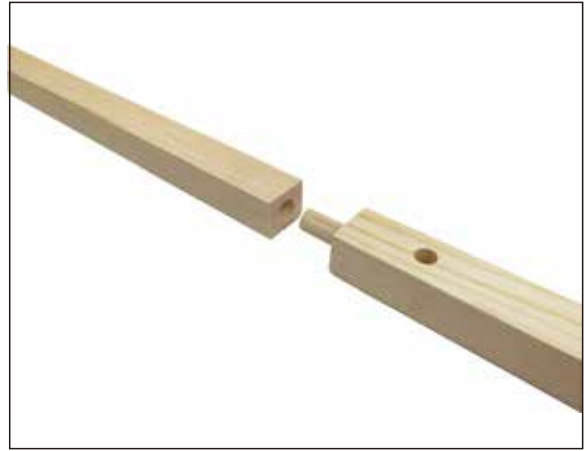

2. Assemble the 3 rods together. Make sure the rib (the raised edge) is aligned with the ridges within the rod tunnel.



3. Assemble the 6 blackboard onto the rods.
Make sure the rib (the raised edge) is aligned with the ridges within the rod tunnel.



4. The assembly is complete, as per image.