

-Sew Line

BEACH CABANA DELUXE STRIPE 1.9M


CARE INSTRUCTIONS

WARNING: PLEASE READ BEFORE USE

THIS CABANA IS DESIGNED AS A PORTABLE AND TEMPORARY STRUCTURE AND SHOULD NOT BE USED AS A PERMANENT STRUCTURE. DO NOT LEAVE THE CABANA UNATTENDED IN RAIN OR WINDY CONDITIONS. DURING PERIODS OF RAIN, ENSURE THAT WATER DOES NOT COLLECT ON THE CANOPY, AS THE WEIGHT OF THE WATER CAN LEAD TO BREAKAGE AND CAUSE THE CABANA TO COLLAPSE.

ALWAYS SECURE THE CABANA FIRMLY TO THE GROUND. ENSURE POLE ANCHOR, SAND POCKETS AND PEGS ARE UTILISED AND REMAIN FIRM. FOR SAFETY PRECAUTIONS, IT IS RECOMMENDED THAT TWO PEOPLE ASSEMBLE AND PACK DOWN THIS CABANA. FABRIC HAS BEEN SELECTED AND TESTED FOR HIGH SHADE LEVELS TO PROVIDE EXCELLENT PROTECTION AGAINST SUNBURN. HOWEVER, WE RECOMMEND THE USE OF CLOTHING AND/OR SUNSCREEN TO ENHANCE PROTECTION, PARTICULARLY ON DAYS OF HIGH UV EXPOSURE.

WARNING: THE UVE95+% RATING IS FOR THE SHADE MATERIAL ONLY. THE AMOUNT OF SUN PROTECTION RECEIVED WILL VARY DEPENDING ON THE CORRECT POSITIONING OF THE SHADE. PLEASE NOTE THE SUGGESTED POSITIONING. REFLECTIVE RAYS CAN ALSO CAUSE SUN BURN. SUNSCREEN SHOULD BE WORN AT ALL TIMES.

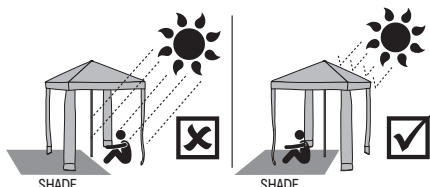

ASSEMBLY INSTRUCTIONS

FIND A LEVEL POSITION ON THE SAND TO PITCH YOUR CABANA.

SCREW THE SAND ANCHOR INTO THE SAND UP TO THE SAND LINE MARKED ON THE ANCHOR. (FIG. 1).

INSERT BASE POLE INTO SAND ANCHOR AND TIGHTEN THE SIDE SCREW ACCORDINGLY.

INSERT THE CANOPY POLE INTO THE BASE POLE AND FASTEN THE POLE CLAMP.






PUSH THE CENTRAL HUB UPWARDS TO THE TOP OF THE POLE TO EXTEND THE ARMS OUTWARDS. (FIG. 2).

SECURE EACH FABRIC UPRIGHT INTO EACH CORNER OF THE CANOPY

FILL EACH SAND POCKET WITH SAND TO SECURE THE CANOPY TO THE GROUND. (FIG. 3).

TIP: IF PITCHING ON UNEVEN SAND CREATE MOUNDS OR DIG HOLES TO HELP LEVEL THE SAND POCKETS AND INCREASE STABILITY.

INSERT SAND PEGS THROUGH THE LOOPS AT THE BASE OF THE CANOPY. (FIG. 4).

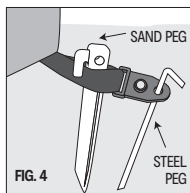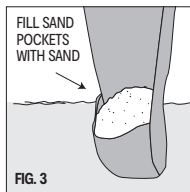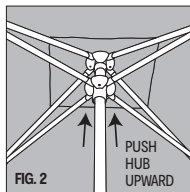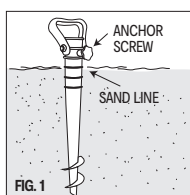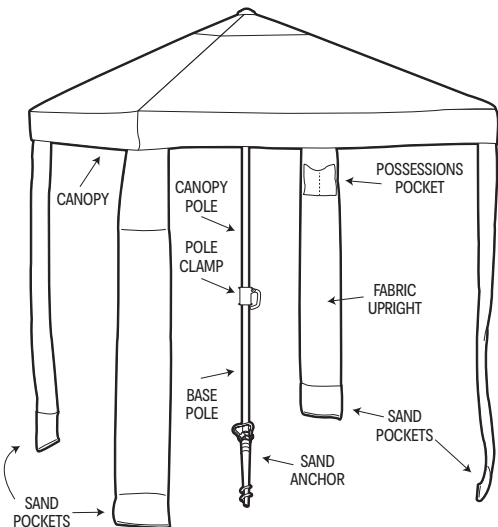

FOR USE ON GRASS:

FOR USE ON GRASS FOLLOW THE SAME INSTRUCTIONS AS ABOVE WITHOUT THE USE OF THE SAND ANCHOR. BE SURE TO SECURE THE BASE POLE FIRMLY INTO THE GROUND BEFORE ASSEMBLING. SECURE THE CABANA USING GROUND OR SAND PEGS PROVIDED.

PATIO UMBRELLA:

REMOVE ALL FOUR FABRIC UPRIGHTS WHEN USING AS A PATIO UMBRELLA.

MATERIALS: CANOPY: POLYESTER, FRAME: STEEL, SAND ANCHOR: POLYPROPYLENE

FIRE PRECAUTIONS: PLEASE REMEMBER THAT YOUR CABANA IS MADE OF FLAMMABLE MATERIALS. THEREFORE, FOLLOW THESE COMMON SENSE RULES:

- A) DO NOT PLACE COOKING, HEATING OR LIGHTING APPLIANCES NEAR CABANA.
- B) DO NOT SMOKE INSIDE CABANA.

MADE IN CHINA

FOR AU/ NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND

THE UVE95+% RATING SHOWN ON THIS PRODUCT TAKES INTO ACCOUNT DIRECT UV PENETRATION OF THE FABRIC, NOT REFLECTED UV RAYS FROM GRASS, WATER OR SAND. WE RECOMMEND THE USE OF MAXIMUM PROTECTION SUNSCREEN WHEN OUTDOORS.

THE SHADE MATERIAL PROVIDES UVE95+%, HOWEVER IT IS IMPORTANT THAT YOU SET UP THE PRODUCT SO THAT SHADE IS MAXIMIZED. IT IS COMMON SENSE THAT IF THERE IS DIRECT SUNLIGHT ON OCCUPANTS THEN THE MATERIAL CANNOT AFFORD YOU ANY PROTECTION.

BATCH MMY

43 - 193 - 783

KMART CABANA SHELTER - NAVY STRIPES PRINT ASSEMBLY INSTRUCTIONS. SEW IN NON WOVEN (TYVEC) LABEL

PRINTED ONTO TYVEC LABEL AND SEWN INTO STORAGE BAG AS SHOWN BELOW



352 MM

160 MM