

120 mm




DUAL WIRELESS CHARGING PAD

User Manual

WEL-23276-A

K: 43-498-932 | T: 70-361-452

1. Device lay-out




Front

Back

Mobile phone place here

Mobile phone place here

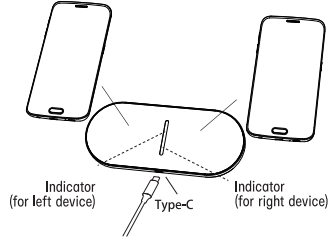

Indicator (for left device)

Type-C

Indicator (for right device)

2. Includes

- (1) Dual wireless charging pad
- (2) USB-A to USB-C charging cable
- (3) User manual

3. Technical specifications

TYPE-C input: 5V = 3A(5W output), 9V = 3A(7.5W/10W output)
 Mobile phone wireless charging output: 5W/7.5W/10W
 (7.5W for iPhone; 10W for Android phones)
 Note: Dual 10W per charger at same time, MAX output 20W
 Transmission distance: ≤6MM
 Charging efficiency: ≤75%

4. Indication light

- (1) Standby: Red-green flashes 2 seconds, the red light stays on.
- (2) On charging: Green light stays on.
- (3) Fully charged: Red light stays on.
- (4) Foreign object detection: Red-green flashes.

5. Operating instruction

- (1) Plug in the charging cable, the wireless charger indicator red light stays on.
- (2) Place your wireless charging enabled device on the charging plate to start charging.
- (3) To ensure efficient charging, a compatible charger is required (sold separately).
- (4) When placed on the mobile phone, the indicator light changes from red to green light; when fully charged, the red light stays on; after you take your mobile phone away from the charging area, the light is red; if there is a metal foreign object placed on the charging area, the indicator light of the device will flash red-green. At this moment, the wireless charging function stops, and the foreign matter needs to be taken away.

Front

118 mm

6. Notes

- (1) Do not disassemble or throw into fire or water, to avoid damage.
- (2) Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
- (3) Do not place too close with magnetic stripe or chip card (ID card, credit cards, etc.) to avoid magnetic failure.
- (4) Please keep the distance at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
- (5) To take care of the children, to ensure that they won't play the wireless charger as a toy.
- (6) Make sure there is no metal foreign object between the charging pad and phone case when charging.

*Some phone cases may affect the charging performance, advise to take it off before charging.
 *This product should be used with minimum 15W wall charger.
 *To achieve all wireless charger outputs, minimum 27W wall charger should be used.

* 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Back