

12 Month Warranty

Thank you for your purchase from Kmart. Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

KEYCODE: 43-144-068

MADE IN CHINA


© KMART AUSTRALIA LIMITED

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

KMART AUSTRALIA - 690 SPRINGVALE ROAD, MULGRAVE, VIC 3170 AUSTRALIA.

KMART NEW ZEALAND - REGIONAL OFFICE C/O KMART PAPATOETOE STORE, HUNTERS PLAZA, GREAT SOUTH ROAD, PAPATOETOE, AUCKLAND, NEW ZEALAND.

Portable UV Steriliser Bag Instruction Manual

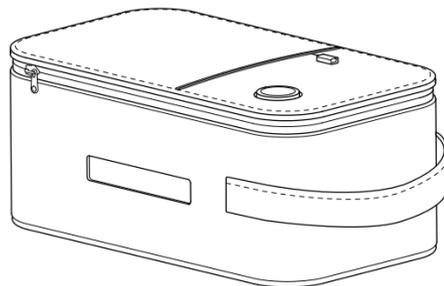

The photos and illustrations shown in this instruction manual are generic. The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

OPERATIONAL FEATURES

1. UV light targets 99.9% of microbes/germs.
2. Easy to use portable unit with one-button control.
3. Auto-off safety function when the lid is opened.
4. Sterilising default time of 10 minutes.
5. Suitable for bottles, teats, soothers, teethingers, small toys and breast pump accessories.

PRODUCT SPECIFICATION



Product Name	Portable UV Steriliser Bag
Size	13cm(H) x 23cm(W) x 12.5cm(D)
Material	Textile fabric, Aluminium mould
Rated voltage	5V DC
Rated power input	3W
Rated current	0.5A
Capacity	3.7L

PACKAGE CONTENTS

Parts Name	Quantity
UV Steriliser Bag	1
Micro USB 2.0 Cable	1

1


PARTS

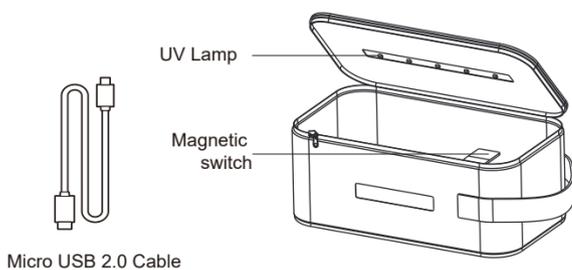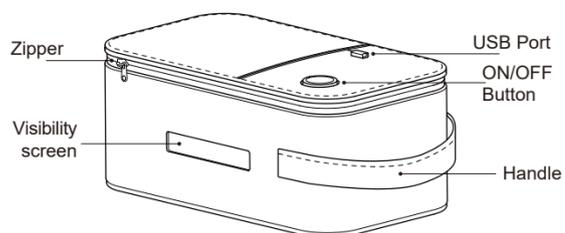

2


OPERATING INSTRUCTIONS

Note: In order to check if the UV Steriliser Bag is working, please view through the frosted visibility screen as it protects you from the UV light. The UV Steriliser Bag will automatically switch off once the lid is opened.

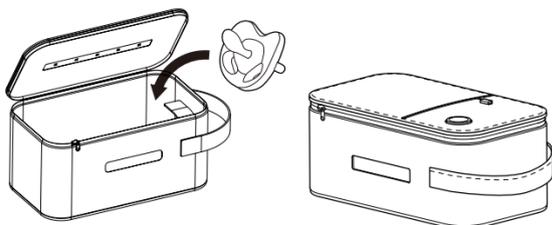

1. Unzip the UV Steriliser Bag and place the items to be sterilised into the bag. Ensure that the items are dry before placing into the bag.

2. Zip up the UV Steriliser Bag ensuring that the magnetic switch and the magnet inside the bag attract, then plug in the power.

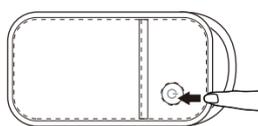

3. Double press the ON/OFF button. The UV Steriliser Bag is in operation when the indicator light is on.

4. Once the sterilising function is completed, the indicator light will turn off.

3

OPERATING NOTES


Note:

- The sterilising default time is 10 minutes. If the UV Steriliser Bag is severely squashed during operation, it may cause the magnetic switch to loosen, resulting in product malfunction.
- In order to minimise product malfunction, do not touch the product whilst it is in operation.
- In order to stop the sterilising function during operation, press the ON/OFF button. The indicator light will turn off.
- Keep away from the magnetic switch and NEVER open the UV Steriliser Bag when it is in operation.

INDICATOR LIGHT INSTRUCTIONS

Mode	Indicator light
Sterilising Completed	Off
Sterilising	On

SCHEMATICS

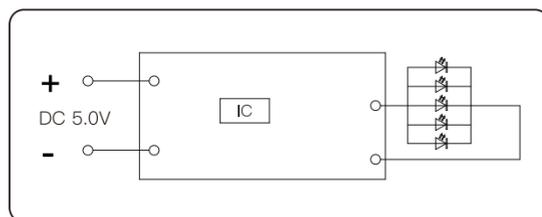

4

TROUBLESHOOTING

Malfunction	● Inspection method / ► Rectification method
The product has been connected to power and the product is not working	● Not properly plugged into the power ► Ensure it is properly connected into the power
	● Cable is not properly connected to the USB port ► Ensure the cable is properly inserted into the USB port
	● Loose magnetic switch ► Ensure that the magnetic switch and the magnet inside the bag attract

CARE INSTRUCTIONS

Surface clean only. Wipe with a damp cloth.

WARNING

1. Before use, check all parts to ensure safety and cleanliness.
2. DO NOT bend the bag or hit it against hard surfaces as this may damage the internal electrical components, resulting in product malfunction.
3. As per mentioned warranty, please contact Kmart Customer Service if the product malfunctions and is in need of repair/replacement.
4. Keep the product away from fire.
5. Keep the product out of the reach of children.
6. Ultraviolet radiation is harmful to people. Never irritate eyes and skin.

5

WARNING

7. Before use, place the UV Steriliser Bag on a flat even surface, and in a horizontal position.
8. Do not immerse the UV Steriliser Bag in water or liquids.
9. Keep away from the magnetic switch and NEVER open the UV Steriliser Bag when it is in operation.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

No trampling

Never irritate eyes and skin

Do not immerse the UV Steriliser Bag in water or liquids.

Keep the product out of the reach of children

6