

INSTRUCTION MANUAL

43161317

[KMT085]

5107_MAN_43161317_SMART WATCH_v3

Artwork Proof Date: 16.03.2022

Number of artboards: 1

PAPER:

80gsm

Bright white uncoated paper

PRINT COLOURS:

BLACK

C:0 M:0
Y:0 K:100

PRINT FINISH:

Double sided

Folded in the centre



CHANGE LOG CREST INTERNAL USE ONLY

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

79mm

139mm

More Information about Smart watch use in Wet Conditions

The smart watch is water-resistant, which means it is rain-proof and splash-proof and can stand up to even the sweatiest workout.

Note: Do not swim with the smart watch. It is not recommended to shower with the Smart watch, though it does not damage the band. Remove the watch periodically to allow your skin to dry and breathe. Whenever you get your strap wet, dry it thoroughly before putting it back on.

Using the function button and the touch screen

Press and hold the function button for 3 seconds to turn the device on, press the function button to wake the device up.

Quick View

When the screen is turned off, turn your wrist towards you and the screen will automatically light up. The watch screen automatically turns off after being idle for a few seconds.

Tap the main dial and slide left, you can find state, heart rate, sleep and physical exercise function quickly.

Warning!

- › Lithium battery inside!
- › Do not open the product!
- › Do not expose to heat, water, moisture or direct sunlight!
- › Only charge with the charging cable supplied with this product!

Please note: All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

The **Anko Bluetooth® Smart Watch** is not a medical-grade device. It is a fitness tracker and a general wellness device used to log, track or trend exercise activity. It does not make any medical claim and is not a suitable replacement of medical device. Please consult your doctor for diagnostic purposes and to track a serious medical condition.

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

v3

anko

Smart Fitness Watch Operating instructions



Please read user manual carefully before use

Includes:

- › Smart fitness watch
- › 2 pin charging cable

43-161-317

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes a lithium polymer battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 10 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electric can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Please remove the Smart watch in case of any leakage or excessive heat from the product to avoid burns or rash.
7. Only charge with the supplied USB cable.
8. Using other accessories than the ones delivered with the product can cause abnormal functionality.
9. Bluetooth wireless technology operates within a range of about 10m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
10. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.



Download App

Scan the following QR code, download and install the App.

Note: Please make sure your Gloryfit App is V2.8.6 or above version.

Pairing


Open the app and set up your profile.

Go to [Device], click [Add a new device]. Choose your device on the scanning list.

You can see the model name "KM43161317" on the App after pairing.

Activate & Charge Device


Make sure power is working normally before initial use. In case the device battery is low, connect the device to the charger. The device will automatically boot up (please connect the magnet USB in normal DC port (5V/150mA) for charging as below.

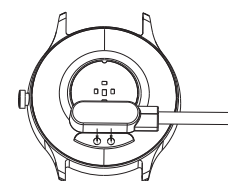

Smart Watch Features

Main dials

There are 5 main dials. Press and hold the touch panel to select.



Physical Exercise

Press and hold the physical exercise screen to start a new training measure recording. 10 sports modes are available. The last training data is displayed on the training screen.

Heart Rate Monitor

Touch the heart rate screen to start measuring your heart rate.



Blood Pressure Monitor

Touch the blood pressure screen to start measuring your blood pressure.



SpO2/Blood Oxygen Monitor

Touch the SpO2 screen to start measuring your SpO2/blood oxygen.

State



The smart watch automatically measures steps, calories and distance. The measured data is synchronized to the App.

Note: The sports data stored on the watch is cleared at midnight every day.



Stopwatch

Touch the stopwatch screen to start timing, and press it again to stop timing.



Weather Forecast

The weather screen displays the weather information of the current day.

The latest weather information from the App can be synchronized to the watch if the watch is connected to the App.



Message Reminder

The watch can synchronize incoming notifications from Twitter, Facebook, WhatsApp, Instagram etc. The last 5 messages can be stored on the watch. Note: You can switch the incoming notifications ON or OFF in the App.



Set up

Set up screen includes power off, reset, about the device and App download QR code.

Note: To be compatible with Google fit app, please make sure

- › Your smart watch app (Gloryfit app) is the latest version, you can check through "System Setting" - "About".
- › Go to the permission setting in Google fit app, turn on all the permission then you can connect the google fit successfully.