

anko

Instructions manual
K: 43527533 | T: 70846270
Model: JLR-79408
Smart Watch-Black



Please read user manual carefully before use
Includes
Smart watch-1
2 pin charging cable-1

Please read the safety instruction carefully before using the product for the first time and keep the instruction for future reference.

Warning!

- Lithium battery inside!
- Do not open the product!
- Do not expose to heat, water, moisture or direct sunlight!
- Only charge with the charging cable supplied with this product!


This is not a medical device. Included health features (heart rate monitor, deep sleep monitor, blood oxygen test & blood pressure test) are for information purposes only and should not be used to diagnose or monitor any medical conditions. Consult with your doctor regarding any health concerns.

More Information about Smart watch use in Wet Conditions


The smart watch is water-resistant, which means it is rain-proof and splash-proof and can stand up to even sweatiest workout.
Not: Do not swim with the Smart watch, though it does not damage the band. Remove the watch periodically to allow your skin to dry and breathe. Whenever you get your strap wet, dry it thoroughly before putting it back on.

The anko Bluetooth® Smart Watch is not a medical grade device. It is a fitness tracker and a general wellness device used to log, track or trend exercise activity. It does not make any medical claim and is not a suitable replacement of medical device. Please consult your doctor for diagnostic purposes and to track a serious medical condition.

Product Spec
Screen Size: 1.65inch*1.38inch
Battery Capacity: 230mAh
Input: DC 5V- 200mA
IP rating: IP68

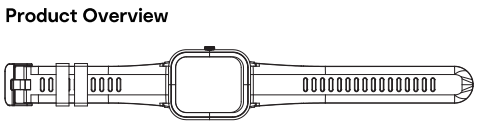

Activate & Charge Device
Make sure power is working normally before initial use. In case the device battery is low, connect the device to the charger. The device will automatically boot up (please connect the magnet USB in normal DC port (5V/200mA) for charging as below.

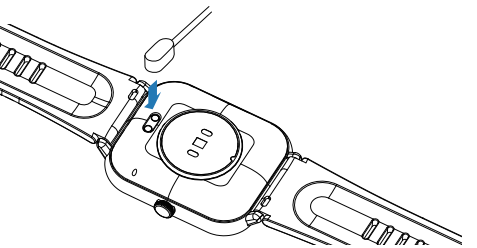

Press and hold the home button for 3 seconds to run the device on or off, press the home button to wake the device up.

Scan code to download Da Fit APP

Download the " Da Fit" APP to your mobile phone and install it, you can directly search for "Da Fit" in the APP store to download, or scan the following QR code to jump to the link to download.



Connecting with mobile
Turn on Bluetooth on mobile phone setting, open the Da Fit APP to add device. Choose your device on the selected device list, click the device to connect. You can see the model name "Anko43527533" on the App after connected.

Quick Start
There are 6 main dials. Press and hold the touch screen until a vibration to select. More dials to be selected after paired with APP.

Slide up on the main interface to view the SMS information. Need open the bar of SMS & App on APP.

Slide down on the main interface can on/off DND mode, adjust the brightness, other settings.

Slide right once to see the 6 most recent function shortcut/icons. Slide right again to see list of functions.

Side left will bring you to the "favorites" page where you can add a maximum of 7 functions as favorites.

When the screen off, turn your wrist towards you to wake up the screen, open/close "Light up" function on APP for this function. The screen automatically turns off after being idle 5 seconds, set "display timeout" on APP to adjust seconds.

Main Functions
Activity: Record today's steps, calories, and workout length. It have 7-day trends on the bottom.
Note: Your movement stats reset to zero at midnight.

Sleep: Record daily report quality and time. Need wear the smart watch when sleeping.
Note: Sleep stats reset to zero at 8:00 pm.

Heart Rate: Click heart rate page to start measuring your heart rate.

Phone Call: It have 3 function: Recent call, Dial pad, find contacts.

Exercise: Click Exercise to start a new sport recording. There are 123 sports modes to be chosen. The main list maximum included 25 sports modes. Walking, Running, Cycling, Skipping, Badminton, Basketball, Football, Swimming, Climbing, Tennis, etc.

Exercise Records: Click to see the exercise records.

Blood Pressure: Click Blood Pressure page to start measuring your blood pressure.

SpO2: Click SpO2 page to start measuring your SpO2.

Stress: Click Stress page to measure the stress data. It helps users to adjust psychologically.

Weather: It could show the weather info of current and tomorrow on the weather page.

Message: The watch can synchronize incoming notifications from Twitter, Facebook, Whatsapp, Instagram etc. The last 8 messages can be stored on the watch.
Note: You can switch the incoming notifications ON or OFF in the APP.

Shutter: After connecting the device, you can remote control the camera on your phone.

Player: After connecting the device, you can remote control the music player on your phone.

Relaxation: Click Relaxation Page and follow instruction to reduce stress and help to fall asleep.

AI Voice: In the state of Bluetooth connection, the watch can wakes up the voice assistant on the phone.

Timer: Click Timer page to count in fixed intervals of time, you can customize the time.

Alarm: Set up the alarm on the APP, the device will vibrate to remind on time.

Stopwatch: Tap the start button on stopwatch page to start timing, and tap the stop button to stop timing.

Cycle Tracking: Menstrual period, ovulation can be set in the client period, ovulation peak reminder and prediction.

Find Phone: Click Find phone page. There will be an alert on your connected phone.

Calculator: Click Calculator page to calculate.

Games: Click Games page to play a game.

Setting: Included Adjust Brightness, Vibrate & Ring, Info (about the device) Off, Password and System.

WARNING Do not dispose of unit in fire or water. >Never attempt to disassemble and reassemble. >Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. >Check with your local authority for recycle advice. >Keep your device and all accessories out of the reach of children and animals. >Small parts may cause choking or serious injury if swallowed. >Avoid exposing your device to very cold or very hot temperatures below 0 °C or above 50 °C). >Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet-liquids can cause serious damage. >Do not handle your device with wet hands.

Safety information:

1. This product is not a toy. Keep it out of reach of Children.
2. This product includes lithium polymer battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degrees Celsius to 50 degrees Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electric can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Please remove the Smart watch in case of any leakage or excessive heat from the product to avoid burns or rash.
7. Only charge with the supplied USB cable.
8. Using other accessories than the ones delivered with the product can cause abnormal functionality.
9. Bluetooth wireless technology operates within a range of about 10m (30feet).The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
10. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical device.

12 Month Warranty
Thank you for your purchase.
Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at Kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us