

9. If there is error on display or can not turn off the scale for a long time, please take off the battery for about 3 seconds, then install it again to remove soft-fault. If you can not resolve the problem, please contact your dealer for consultation.
10. Do not use it for commercial purpose.

anko


DIGITAL BATHROOM SCALES

INSTRUCTIONS FOR USE

CE


MODEL NO.:43115785

■ BATTERY

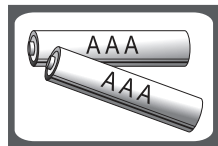

1.5V AAA batteries (Not included)

■ TO REPLACE BATTERY

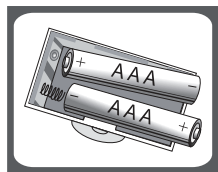


picture

Open battery case cover on the back of scale, if battery case is the type shown in picture,


- A. Take out the used batteries.
- B. Install new battery by putting one side of the battery and then pressing down the other side. Please take note to the polarity.

■ OPERATION

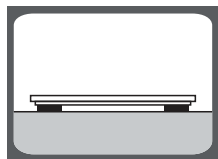


Step 1: To make sure accuracy, place the scale on a hard, flat floor and avoid carpet or soft surface.

Remark: If the scale is one of our "slim" series (indicated on package), make sure to put it on hard surface such as marble, floor tile etc., and make sure no foreign bodies beneath the scale before weighing.

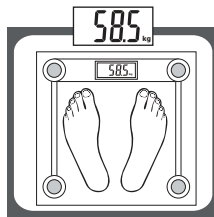

Step 2: Gently step on the scale, then the scale will be automatically turned on. Stand evenly on the scale without moving and wait until your weight shown on display is stable and locked.


■ AUTOMATIC SWITCH OFF

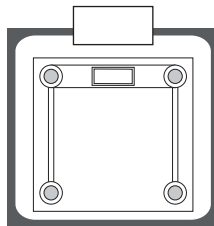

When you step off the scale, it will automatically switch off. Auto shut-off occurs if display shows stable weight reading for approximate 8 seconds.

■ TO CONVERT WEIGHT UNIT


If the scale is with both measuring system of Metric(kilograms) and Imperial (pounds, stones), you can convert weight unit as follow:

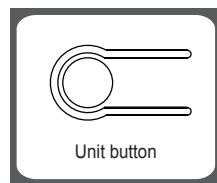

Unit button

if the unit switch is on the back of the scale,

- A. Find unit switch on the back of scale.
- B. Press the unit conversion button when scale is power on, LCD shows current weight unit. Press the button again to convert weight unit.

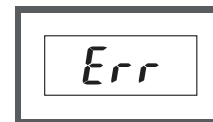

■ OVERLOAD INDICATION

Scale overload. (max. weight capacity is indicated on the scale). Please step off to avoid damage.



■ LOW BATTERY INDICATION

Battery power is low. Please install new battery.



■ RE-TEST

Display "L" when you step off the scale, means this weight reading with error. Please re-test.

⚠ ADVICE FOR USE & CARE

1. The platform will be slippery when it is wet. Keep it dry!
2. Keep standing still during the course of weighing.
3. DO NOT strike, shock or drop the scale.
4. Treat the scale with care as it is a precise instrument.
5. Clean the scale with a damp cloth and avoid water getting inside the scale.
DO NOT use chemical/abrasive cleaning agents.
6. Keep the scale in cool place with dry air.
7. Always keep your scale in horizontal position.
8. If failed to turn on the scale, check whether battery is installed, or battery power is low. Insert or replace new battery.