

anko



Wireless 5w Charging Pad

User Manual

42986928

Features

Charge for any compatibly wireless charging device such as Apple or Samsung smartphone.

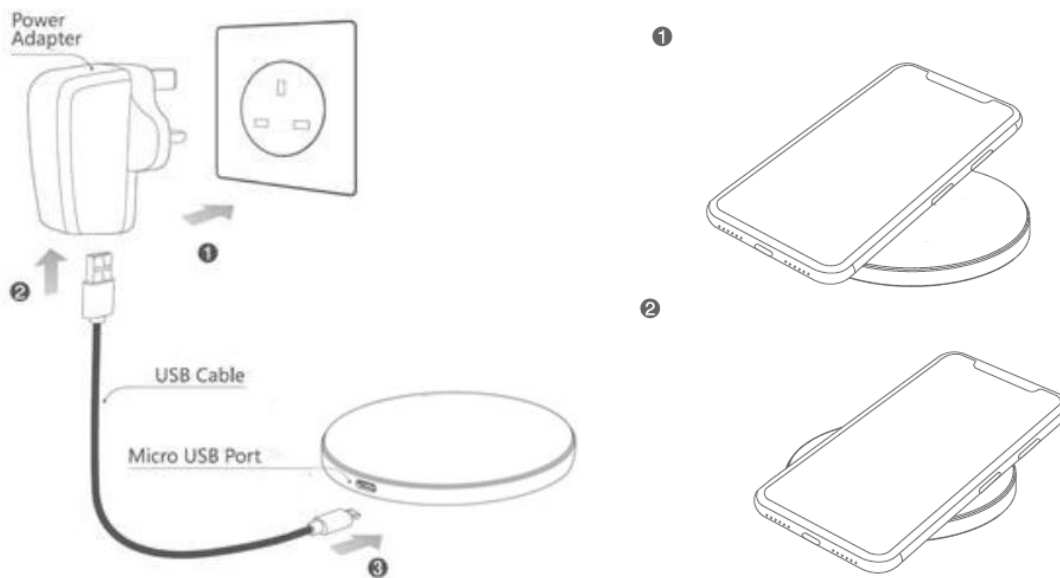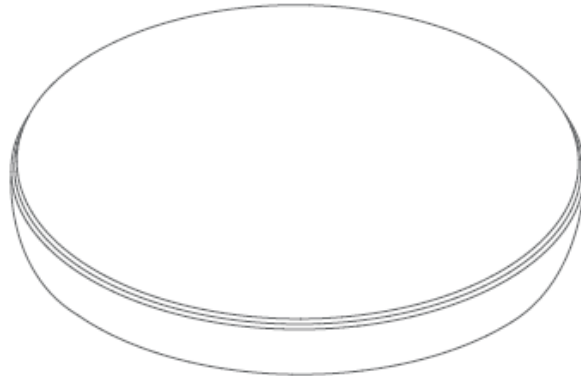

1. Connect A USB power adapter (not included) to socket. 2A or above power adapter will be required.
2. Connect the USB 2.0 cable to the Micro USB port to the pad.
3. The blue & Red LED indicator light will flash three times and turn off into standby mode.
4. Place your wireless charging supported device on the wireless charging pad to start charge.
5. To achieve fast wireless charging, a QuickCharge 2.0 or above USB power adapter will be required.

Indicator light identification:

Color of indicator	Working status
Off	No power connected& Standby mode
Blue	Wireless Charging & Fully charged
Red Flashing (Error detected)	<ul style="list-style-type: none">• Power too low for charging (less than 5V/2A)• A metal object detected on wireless charging area.

● Notes:

1. Do not disassemble or throw into fire or water, to avoid damage.
2. Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
3. Do not place too close with magnetic stripe or chip card (ID card, credit cards, etc.) to avoid magnetic failure.
4. Please keep the distance at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
5. To take care of the children, to ensure that they won't play the wireless charger as a toy
6. Some phone case may affect the charging performance. Ensure there is no any metal object between your phone cases or try to take it off before charging.

Specification:

Input: DC 5V, 1.5A

Output: 5W

Charging distance: ≤6mm

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.